

705-L260C0-07

Warning

Operating frequency:433.05 MHz - 434.79 MHz (only receive)

Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states. For more information of DoC, Please click this web link [https://www.godox.com/DOC/Godox\\_LEDP260\\_Series\\_DOC.pdf](https://www.godox.com/DOC/Godox_LEDP260_Series_DOC.pdf).

The device complies with RF specifications when the device used at 0mm from your body.

合格证

QC PASS

深圳市神牛摄影器材有限公司

地址: 深圳市宝安区福海街道塘尾社区耀川工业区厂房2栋

电话: 0755-29609320(8062) 传真: 0755-25723423 邮箱: godox@godox.com

GODOX Photo Equipment Co., Ltd.

Add: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District,

Shenzhen, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423 E-mail: godox@godox.com

godox.com

Made in China



Godox

LED摄影灯  
LED VIDEO LIGHT

LEDP260C



使用手册

Instruction Manual

## 一、前言

感谢您购买神牛产品!

LEDP260C摄影灯(色温3300K~5600K)非常适用于微距拍摄、婚庆拍摄、采访布光、静物拍摄以及视频拍摄等。亮度高,照幅广,光效柔和,色温精准。

主要特点:

 
- 256颗高亮度灯珠,锂电池或DC供电
- 433MHz无线6组16频道分组控制
- 无线调节各组亮度或色温
- 专用可拆卸手柄和适配器
- 大液晶屏,参数自动保存
- 适和各种场合拍摄补光

## 二、注意事项

- ⚠ 请勿将摄影灯放置在高温、高湿的地方。
- ⚠ 请勿用湿手接触产品,亦不可将产品浸入水中或暴露于雨中。
- ⚠ 此机有温度保护功能,当温度过高时进入保护状态,当温度降低后恢复正常。
- ⚠ 使用电池的注意事项:
  - 切勿将电池投入火中或加热升温。
  - 当电量用尽时,电池容易漏液。所以为了避免产品受损,请在长期不使用本产品或电量用尽时取出电池。
  - 如果受损电池中的液体接触到皮肤或衣服,请立即用大量清水冲洗。

## 三、部件

### • 主机

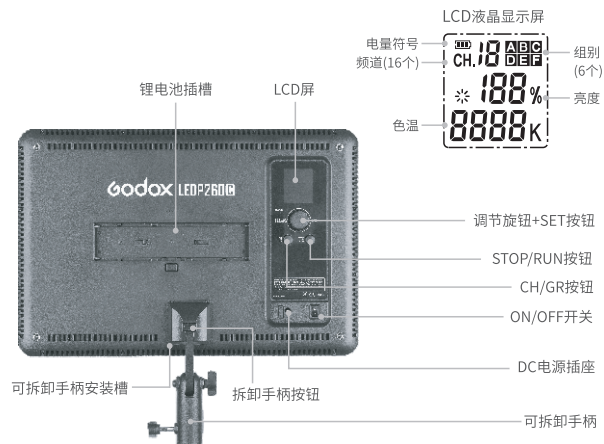

## 四、电源管理

 
### 1. 供电方式

LEDP260C摄影灯有2种供电方式：



- 锂电池供电：

选择2节SONY 锂电池NP-F970（需自行购买），分别放置于锂电池插槽内。

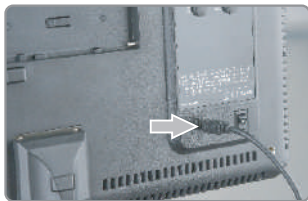

- 直流电源供电：


请选择13~16.8V电源适配器（标配），与DC电源插座连接。

注：

- 使用锂电池供电时，LCD显示当前剩余电量。当电量符号闪烁时，表示锂电池电量极低。为了防止锂电池LED灯自动强行熄灭，请及时对锂电池充电后再使用。

### 2. 安装锂电

 
- 关闭电源开关。
- 将锂电池带插孔端对准摄影灯锂电池插槽正负极触点，并推进卡紧。
- 打开电源开关即可。
- 使用完毕，请关闭电源开关。

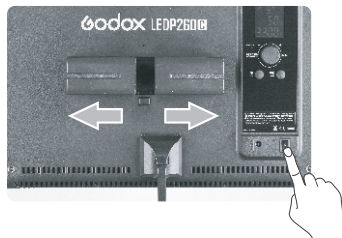

## 五、使用摄影灯


### 1. 手持使用（见图）

 - 按住拆卸手柄按钮，将可拆卸手柄安装到手柄安装槽。

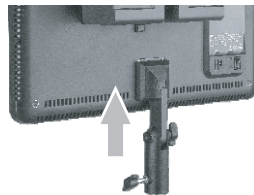

### 2. 灯架使用（见图）

 
- 转动灯架固定旋钮至最高点，将摄影灯固定在灯架上。
- 扭紧灯架固定旋钮。

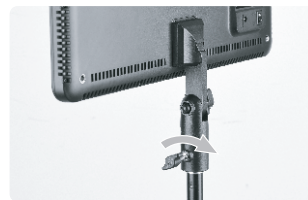

## 六、操作说明

### 1. 开始使用摄影灯(见图)

 - 插入锂电池或者DC电源。
- 按ON/OFF按钮, 摄影灯开始工作。
- 按STOP/RUN开关, 控制摄影灯点亮和关闭。
- LCD显示主机当前信息。

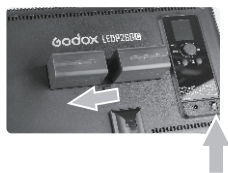

### 2. 亮度/色温调节

#### 亮度调节

- 在常态时, 旋转主机上的调节旋钮可对亮度进行调整;

| 型号             | 色温                | 亮度范围     |
|----------------|-------------------|----------|
| 变色版(LED P260C) | 3300K~5600K ±300K | 10%~100% |

#### 色温调节

- 在常态时, 按旋钮上的SET按钮1次, 此时色温值闪烁, 旋转调节旋钮可对色温调整;

| 型号             | 色温显示范围      |
|----------------|-------------|
| 变色版(LED P260C) | 3300K~5600K |

### 3. 无线远程控制

 
- 本产品具备无线遥控功能, 使用 433MHz 无线技术, 无视角限制, 距离远, 可同时分别控制 6 个 LED 灯。16 组通道频率, 抗干扰强。使用前请把 LED 主机和遥控器的频道与组别调至一致。

#### 主机频道/组别调整

- 在常态时, 按CH/GR按钮, 此时组别闪烁, 旋转调节旋钮可选择组别(A~F)。
- 在常态时, 按CH/GR按钮2次, 此时频道闪烁, 旋转调节旋钮可选择频道(1~16)。

注: 主机在开机状态下才可以接收无线信号。

主机  
LCD液晶显示屏



## 七、标配物品



电源适配器 \*1



可拆卸手柄 \*1



LED摄影灯 \*1

## 八、产品参数

| LED灯          | 变色版LED P260C  |
|---------------|---|
| 锂电池供电         | 7.4V锂电池 (NP-F970接口)(需另购)                                    |
| DC电源供电        | 13-16.8V  |
| 功率            | 最大30W   |
| 色温            | 3300K~5600K±300K  |
| 频道            | 16个   |
| 组别            | 6组(A, B, C, D, E, F)  |
| 100%光照度 (LUX) | 2050 (0.5米/4500K)<br>2050 (0.5米/3300K)<br>2200 (0.5米/5600K) |
| 显色指数          | >95   |
| TLCI          | ≥94   |
| 调光范围          | 3300K~5600K :10%~100%                                       |
| 灯珠数量          | 5600K: 128个<br>3300K: 128个                                  |
| 工作环境温度        | +10~40°C  |
| 产品尺寸          | 360mm*240mm*27mm  |
| 净重            | 917g  |

设计和规格如有变更, 恕不另行通知。

# Foreword

Thank you for purchasing this Godox Product!

This **LEDP260C** video light (color temperature 3300K~5600K) is excellent for macrophotography, product shooting, photojournalistic and video recording, etc.

The LED Light provides high brightness, a wide spectrum, soft light and accurate color temperature.

### Features:

 
- 256-LED-bulbs panel is lithium-ion or DC powered
- Wireless 433MHz grouping system (6 groups & 16 channels)
- Wirelessly adjust brightness or color temperature
- Include a remote control, a detachable handle and AC adapter
- Large-sized LCD panel. Settings auto saved
- Fits almost any occasions

## For your safety

- ⚠ Do not place in high temperature or high humidity conditions.
- ⚠ If this product overheats, it will cease operation and resume working after cooling down. This is due to the built-in overtemperature protection.
- ⚠ Do not handle with wet hands, immerse in water, or expose to rain.
- ⚠ Observe precautions when handling batteries:
  - Do not mix new and used batteries or batteries of different types.
  - Do not put batteries into a fire or apply direct heat to it.
  - Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove batteries out when the product will not be used for a long time or when batteries run out of charge.
  - Should liquid from batteries come into contact with skin or clothing, rinse immediately with fresh water.

## Parts

### • Body

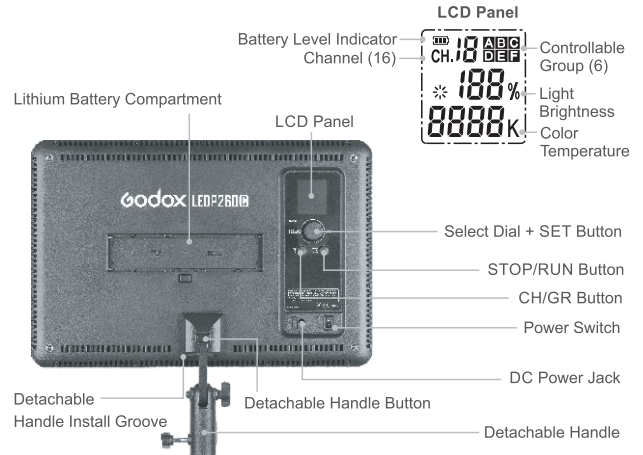

## What's in the Box of LEDP260C?



LED Video Light \*1



Detachable Handle\*1



AC Adapter \*1

 
## Power Management

### 1. Power Supply

Two power supply modes are available:



- **Using lithium battery:** Put two SONY NP-F970 model lithium batteries (purchased separately) into the battery compartment separately.

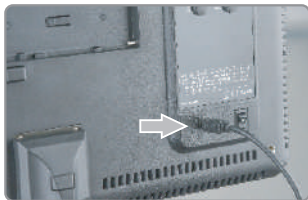

- **Using DC power jack:** This light can be powered by DC power supply. Use a 13~16.8V adapter (included) to connect the light with the DC power jack.

#### Note:

- When using lithium battery, the Battery Level Indicator is displayed on the LCD panel. When the indicator blinks, the lithium battery power is low. Please recharge it immediately before usage in order to avoid forceful auto off.

### 2. Installing Lithium Battery

 
- Turn the Power Switch off.
- Target the socket of the lithium battery towards the "+" "-" contacts of the Battery Compartment. Push the battery in until it locks.
- Power the light on.
- After using the light, please power it off.



## Using the Video Light


### 1. By the Handle

- Install the Detachable Handle into the Handle Install Groove.

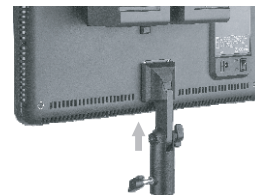

### 2. On the Light Stand

 - Screw the Light Stand Locking Ring to the highest point and install the video light.
- Tighten the Light Stand Locking Ring.

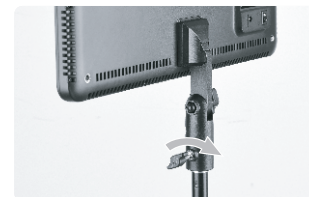

# Operation

## 1. Before Usage

- Insert the lithium battery or connect the light with the DC power supply.
- Switch the power on, the video light giving out light.
- Press the STOP/RUN Button to light up and shut down the LED lights.
- LCD panel shows the information.



## 2. Light Brightness/Color Temperature Adjustment

### Adjusting Light Brightness

- Turn the select dial to adjust the light brightness.

| Model    | Temperature       | Light Brightness Range |
|----------|-------------------|------------------------|
| LEDP260C | 3300K~5600K ±300K | 10%~100%               |

### Adjusting Color Temperature

 
- Press the SET button once and the color temperature icon blinks.
- Turn the select dial to adjust color temperature.

| Model    | Color temperature range |
|----------|-------------------------|
| LEDP260C | 3300K~5600K             |

## 3. Wireless Remote Control

- With 433 MHz wireless system, this product has remote grouping and control function. Up to 6 groups of LED light can be controlled. 16 channels are available with strong anti-interference capability.

LED Video Light



Please set the channels and groups of LED video light to the same as those of remote control before usage.

### Adjusting Channel/Group of the LED Video Light

- Press the **CH/GR** button and the group icon blinks. Turn the select dial to choose a group ID (A to F).
- Press the **CH/GR** button twice and the channel icon blinks. Turn the select dial to choose a channel ID (1 to 16).

Note: The wireless signal can be received only when the LED light is power on.

# Technical Data:

| LED Video Light        | Changeable Version LEDP260C                               |
|------------------------|---|
| Lithium Battery        | 7.4V Lithium Battery (SONY NP-F970 model lithium battery) |
| DC Power Supply        | 13-16.8V  |
| Power                  | Max. 30W  |
| Color Temperature      | 3300K~5600K±300K  |
| Channel                | 16  |
| Group                  | 6 groups (A, B, C, D, E, F)                               |
| Brightness (LUX)       | 2050 (0.5 m/4500K)  |
|                        | 2050 (0.5 m/3300K)  |
|                        | 2200 (0.5 m/5600K)  |
| Color Rendering Index  | >95   |
| TLCI                   | ≥94   |
| Light Brightness Range | 3300K~5600K: 10%~100%                                     |
| LED Beads Quantity     | 5600K: 128  |
|                        | 3300K: 128  |
| Operation Temperature  | -10~40°C  |
| Dimension              | 360mm*240mm*27mm  |
| Net Weight             | 917g  |

\* Product design and specifications are subject to change without notice.

# FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# 产品保修

尊敬的用户，本保修卡是申请保修服务的重要凭证，请您配合销售商填写并妥善保管，谢谢！

|       |      |      |
|-------|------|------|
| 产品信息  | 型号   | 产品条码 |
| 用户信息  | 姓名   | 联系电话 |
|       | 通信地址 |      |
| 销售商信息 | 名称   |      |
|       | 联系电话 |      |
|       | 通信地址 |      |
|       | 销售日期 |      |
| 备注    |      |      |

注：此表应由销售商盖章确认。

## 适用产品

本文件适用于相关《产品保修信息》(见后面说明)所列产品，其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

## 保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算，购买日以购买产品时保修卡登记日期为准。

## 如何获得保修服务

要保修服务，您可直接与产品销售商或授权服务机构联系，也可拨打神牛产品售后服务电话，与我们联系，由我们的服务人员为您安排服务。申请保修时，您应提供有效的保修卡作为保修凭证，方可获得保修。如您不能提供有效的保修卡，则在我们可确认产品或部件属于保修范围的情况下，也可以为您提供保修，但这不作为我们的义务。

## 不适用保修的情况

如产品存在下列情况，本文件项下的保证和服务将不适用 ①产品或部件超过相应保修期；②错误或不当使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合理预期用途使用；不当插拔外接设备；跌落或外力挤压；接触或暴露于不当温度、溶剂、酸碱、水浸或潮湿环境；③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏；④产品或部件原有识别信息被修改变更或删除；⑤无有效保修卡；⑥使用非法授权、非标准或非公开发行的软件造成的故障或损坏；⑦因不可抗力或意外事件造成的故障或损坏；⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色，磨损和消耗，不是保修范围内的故障。

## 产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行：

| 产品类别 | 选件名称                       | 保修期(月) | 保修服务类型 |
|------|----------------------------|--------|--------|
| 部件   | 电路板                        | 12     | 客户送修   |
|      | 电池                         | 3      | 客户送修   |
|      | 充电器、电源线，同步线等带电性能的部件。       | 12     | 客户送修   |
| 其他   | 如闪光管、造型灯泡、外壳、保护罩、锁紧装置、包装等。 | 无      | 无保修    |

神牛产品售后服务电话 0755-29609320-8062



# Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safekeep it. Thank you!

|                      |                |                     |
|----------------------|----------------|---------------------|
| Product Information  | Model          | Product Code Number |
| Customer Information | Name           | Contact Number      |
|                      | Address        |                     |
| Seller Information   | Name           |                     |
|                      | Contact Number |                     |
|                      | Address        |                     |
|                      | Date of Sale   |                     |
| Note:                |                |                     |

Note: This form shall be sealed by the seller.

### Applicable Products

The document applies to the products listed on the **Product Maintenance Information** (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

### Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time. And the purchase date is considered as the date registered on the warranty card when buying the product.

### How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

### Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ①. The product or accessory has expired its warranty period; ②. Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③. Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alteration, addition and detachment; ④. The original identifying information of product or accessory is modified, alternated, or removed; ⑤. No valid warranty card; ⑥. Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦. Breakage or damage caused by force majeure or accident; ⑧. Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

### Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following **Product Maintenance Information**:

| Product Type | Name  | Maintenance Period(month) | Warranty Service Type                         |
|--------------|---|---------------------------|---|
| Parts        | Circuit Board   | 12                        | Customer sends the product to designated site |
|              | Battery   | 3                         | Customer sends the product to designated site |
|              | Electrical parts e.g. battery charger, power cord, sync cable, etc.             | 12                        | Customer sends the product to designated site |
| Other Items  | Flash tube, modeling lamp, lamp body, lamp cover, locking device, package, etc. | No                        | Without warranty                              |

Godox After-sale Service Call **0755-29609320-8062**