

Warning

Operating frequency: 2412.99MHz – 2464.49MHz
Maximum EIRP Power: 2.3dBm

Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states. For more information of DoC, Please click this web link:

https://www.godox.com/DOC/Godox_XPro_Series_DOC.pdf

The device complies with RF specifications when the device used at 0mm from your body.

合格证
QC PASS

深圳市神牛摄影器材有限公司

地址: 深圳市宝安区福海街道塘尾社区耀川工业区厂房2栋
电话: 0755-29609320(8062) 传真: 0755-25723423 邮箱: godox@godox.com

GODOX Photo Equipment Co., Ltd.

Add: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423 E-mail: godox@godox.com

godox.com

705-XPRZN0-00

Made in China



Godox

TTL 无线引闪器

TTL Wireless Flash Trigger

XPro^N



说明书

Instruction Manual

目录

02	前言	无线ID设置
02	警告	模式设置
03	部件	放大功能
	机身	档位值设置
	LCD显示屏	曝光补偿设置
05	电池	频闪参数值设置(输出值、次数、频率)
	安装电池	造型灯设置
	电池电量指示	ZOOM值设置
05	使用引闪器	快门同步设置
	无线同步触发机顶闪光灯	蜂鸣器设置
	无线同步触发外拍闪光灯	同步孔设置
	无线同步触发原厂闪光灯	TCM功能
	无线同步触发影室闪光灯	SHOOT功能设置
	无线触发相机快门	C.Fn自定义功能
	使用2.5mm同步接口触发闪光灯	兼容闪光灯型号
10	设置引闪器	兼容相机列表
	电源开关	产品参数
	自动进入省电模式	恢复出厂设置
	AF对焦辅助灯开关	固件升级
	频道设置	注意事项
		引闪器的保养

X 前言

感谢您购买XProN无线引闪器。

该引闪器适用尼康相机控制神牛闪光灯，可用于操作支持带神牛无线X系统的机顶灯、外拍灯、影室闪光灯；也可以配合X1R-N操作支持尼康原厂闪光灯。多频道控制，信号稳定，反应灵敏，方便摄影师灵活布光，满足多种拍摄需求。该触发器适用Nikon系列带热靴的相机，同时可以连接具有PC接口的相机使用。支持i-TTL闪光和高速闪光同步，最大闪光同步速度达1/8000s。

*：限制条件——相机的最大快门速度为1/8000s

! 警告

- ⚠ 请勿私自拆卸产品，如产品出现故障须由本公司或授权的维修人员进行检查维修。
- ⚠ 请保持干燥：请勿用湿手接触产品，亦不可将产品浸入水中或暴露于雨中。
- ⚠ 请勿让儿童接触本产品。
- ⚠ 请勿在易燃易爆环境中使用。在这些场合下，请注意相关警告标识。
- ⚠ 请勿放置在超过50度的高温环境中。
- ⚠ 若发生任何故障，请立即关闭触发器电源。
- ⚠ 使用电池的注意事项：

只能使用本手册中列出的电池。请勿混用新旧电池或不同类型的电池。

请仔细阅读并遵守由厂商提供的警告或指示。


切勿使电池短路或拆卸电池。

切勿将电池投入火中或加热升温。


切勿试图以反方向安装电池。当电量用尽时，电池容易漏液。所以为了避免产品受损，请在长期不使用本产品或电量用尽时取出电池。

如果受损电池中的液体接触到皮肤或衣服，请立即用大量清水冲洗。


• 机身

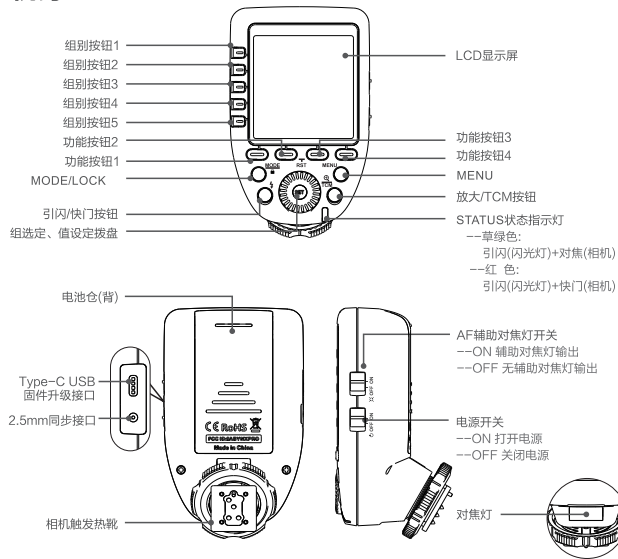

• LCD显示屏

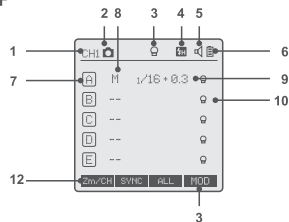

- 1.频道(共32个频道) 2.连接相机 3.造型灯总控 4.高速 5.声音 6.电池电量 7.组别
8.模式 9.功率 10.组别造型灯 11.ZOOM值 12.功能按钮对应图标 13.C.Fn菜单 14.版本号

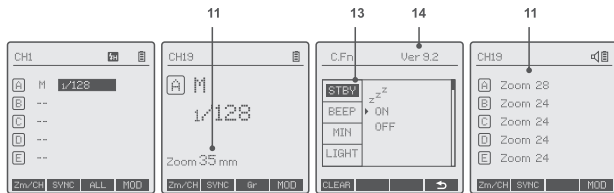

(1)多组显示

(2)单组显示

(3)菜单显示

(4)多组ZOOM显示

电池

• 安装电池

滑开引闪器背面的电池盒盖，根据电池盒内的正负极指示，分别装入2节AA电池（需另购）。

• 电池电量指示

使用时请查看LCD屏幕上电池图标，即可随时掌握电量状态。

LCD屏电量符号显示	意义
3格	满电
2格	中电
1格	低电
边框	电量少，请及时更换电池。
闪烁	< 2.5V电量即将用尽(此时请更换电池，否则在距离较远时会出现漏闪或不闪现象)。

* 此电池电量指示只对应AA碱性电池；镍氢电池电压偏低，请勿参考此表格。



使用引闪器


• 无线同步触发机顶闪光灯

使用方法以TT685N为例：

- 1.1 关闭相机电源，将引闪器放置于相机热靴插座上，打开引闪器电源开关和相机电源。
- 1.2 长按<Zm/CH>按钮设置频道、设置组别、模式和参数。(详情请见“设置引闪器”)。

使用引闪器

- 1.3 打开机顶闪光灯电源，按<Zm>无线设置按钮，令屏幕显示<(P)>无线图标和<SLAVE>从属单元图标，按<CH>频道设置按钮设置同引闪器相同频道，按<Gr>组别设置按钮设置同引闪器相同组别(注：其他型号机顶闪光灯设置请根据相应的机顶灯使用说明书)。
- 1.4 按下相机快门即可引闪，同时引闪器“状态指示灯”闪亮红色。

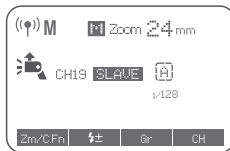

• 无线同步触发外拍闪光灯

使用方法：以AD600B为例：

- 2.1 关闭相机电源，将引闪器放置于相机热靴插座上，打开引闪器电源开关和相机电源。
- 2.2 长按<Zm/CH>按钮设置频道，设置组别，模式和参数(请看设置引闪器详细介绍)。
- 2.3 打开外拍闪光灯电源，按<Zm>无线设置按钮，令屏幕显示<(P)>无线图标，长按<GR/CH>组别频道设置按钮设置同引闪器相同频道，短按<GR/CH>组别设置按钮设置同引闪器相同组别。
(注：其他型号外拍闪光灯设置请根据相应的外拍闪光灯使用说明书)
- 2.4 按下相机快门即可引闪，同时引闪器“状态指示灯”闪亮红色。



使用引闪器

• 无线同步触发原厂机顶闪光灯

使用方法以SB910为例：


- 3.1 关闭相机电源，将引闪器放置于相机热靴插座上，打开引闪器电源开关和相机电源。
- 3.2 长按<Zm/CH>按钮设置频道，设置组别，模式和参数(请看设置引闪器详细介绍)。
- 3.3 原厂机顶闪光灯放置到接收器X1R-N上，接收器按<CH>频道设置按钮设置同引闪器相同频道，按<Gr>组别设置按钮设置同引闪器相同组别。(注：原产闪光灯设置请根据相应的原厂机顶闪光灯使用说明书。)
- 3.4 按下相机快门即可引闪，同时机顶灯与触发器“状态指示灯”闪亮红色。
注：XProN在任何模式下尼康原厂机顶灯都必须设置为i-TTL自动模式。



• 无线同步触发影室闪光灯

使用方法以GS400II为例：

- 4.1 关闭相机电源，将引闪器放置于相机热靴插座上，打开引闪器电源开关和相机电源。
- 4.2 长按<Zm/CH>按钮设置频道，设置组别，模式和参数(请看设置引闪器详细介绍)。

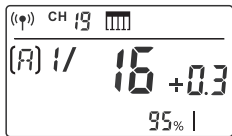

使用引闪器

- 4.3 将影室闪光灯接上电源，打开电源开关，同时按住<GR/CH>和<S1/S2>按键令屏幕显示<((P))>无线图标，长按<GR/CH>组别频道设置按钮设置同引闪器相同频道，短按<GR/CH>组别频道设置按钮设置同引闪器相同组别。

(注：其他型号影室闪光灯设置请根据相应的影室闪光灯使用说明书)

- 4.4 按下相机快门即可引闪，同时影室灯与触发器“状态指示灯”闪亮红色。

注：影室闪光灯最小输出值为1/32，引闪器设置输出值时应设置 $\geq 1/32$ 的数值。影室闪光灯无TTL和频闪功能，故引闪器设置时选M模式才能触发影室闪光灯。

• 无线触发相机快门

使用方法：

- 5.1 关闭相机电源，通过“相机遥控线”连接，一端插入相机的快门插座，另一端插入接收器X1R-N的“快门接口”，打开相机和接收器电源。
- 5.2 长按<Zm/CH>按钮设置频道，设置组别，模式和参数(请看设置引闪器详细介绍)。
- 5.3 接收器按<CH>频道设置按钮设置同引闪器相同频道，按<Gr>组别设置按钮设置同引闪器相同组别。
- 5.4 半按下<⚡>触发按键，进行对焦；全按下<TEST>触发按键，进行拍摄，状态指示灯亮红色，直到按钮松开。



X 使用引闪器

• 使用2.5mm同步接口触发闪光灯

使用方法:

6.1 接收器端连接方式请参考“无线同步触发影室闪光灯”和“无线同步触发相机快门”章节。

6.2 正常方式按下快门。将使用同步接口信号控制闪光。



X 设置引闪器

• 电源开关

把电源开关拨至“ON”即可打开电源，状态指示灯不显示。

注意：长时间不使用时请关闭电源，以免耗电！

• 自动进入省电模式

1. 在停止操作发射器超过90秒之后，系统自动进入待机模式，此时LCD显示消失。

2. 要唤醒系统，可以按任意键。如果安装在Nikon相机热靴上，也可以通过半按相机快门唤醒系统。

注：若不想进入省电模式，按<MENU>按钮进入自定义菜单，选择STBY设置为OFF即可。

• AF对焦辅助灯开关

把AF辅助对焦灯开关拨至“ON”，允许输出AF对焦光线。

相机无法对焦时，对焦灯会自动点亮；对好焦，对焦灯会自动熄灭。

• 频道设置

1. 长按<Zm/CH>按钮，频道值会被选中。

2. 拨动拨盘选择合适的频道值。再次按<SET>按钮，当前频道值被选定。

3. 引闪器共32个频道，可以在1-32频道之间切换。使用前请务必将引闪器和接收端置于相同频道。

• 无线ID设置

为了避免干扰，除了改变无线传输频道还可以通过改变无线ID，主控单元和从控单元无线ID、频道一致才能触发。

按<MENU>按钮进入C.Fn ID，按<SET>按钮选定OFF通道扩展关闭，选01-99其中任意一数。

*注：神牛现有闪光灯暂无无线ID设置功能，请把ID设置在OFF状态。

• 模式设置

- 短按<MODE> 按钮，选中组的模式会改变。
- 当组别设置为5组(A-E):
 - 2.1 多组显示时，按<MODE>按钮，多组模式可以切换为MULTI模式，按组别选择按钮可以对当前组MULTI模式设为打开“ON”或关闭“--”；
 - 2.2 多组显示时，按组别选择按钮或单组模式时按<MODE> 按钮，A B C组的模式可以在TTL/M/-- 模式下顺序切换，D E组只有M/--模式。
- 当组别设置为16组(0-F)时，只有手动模式M。
- 长按<MODE> 按钮2秒在屏幕的下方出现“LOCKED”表示屏幕已被锁定，此时不能再设置任何参数，再长按<MODE> 按钮2秒解锁。



• 放大功能

多组和单组切换：在多组模式下选定组别，按<TCM>按钮，组别放大到单组模式，再按<TCM>按钮返回到多组模式。

• 档位值设置

1. 多组显示时，在M模式下

- 1.1 按组别按钮选中组别，拨动转盘其功率输出值将在Min~ 1/1 之间以0.1或0.3为增量改变，按<SET>键确定该组功率输出值；
- 1.2 按<ALL>全组功率输出值会被选中，拨动转盘其功率输出值将在Min~ 1/1 之间以0.1或0.3 为增量改变，再次按<ALL>确定全组功率输出值。

2. 单组显示时，在M模式下

直接拨动转盘其功率输出值将在Min~ 1/1 之间以0.1或0.3为增量改变。

注：Min. 指M或Multi模式下能设置的最小输出值。根据C.Fn-STEP 的设置值不同分别为 1/128、1/256、1/128(0.1)、1/256(0.1)。在大多数机顶灯上，支持的最小输出是 1/128或1/128(0.1)，无法设置到 1/256或1/256(0.1)。配合神牛公司的AD600Pro等大功率的影室灯，可以调节最小输出到1/256或1/256(0.1)。

• 曝光补偿设置

1. 多组显示时，在TTL模式下

- 1.1 按组别按钮选中组别，拨动转盘其FEC值在 -3 ~ 3 之间以0.3 为增量改变，按<SET>键确定该组FEC值。
- 1.2 按<ALL>全组FEC值会被选中，拨动转盘其FEC值在 -3 ~ 3 之间以0.3 为增量改变，再次按<ALL>确定全组FEC值。

2. 单组显示时，在TTL模式下

直接拨动转盘其FEC值在 -3 ~ 3 之间以0.3 为增量改变。

设置引闪器

• 频闪参数值设置（输出值、次数、频率）

1. 在频闪模式下(TTL和M图标都不会显示)。
2. 三行显示内容分别为功率输出值, Times(闪光次数), Hz(闪光频率)。
3. 拨动转盘其功率输出值将在Min. ~ 1/4 之间以整数档改变。
4. 短按Times按钮, 可以改变闪光次数, 拨动转盘修改设置值。
5. 短按Hz按钮, 可以改变频率, 拨动转盘修改设置值。
6. 直到三项设置值都设置完毕。或在设置任意项目时, 短按<MODE>按钮, 将退出设置状态。无项目闪烁。
7. 在频闪参数设置子菜单中, 无项目闪烁时, 短按<MODE>按钮, 返回主菜单。

*注意: 闪光次数受闪光输出值和频率联合制约, 设置的闪光次数不能超过系统允许的上限值。传输到接收端的次数是实际闪光次数, 同相机的快门设置也相关。



设置引闪器

• 造型灯设置


1. 多组显示时按<MOD>按钮多组造型灯打开或关闭;
2. 多组显示时按组别按钮选中组别或单组显示时, 按<MOD>按钮该组造型灯打开或关闭(注: 目前可以使用单组造型灯开关的影视闪光灯型号如下: GSII、SKII、QSII、QDII、DEII、DP II系列, 外拍灯AD200、AD600升级后可使用此功能。以后新出的含造型灯的闪光灯都能用此项功能)。



• ZOOM值设置

1. 短按<Zm/CH>按钮, 显示屏出现ZOOM值, 选中要更改的组别, 拨动转盘ZOOM值会在AUTO/24-200中改变, 选中需要设定的值再按<Zm/CH>按钮返回主菜单。

注: 闪光灯ZOOM需调整在Auto(A)模式才可响应。

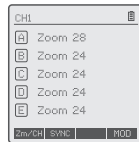

设置引闪器

快门同步设置

1. **高速同步**: 按<SYNC>按钮, 令屏幕显示 **Hi**。

在尼康相机机身设置中, 将快门同步速度设置为1/320秒(自动FP)或1/250秒(自动FP), 转动相机拨盘, 快门速度能设置为1/250s或更高的快门速度, 要确认目前是否正在使用FP高速同步功能, 通过相机取景器检查快门速度即可判断, 如果快门速度为1/250s或者更高, 表示高速同步启动。

2. 后帘快门同步, 在Nikon相机上按住 **⚡**, 旋转主指令拨盘至控制面板中出现 **REAR** 后帘闪光模式, 再设置相机快门。



蜂鸣器设置

按<MENU>按钮进入C.Fn BEEP, 按<SET>按钮选定ON蜂鸣器打开, 选定OFF蜂鸣器关闭, 再按<MENU>按钮返回主菜单。



同步孔设置

1. 按<MENU>按钮进入C.Fn SYNC,按<SET>按钮选定IN或OUT, 再按<MENU>按钮返回主菜单。

1.1 选择IN时, 此接口触发XProN引闪闪光灯。

1.2 选择OUT时, 输出触发信号, 触发其他遥控器和闪光灯。



设置引闪器

TCM功能

TCM转换功能是神牛特有功能:


TTL闪光值转换M档功率值。

1.1 引闪器设置为TTL模式, 连接相机, 按下快门拍摄。

1.2 长按<TCM>按钮, TTL模式下的闪光值转化为M模式功率值(转换显示最小值为设定的Min值)。

1.3 兼容TCM功能的闪光灯请参照

C.Fn自定义功能表(注:请根据自己用的闪光灯进入自定义TCM功能选择相应的机型)。

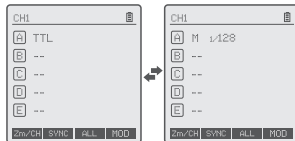

SHOOT功能设置

按<MENU>按钮进入C.Fn SHOOT, 按<SET>按钮选定单拍或多拍, 再按<MENU>按钮返回主菜单。

单拍: 相机拍照时选择单拍, 在M和Multi模式下, 主控单元只对从控单元发送引闪信号, 适合单人拍摄时选用, 优点省电。

群拍: 相机拍照时选择群拍, 主控单元会将参数和引闪信号发送至从控单元, 适合多人拍摄时选用, 此功能耗电快。

APP: 相机拍照时只能发送引闪信号(手机APP控制闪光灯参数)。



设置引闪器

• C.Fn: 设置自定义功能

请对照以下图表本机应用栏, 使用自定义功能来完成设置。

自定义功能符号	功能	设置符号	设置和说明
STBY	睡眠	ON	启动
		OFF	关闭
BEEP	蜂鸣器	ON	启动
		OFF	关闭
STEP	档位	1/128	最小输出为 1/128 (档位跳变为0.3)
		1/256	最小输出为 1/256 (档位跳变为0.3)
		1/128(0.1)	最小输出为 1/128 (档位跳变为0.1)
		1/256(0.1)	最小输出为 1/256 (档位跳变为0.1)
LIGHT	背光点亮时间	12sec	12秒后自动熄灭
		OFF	一直熄灭
		ON	一直点亮
SYNC	同步孔	IN	触发XProN引闪闪光灯
		OUT	输出触发信号, 触发其他遥控器和闪光灯
GROUP	组别	5(A-E)	5组A-E
		16(O-F)	16组(O-F)接收端是影室闪光灯时可选16组, 选16时只有M档可选
LCD	LCD对比度	-3~+3	对比度值可以选择-3到+3之间的整数
SHOOT		单拍	相机拍照时在M&Multi模式下只发送引闪信号
		群拍	相机拍照时发送参数和引闪信号(适合多人拍摄)
	APP	APP	相机拍照时只能发送引闪信号(手机APP控制闪光灯参数)
DIST	引闪距离	0-30M	0-30M引闪
		1-100M	1-100M引闪

兼容闪光灯型号

自定义功能符号	功能	设置符号	设置和说明	
ID	无线ID	OFF	关闭	
		01-99	可以选择01-99任意一个数字(此功能现有闪光灯暂时无法使用)	
TCM	TCM转换功能 	TT685/V860II系列	TTL模式下的闪光值转化为M模式功率值, 混用时以主灯型号为准	
		200j		AD200
		360j		AD360II
		600j		AD600

• 兼容闪光灯型号:

















请对照以下图表本机应用栏, 使用自定义功能来完成设置

发射器	接收器	闪光灯	备注
XProN	--	AD600系列/AD360II系列/AD200/AD400Pro V860II系列/V850II/TT685系列/TT600/TT350N 闪客II系列/QTII/SK II系列/DP II系列/GSII	
	X1R-N	SB910/SB800/SB5000 V860N	市面上兼容尼康相机的机顶灯众多, 无法一一验证
	XTR-16	AD360/AR400	带有神牛无线USB接口的闪光灯
		闪客一代系列/SK一代系列/DP一代系列/ GT/GS一代系列 小精灵	只能引闪
	XTR-16S	V860N V850	

*注: 支持的功能范围: XProN和闪光灯双方都拥有的功能。

X 兼容闪光灯型号

• XT无线系统与X1无线系统的通道关系：

XT-16 (编码开关)								
X1 (显示屏)	CH01	CH02	CH03	CH04	CH05	CH06	CH07	CH08
XT-16 (编码开关)								
X1 (显示屏)	CH09	CH10	CH11	CH12	CH13	CH14	CH15	CH16

X 兼容相机列表

• 本机可兼容以下尼康系列的相机型号：

D5	D4	D60	D70S	D90	D100	D200
D300S	D300	D500	D610	D700	D750	D800
D810	D3100	D3200	D3300	D5000	D5100	D5200
D5300	D7000	D7100				

1. 此表格仅列举目前已测试的相机型号，未涵盖所有尼康系列相机。其他相机型号，用户可自行测试。
2. 本公司保留未来修改此表格内容的权利。

X 产品参数

• 产品参数：

型号	XProN
兼容相机	支持Nikon相机（i-TTL 自动闪光） 支持所有具有 PC 输出出口的相机
供电方式	2*AA 电池
曝光控制	
TTL自动闪光	i-TTL
手动闪光	有
频闪闪光	有
功能	
高速同步	有
后帘同步	有
曝光补偿	有，±3档间以1/3档为增量调节
曝光锁定	有
辅助对焦	有
造型闪光	可以通过触发器控制闪光灯造型闪光
蜂鸣器	可以通过触发器控制闪光灯蜂鸣器
无线快门	接收器端可以通过2.5mm同步接口控制相机拍摄
ZOOM设置	可以通过发射器调节闪光灯焦距值
TCM功能	使TTL拍摄值转换为M输出值
固件更新	通过身上的 Type-C USB口进行固件升级
记忆功能	设置2秒后的参数会自动记忆，重新开机自动恢复

产品参数

型号	XProN
无线闪光	
传输范围（约）	0-100米
内置无线	2.4G频率
调制方式	MSK
频道	32个
无线ID	01-99
组别	16组
其他	
显示屏	宽屏液晶显示，背光开启或关闭
引闪器尺寸/净重	90x58x50mm/80g

恢复出厂设置

同时按住中间两个功能按键2秒，屏幕出现RESET表示已经恢复出厂设置。

固件升级

本机通过USB口可进行固件升级，软件最新公告及说明将会发布在官方网站上。

- 本品出厂不配USB升级线，请另行购买。本产品USB口为Type-C USB接口，请使用Type-C USB线。
- 产品升级固件需要Godox G2程序软件支持，升级固件前请先下载安装“Godox G2固件升级软件”再选择相应的固件文件。
- 由于产品进行固件升级，说明书请以最新电子版为准。

注意事项

1. 如不能正确引闪或拍摄，请检查电池是否正确安装以及是否打开引闪器电源；引闪器是否设置在同一频道；连接线或热靴口是否已正确牢固连接到位；功能模式是否设置正确。
2. 如相机出现只能拍摄不能对焦现象，请检查机身或镜头是否设定为MF手动对焦，请设置为Af自动对焦。
3. 如您的引闪器受到他人干扰引闪或拍摄，改变引闪器的频道设置即可。

神牛2.4G无线漏闪原因及解决办法：

1. **外部环境2.4G信号干扰(如无线基站、2.4Gwifi路由、蓝牙设备等)**
请调节引闪器的频道CH设置(建议+10)，找到无干扰的频道来工作，或者在工作时关闭其他2.4G设备。
2. **请确认闪光灯是否已经回电或者回电速度已经跟上连拍速度(闪光灯就绪指示灯已经亮起)，并且没有处于过热保护或者其他异常状态中**
请下调闪光灯的档位，如是TTL模式可以尝试改为M模式(TTL模式下需要预闪一次)。
3. **是否引闪器和闪光灯距离太近(距离<0.5m)**
请在引闪器上打开“近距离无线模式”：设置C.Fn-DIST为0-30m。
4. **是否引闪器和接收端设备在低电状态**
请更换电池(引闪器电池建议使用1.5V一次性碱性电池)。

引闪器的保养

避免跌落：如果受到强烈碰撞或振动，引闪器可能会发生故障。

保持干燥：本产品是非防水产品，如果将其浸入水中或放置于高湿度的环境中将可能发生故障。内部构造生锈可能会导致无法修理的损害。

避免温度骤变：温度的突变，诸如在寒冷天进出温暖的大楼将可能会使引闪器内部结露。为避免结露，请将引闪器事先装入手提袋或塑料包内，以防温度突变。

远离强磁场：无线电广播发射机等设备产生的强静电或强磁场可能会干扰本产品正常工作。

Contents

- 24 Foreword
- 25 Warning
- 26 Names of Parts
 - Body
 - LCD Panel
- 28 Battery
 - Installing Batteries
 - Battery Level Indication
- 28 Using the Flash Trigger
 - As a Wireless Camera Flash Trigger
 - As a Wireless Outdoor Flash Trigger
 - As a Wireless Original Flash Trigger
 - As a Wireless Studio Flash Trigger
 - As a Wireless Shutter Release Trigger
 - As a Flash Trigger
 - with 2.5mm Sync Cord Jack
- 34 Setting the Flash Trigger
 - Power Switch
 - Automatically Enter Power Saving Mode
 - Power Switch of AF Assist Beam
 - Channel Settings
 - Wireless ID Settings
- Mode Settings
- Magnification Function
- Output Value Settings
- Flash Exposure Compensation Settings
- Multi Flash Settings (Output Value, Times and Frequency)
- Modeling Lamp Settings
- ZOOM Value Settings
- Shutter Sync Settings
- Buzz Settings
- Sync Socket Settings
- TCM Function
- SHOOT Function Settings
- C.Fn: Setting Custom Functions
- 44 Compatible Flash Models
- 45 Compatible Camera Models
- 46 Technical Data
- 47 Restore Factory Settings
- 47 Firmware Upgrade
- 48 Attentions
- 49 Caring for Flash Trigger

X Foreword

Thanks for your purchase of this XProN wireless flash trigger.

This wireless flash trigger is suitable for using Nikon cameras to control Godox flashes with X system e.g. camera flash, outdoor flash, and studio flash. It can also control Nikon original speedlights with the coordination of X1R-N receiver. Featuring multi-channel triggering, stable signal transmission, and sensitive reaction, it gives photographers unparalleled flexibility and control over their strobist setups. The flash trigger applies to hotshoe-mounted Nikon series cameras, as well as the cameras which have PC sync sockets.

With XProN wireless flash trigger, high speed synchronization is available for most of camera flashes in the market which support i-TTL. The max flash synchronization speed is up to 1/8000s*.



*: 1/8000s is achievable when the camera has a max camera shutter speed of 1/8000s.

⚠ Warning

- ⚠ Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center.
- ⚠ Always keep this product dry. Do not use in rain or in damp conditions.
- ⚠ Keep out of reach of children.
- ⚠ Do not use the flash unit in the presence of flammable gas. In certain circumstance, please pay attention to the relevant warnings.
- ⚠ Do not leave or store the product if the ambient temperature reads over 50°C.
- ⚠ Turn off the flash trigger immediately in the event of malfunction.
- ⚠ Observe precautions when handling batteries
 - Use only batteries listed in this manual. Do not use old and new batteries or batteries of different types at the same time.
 - Read and follow all warnings and instructions provided by the manufacturer.
 - Batteries cannot be short-circuited or disassembled.
 - Do not put batteries into a fire or apply direct heat to them.
 - Do not attempt to insert batteries upside down or backwards.
 - Batteries are prone to leakage when fully discharged. To avoid damage to the product, be sure to remove batteries when the product is not used for a long time or when batteries run out of charge.
 - Should liquid from the batteries come into contact with skin or clothing, rinse immediately with fresh water.


X Names of Parts

• Body

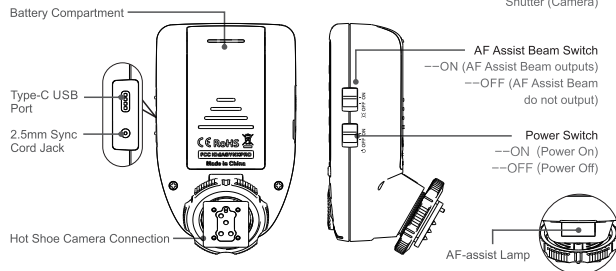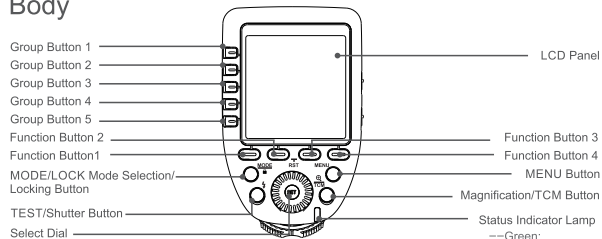

X Names of Parts

• LCD Panel

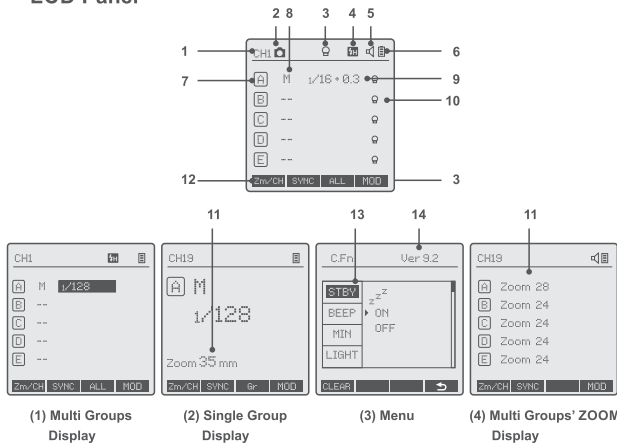

1. Channel (32)
2. Camera Connection
3. Modeling Lamp Master Control
4. High-Speed
5. Sound
6. Battery Level Indication
7. Group
8. Mode
9. Power
10. Group's Modeling Lamp
11. ZOOM Value
12. Icons of Function Button
13. C.Fn Menu
14. Version

X Battery


AA alkaline batteries are recommended.

• Installing Batteries

As shown in the illustration, slide the battery compartment lid of the flash trigger and insert two AA batteries separately.

• Battery Level Indication

Check the battery level indication on the LCD panel to see the remaining battery level during the usage.

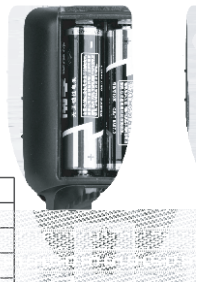

Battery Level Indication	Meaning
3 grids	Full
2 grids	Middle
1 grid	Low
Blank grid	Low battery, please replace it.
Blinking	< 2.5V The battery level is going to be used out immediately (please replace new batteries, as low power leads to no flash or flash missing in case of long distance).

The battery indication only refers to AA alkaline batteries. As the voltage of NI-MH battery tends to be low, please do not refer to this chart.

X Using the Flash Trigger

1. As a Wireless Camera Flash Trigger

Take TT685N as an example:

- 1.1 Turn off the camera and mount the transmitter on camera hotshoe. Then, power on the flash trigger and the camera.

Using the Flash Trigger

- 1.2 Long press the <Zm/CH> button to set channel, group, mode and parameters (refers to the contents of "Setting the Flash Trigger").
- 1.3 Turn on the camera flash, press the <Z> wireless setting button and the <(P)> wireless icon and <SLAVE> slave unit icon will be displayed on the LCD panel. Press the <CH> button to set the same channel to the flash trigger, and press the <Gr> button to set the same group to the flash trigger (Note: please refer to the relevant instruction manual when setting the camera flashes of other models).
- 1.4 Press the camera shutter to trigger and the status lamp of the flash trigger turns red synchronously.



2. As a Wireless Outdoor Flash Trigger

Take AD600B as an example:

- 2.1 Turn off the camera and mount the transmitter on camera hotshoe. Then, power on the flash trigger and the camera.
- 2.2 Long press the <Zm/CH> button to set channel, group, mode and parameters (refers to the contents of "Setting the Flash Trigger").
- 2.3 Power on the outdoor flash and press the <Z> wireless setting button and the <(P)> wireless icon will be displayed on the LCD panel. Long press the



Using the Flash Trigger

<GR/CH> button to set the same channel to the flash trigger, and short press the <GR/CH> button to set the same group to the flash trigger (Note: please refer to the relevant instruction manual when setting the outdoor flashes of other models).

- 2.4 Press the camera shutter to trigger and the status lamp of the flash trigger turns red synchronously.

3. As a Wireless Original Flash Trigger

Take SB910 as an example:

- 3.1 Turn off the camera and mount the transmitter on camera hotshoe. Then, power on the flash trigger and the camera.
- 3.2 Long press the <Zm/CH> button to set channel, group, mode and parameters (refers to the contents of "Setting the Flash Trigger").
- 3.3 Attach the original flash to the X1R-C receiver. Press the <CH> button on the receiver to set the same channel to the flash trigger, and press the <Gr> button to set the same group to the flash trigger (Note: please refer to the relevant instruction manual when setting the original camera flashes).
- 3.4 Press the camera shutter to trigger. And the status lamp of the camera flash and the flash trigger both turn red synchronously.

Note: Nikon original speedlights shall be set to i-TTL mode regardless of XProN's mode.




X Using the Flash Trigger

4. As a Wireless Studio Flash Trigger

Take GS400II as an example:

- 4.1 Turn off the camera and mount the transmitter on camera hotshoe. Then, power on the flash trigger and the camera.
- 4.2 Long press the <Zm/CH> button to set channel, group, mode and parameters (refers to the contents of "Setting the Flash Trigger").
- 4.3 Connect the studio flash to power source and power it on. Synchronously press down the <GR/CH> button and <S1/S2> button and the <((P))> wireless icon will be displayed on the LCD panel. Long press the <GR/CH> button to set the same channel to the flash trigger, and short press the <GR/CH> button to set the same group to the flash trigger (Note: please refer to the relevant instruction manual when setting the studio flashes of other models).
- 4.4 Press the camera shutter to trigger. And the status lamp of the camera flash and the flash trigger both turn red synchronously.

Note: As the studio flash's minimum output value is 1/32, the output value of the flash trigger should be set to or over 1/32. As the studio flash do not have TTL and stroboscopic functions, the flash trigger should be set to M mode in triggering.

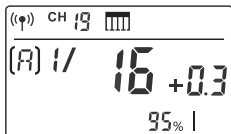

X Using the Flash Trigger

5. As a Wireless Shutter Release Trigger

Operation method:

- 5.1 Turn off the camera. Take a camera remote cable and insert one end into the camera's shutter socket and the other end to the shutter release port of X1R-N to connect. Power on the camera and the receiver.
- 5.2 Long press the <Zm/CH> button to set channel, group, mode and parameters (refers to the contents of "Setting the Flash Trigger").
- 5.3 Press the receiver's <CH> button to set the same channel to the flash trigger, and press the <Gr> button to set the same group to the flash trigger.
- 5.4 Half press the ⚡ button to focus and full press the <TEST> button to shoot. Release the button until the status lamp turns to red.



X Using the Flash Trigger

6. As a Flash Trigger with 2.5mm Sync Cord Jack

Operation method:

- 6.1 The connection method please refers to the contents of "As a Wireless Studio Flash Trigger" and "As a Wireless Shutter Release".
- 6.2 Press the shutter normally and the flashes will be controlled by sync cord jack's signal.



X Setting the Flash Trigger

• Power Switch

Slide the Power Switch to ON, and the device is on and status indicator lamp will not reveal.

Note: In order to avoid power consumption, turn off the transmitter when not in use.

• Automatically Enter Power Saving Mode

1. The system will automatically enter standby mode after stop operating the transmitter over 90 seconds. And the displays on the LCD panel disappear now.
2. Press any button to wake up. If the flash trigger is attached to the hot shoe of Nikon camera, half press the camera shutter can also wake the system up.

Note: If do not want to enter power saving mode, press the <MENU> button to enter C.Fn custom settings and set STBY to OFF.

• Power Switch of AF Assist Beam

Slide the AF assist beam switch to **ON**, and the AF lighting is allowed to output.

When the camera cannot focus, the AF assist beam will turn on; when the camera can focus, the AF assist beam will turn off.

• Channel Setting

1. Long press the <Zm/CH> button and the channel value will be chosen.
2. Turn the select dial to choose the appropriate channel. Press the <SET> button again to confirm the setting.
3. This flash trigger contains 32 channels which can be changed from 1 to 32. Set the transmitter and the receiver to the same channel before usage.

X Setting the Flash Trigger

• Wireless ID Settings

Change the wireless channels and wireless ID to avoid interference for it can only be triggered after the wireless IDs and channels of the master unit and the slave unit are set to the same.

Press the <MENU> button to enter C.Fn ID. Press the <SET> button to choose OFF channel expansion shutdown, and choose any figure from 01 to 99.

Note: As the current Godox flashes do not have wireless ID setting functions, please set ID to OFF.

• Mode Setting

1. Short press the <MODE> button, and the mode of the current group will change.

2. Set the groups to five groups (A-E)

2.1 When displaying multiple groups, press the <MODE> button to switch the multi-group mode to MULTI mode.

Press the group selection button can set the MULTI mode to ON or OFF.

2.2 When displaying multiple groups, press the group selection button or <MODE> button in one-group mode, and A, B and C group's mode will be changed by the order of TTL/M/-- while D and E group will be changed in or M/-- mode.

3. When setting the group to 16 groups (0-F), there is only manual mode M.

4. Long press the <MODE> button for 2 seconds until "LOCKED" is displayed on the bottom of the LCD panel, which means the screen is locked and no parameters can be set. Long press the <MODE> button again to unlock.



X Setting the Flash Trigger

• Magnification Function

Switch between multi-group and one-group mode: choose a group in multi-group mode and press the <TCM> button to magnify it to one-group mode. Then, press the <TCM> button to back to multi-group.

• Output Value Settings

1. Multi-group displays in the M mode

1.1 Press the group button to choose the group, turn the select dial, and the power output value will change from Min to 1/1 in 0.3 or 0.1 stop increments. Press the <SET> button to confirm the setting.

1.2 Press <ALL> button to choose all groups' power output value, turn the select dial, and all groups' power output value will change from Min to 1/1 in 0.3 or 0.1 stop increments. Press <ALL> button again to confirm the setting.

2. One-group displays in the M mode

Turn the select dial and the group's power output value will change from Min to 1/1 in 0.3 or 0.1 stop increments.

Note: Min. refers to the minimum value that can be set in M or Multi mode. The minimum value can be set to 1/128, 1/128(0.1), 1/256 or 1/256(0.1) according to C.Fn-STEP. For most of camera flashes, the minimum output value is 1/128 or 1/128(0.1) and cannot be set to 1/256 or 1/256(0.1). However, the value can change to 1/256 or 1/256(0.1) when using in combination with Godox strong power flashes e.g. AD600Pro, etc.

X Setting the Flash Trigger

• Flash Exposure Compensation Settings

1. Multi-group displays in the TTL mode

1.1 Press the group button to choose the group, turn the select dial, and the FEC value will change from -3 to ~3 in 0.3 stop increments. Press the <SET> button to confirm the setting.

1.2 Press <ALL> button to choose all groups' FEC value, turn the select dial, and all groups' FEC value will change from -3 to ~3 in 0.3 stop increments. Press <ALL> button again to confirm the setting.

2. One-group displays in the TTL mode

Turn the select dial and the group's power output value will change from -3 to ~3 in 0.3 stop increments.

• Multi Flash Settings (Output Value, Times and Frequency)

1. In the multi flash (TTL and M icon are not displayed).
2. The three lines are separately displayed as power output value, Times(flash times) and Hz (flash frequency).
3. Turn the Select Dial to change the power output value from Min. to 1/4 in integer stops.
4. Short press the Times button can change flash times. Turn the select dial to change the setting value.
5. Short press the THz button can change flash frequency. Turn the select dial to change the setting value.



X Setting the Flash Trigger

6. Until all the amounts are set. Or during any value setting, short press the <MODE> button to exit the setting status. No values will blink.


7. In the multi flash setting submenu, short press the <MODE> button to return to main menu when no values are blinking.

Note: As flash times are restricted by flash output value and flash frequency, the flash times cannot surpass the upper value that permitted by the system.

The times that transported to the receiver end are a real flash time, which is also related to the camera's shutter setting.

• Modeling Lamp Settings

1. When displaying multiple groups, press the <MOD> button to control the ON/OFF of the modeling lamp.
2. Press the group button to choose the group when displaying multiple groups or when displaying one-group, press the <MOD> button to control the ON/OFF of the modeling lamp (note: The models that can use one-group to ON/OFF the modeling lamp are as follows: GSII, SKII, QSII, QDII, DEII, DP II series, etc. The outdoor flash AD200 and AD600 can use this function after upgrade. The new arrivals with modeling lamps can also use this function.).

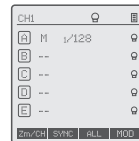


X Setting the Flash Trigger

• ZOOM Value Settings

Short press the <Zm/CH> button and the ZOOM value will be displayed on the LCD panel. Choose the group and turn the select dial, and the ZOOM value will change from AUTO/24 to 200. Choose the desired value and press the <Zm/CH> button again to back to the main menu.

Note: The flash's ZOOM should be set to Auto (A) mode before responding.

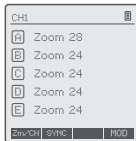

• Shutter Sync Settings

1. **[H]** High-speed sync: press the <SYNC> button and is displayed **[H]** on the LCD panel. Set the shutter sync speed to 1/320s (auto FP) or 1/250s (auto FP) in Nikon camera setting. Turn the camera dial, and the shutter speed can be set to or more than 1/250s. Check the shutter speed through the camera viewfinder to confirm whether the FP high-speed function is used. If the shutter speed is or over 1/250s, it means the high-speed is booted up.



2. **[>>]** Second-curtain sync: press the <[lightning bolt]> on Nikon camera, and turn the main command dial until **[REAR]** is displayed on the panel. Then, set the camera shutter.

• Buzz Settings

Press the <MENU> button to enter C.Fn BEEP and press the <SET> button. Choose ON to turn on the BEEP while OFF to turn off it. Press the <MENU> button again to back to the main menu.



X Setting the Flash Trigger

• Sync Socket Settings

1. Press the <MENU> button to enter C.Fn SYNC and press the <SET> button to choose IN or OUT. Press the <MENU> button again to back to the main menu.

1.1 When choosing IN, this sync socket will enable XProN to trigger flash.

1.2 When choosing OUT, this sync socket will send trigger signals to trigger other remote control and flash.




• TCM Function

TCM transform function is a particular function that owned by Godox:

TTL flash value transform into power output value in M mode.

1.1 Set the flash trigger to TTL mode

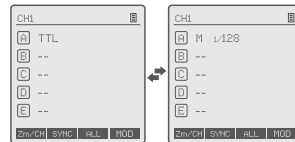

and attach it to the camera.

Press the shutter for shooting.

1.2 Long press the <TCM> button, and the flash value in TTL mode will transform into power output value in M mode (The displayed minimum value is the set Min. value).

1.3 Please refer to the C.Fn setting custom functions to see the flash models which are compatible with TCM functions.

Note: Please choose the relevant models in TCM function in C.Fn custom settings according

X Setting the Flash Trigger

• SHOOT Function Settings

Press the <MENU> button to enter C.Fn SHOOT.

Press the <SET> button to choose one-shoot or multi-shoots, and press the <MENU> button again to back to the main menu.

One-shoot: When shooting, choose one-shoot. In the

M and Multi mode, the master unit only sends triggering signals to the slave unit, which is suitable for one person photography for the advantage of power saving.

Multi-shoots: When shooting, choose multi-shoots, and the master unit will send parameters and triggering signals to the slave unit, which is suitable for multi person photography. However, this function consumes power quickly.

APP: Only send triggering signal when camera is shooting (control the flash's parameters by smartphone APP).






X Setting the Flash Trigger

• C.Fn: Setting Custom Functions

The following table lists the available and unavailable custom functions of this flash.

Custom Function	Function	Setting Signs	Settings and Description
STBY	Sleep	ON	ON
		OFF	OFF
BEEP	Beeper	ON	ON
		OFF	OFF
STEP	Power output value	1/128	The minimum output is 1/128 (change in 0.3 step)
		1/256	The minimum output is 1/256 (change in 0.3 step)
		1/128 (0.1)	The minimum output is 1/128 (change in 0.1 step)
		1/256 (0.1)	The minimum output is 1/256 (change in 0.1 step)
LIGHT	Backlighting time	12sec	Off in 12 seconds
		OFF	Always off
		ON	Always lighting
SYNC	Sync cord jack	IN	Enable XProN to trigger flash
		OUT	Export triggering signal to trigger other remote control and flash
GROUP	Group	5 (A-E)	5 groups (A-E)
		16 (O-F)	16 groups (O-F); 16 groups when the receiver end is studio flash, which can only be set to M mode in this state
LCD	Contrast ratio of LCD panel	-3--+3	The contrast ration can be set as integral number from -3 to +3

X Setting the Flash Trigger

Custom Function	Function	Setting Signs	Settings and Description	
SHOOT		One-shoot	Only send triggering signals in the M & Multi mode when camera is shooting	
		Full-shoot	Send parameters and triggering signal when camera is shooting (suitable for multi person photography)	
	APP	APP	Only send triggering signal when camera is shooting (control the flash's parameters by smartphone APP)	
DIST	Triggering distance	0-30m	0-30m triggering	
		1-100m	1-100m triggering	
ID	Wireless ID	OFF	Off	
		01-99	Choose any figure from 01-99 (the current flashes cannot use this function temporarily)	
TCM	TCM transform function 	TT685/V860II series	The power output values in the M mode which are transformed from TTL mode, being subjected to the master flash when mixing	
		200j		AD200
		360j		AD360II
		600j		AD600

X Compatible Flash Models

















• Compatible Flash Models

Transmitter	Receiver	Flash	Note
XProN	--	AD600 series/AD360II series/AD200 AD400Pro/V860II series/V850II TT685 series/TT600/TT350N QuickerII series/QTII/SK II series DP II series/GSII	
	X1R-N	SB910/SB800/SB5000 V860N	As there are so many camera flashes in the market which are compatible with Nikon speedlites, we do not test one by one.
	XTR-16	AD360/AR400	The flashes with Godox wireless USB port
		Quicker series/SK series/DP series GT/GS series / Smart flash series	Can only be triggered
XTR-16S	V860N V850		

Note: The range of support functions: the functions that are both owned by XProN and flash.

Compatible Flash Models

• The relationship of XT wireless system and X1 wireless system:

XT-16 (Code Switch)								
X1 (Display Screen)	CH01	CH02	CH03	CH04	CH05	CH06	CH07	CH08
XT-16 (Code Switch)								
X1 (Display Screen)	CH09	CH10	CH11	CH12	CH13	CH14	CH15	CH16

Compatible Camera Models

This flash trigger can be used on the following Nikon series camera models:

D5	D4	D60	D70S	D90	D100	D200
D300S	D300	D500	D610	D700	D750	D800
D810	D3100	D3200	D3300	D5000	D5100	D5200
D5300	D7000	D7100				

1. This table only lists the tested camera models, not all Nikon series cameras. For the compatibility of other camera models, a self-test is recommended.
2. Rights to modify this table are retained.
3. The cameras which are released before 2012 do not have TTL mode in their D and E group.

Technical Data

Model	XProN
Compatible cameras	Nikon cameras (i-TTL autoflash) Support for the cameras that have PC sync socket.
Power supply	2*AA batteries
Flash Exposure Control	
TTL autoflash	i-TTL
Manual flash	Yes
Stroboscopic flash	Yes
Function	
High-speed sync	Yes
Flash exposure compensation	Yes, ± 3 stops in 1/3 stop increments
Flash exposure lock	Yes
Focus assist	Yes
Modeling lamp	Control the modeling lamp by the flash trigger
Beeper	Control the beeper by the flash trigger
Wireless setting	The receiver end can control the camera shooting through the 2.5mm sync cord jack
ZOOM setting	Adjust the ZOOM value by the transmitter
TCM function	Transform the TTL shooting value into the output value in the M mode
Firmware upgrade	Upgrade through the Type-C USB port
Memory function	Settings will be stored 2 seconds after last operation and recover after a restart

Technical Data

Model	XProN
Wireless Flash	
Transmission range (approx.)	0-100m
Built-in wireless	2.4G
Modulation mode	MSK
Channel	32
Wireless ID	01-99
Group	16
Other	
Display	Large LCD panel, backlighting ON or OFF
Dimension/Weight	90x58x50mm/80g
2.4G Wireless Frequency Range	2413.0MHz-2465.0MHz
Max. Transmitting Power of 2.4G Wireless	5dbm

• Restore Factory Settings

Synchronously press the two function button in the middle, and the restore factory settings are finished until the "RESET" is displayed on the LCD panel.

• Firmware Upgrade

This flash trigger supports firmware upgrade through the Type-CUSB port. Update information will be released on our official website.

- USB connection line is not included in this product. As the USB port is a Type-C USB socket, please use Type-C USB connection line.
- As the firmware upgrade needs the support of Godox G2 software, please download and install the "Godox G2 firmware upgrade software" before upgrading. Then, choose the related firmware file.

Attentions

1. Unable to trigger flash or camera shutter. Make sure batteries are installed correctly and Power Switch is turned on. Check if the transmitter and the receiver are set to the same channel, if the hotshoe mount or connection cable is well connected, or if the flash triggers are set to the correct mode.
2. Camera shoots but does not focus. Check if the focus mode of the camera or lens is set to MF. If so, set it to AF.
3. Signal disturbance or shooting interference. Change a different channel on the device.

The Reason & Solution of Not Triggering in Godox 2.4G Wireless

1. **Disturbed by the 2.4G signal in outer environment (e.g. wireless base station, 2.4G wifi router, Bluetooth, etc.)**
 - To adjust the channel CH setting on the flash trigger (add 10+ channels) and use the channel which is not disturbed. Or turn off the other 2.4G equipment in working.
2. **Please make sure that whether the flash has finished its recycle or caught up with the continuous shooting speed or not(the flash ready indicator is lighten) and the flash is not under the state of over-heat protection or other abnormal situation.**
 - Please downgrade the flash power output. If the flash is in TTL mode, please try to change it to M mode(a preflash is needed in TTL mode).
3. **Whether the distance between the flash trigger and the flash is too close or not**
 - Please turn on the "close distance wireless mode" on the flash trigger (< 0.5m):
 - Please set the C.Fn-DIST to 0-30m.

4. Whether the flash trigger and the receiver end equipment are in the low battery states or not

→ Please replace the battery(the flash trigger is recommended to use 1.5V disposable alkaline battery).

X Caring for Flash Trigger

- **Avoid sudden drops.** The device may fail to work after strong shocks, impacts, or excess stress.
- **Keep dry.** The product isn't water-proof. Malfunction, rust, and corrosion may occur and go beyond repair if soaked in water or exposed to high humidity.
- **Avoid sudden temperature changes.** Condensation happens if sudden temperature changes such as the circumstance when taking the transceiver out of a building with higher temperature to outside in winter. Please put the transceiver in a handbag or plastic bag beforehand.
- **Keep away from strong magnetic field.** The strong static or magnetic field produced by devices such as radio transmitters leads to malfunction.

X FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

产品保修

尊敬的用户，本保修卡是申请保修服务的重要凭证，请您配合销售商填写并妥善保管，谢谢！

产品信息	型号	产品条码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注：此表应由销售商盖章确认。

适用产品

本文件适用于相关《产品保修信息》(见后面说明)所列产品，其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算，购买日以购买产品时保修卡登记日期为准。

如何获得保修服务

您可直接与产品销售商或授权服务机构联系，也可拨打神牛产品售后服务电话，与我们联系，由我们的服务人员为您安排服务。申请保修时，您应提供有效的保修卡作为保修凭证，方可获得保修。如您不能提供有效的保修卡，则在我们可确认产品或部件属于保修范围的情况下，也可以为您提供保修，但这不作为我们的义务。

不适用保修的情况

如产品存在下列情况，本文件项下的保证和服务将不适用 ①产品或部件超过相应保修期；②错误或不当使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合理预期用途使用；不当插拔外接设备；跌落或外力挤压；接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境；③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏；④产品或部件原有识别信息被修改变更或删除；⑤无有效保修卡；⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏；⑦因不可抗力或意外事件造成的故障或损坏；⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色，磨损和消耗，不是保修范围内的故障。

产品保修和服务支持信息：产品的保修期和服务类型按以下《产品保修信息》执行：

产品类别	选件名称	保修期(月)	保修服务类型
部件	电路板	12	客户送修
	电池	3	客户送修
	充电器、电源线，同步线等带电性能的部件。	12	客户送修
其他	如闪光管、造型灯泡、外壳、保护罩、锁紧装置、包装等。	无	无保修

神牛产品售后服务电话
0755-29609320-8062

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safekeep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note:		

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the **Product Maintenance Information** (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time, and the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ①. **The product or accessory has expired its warranty period;** ②. **Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc;** ③. **Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment;** ④. **The original identifying information of product or accessory is modified, alternated, or removed;** ⑤. **No valid warranty card;** ⑥. **Breakage or damage caused by using illegally authorized, nonstandard or non-public released software;** ⑦. **Breakage or damage caused by force majeure or accident;** ⑧. **Breakage or damage that could not be attributed to the product itself.** Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following

Product Maintenance Information:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Circuit Board	12	Customer sends the product to designated site
	Battery	3	
	Electrical parts e.g.battery charger, power cord, sync cable, etc.	12	
Other Items	Flash tube, modeling lamp, lamp body, lamp cover, locking device, package, etc.	No	Without warranty

Godox After-sale Service Call
0755-29609320-8062