


合格证  
QC PASS

Godox

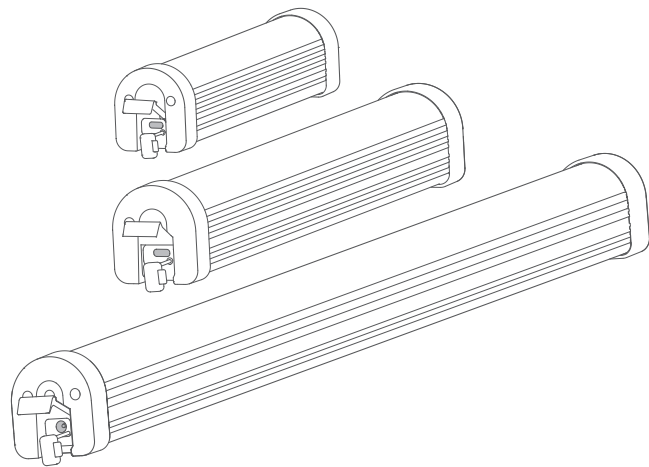

Wechat  
Official Account  
神牛微信公众号

深圳市神牛摄影器材有限公司

地址: 深圳市宝安区福海街道塘尾社区福川工业区厂房2栋 电话: 0755-29609320(8062)

传真: 0755-25723423 邮箱: godox@godox.com

GODOX Photo Equipment Co.,Ltd.

Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District,

Shenzhen 518103, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423

E-mail: godox@godox.com

godox.com

Made in China | 705-WT25D0-01



WT25D  
WT40D  
WT60D

Dive Light 潜水灯

使用手册  
Instruction Manual

## 重要的安全说明及注意事项

首先作为最基本原则：本产品为专业灯光布景设备，应由专业灯光师使用或在专业人士指导下使用。使用时必须始终遵循基本的安全预防措施，具体安全预防措施如下：

1. 使用前必须阅读并理解产品说明书。
2. 专业灯具，禁止儿童使用。当儿童靠近时，家长或监护人必须密切监督，以免儿童因碰撞灯具或私用灯具造成人身伤害。
3. 本灯具并非普通照明灯具，不可用于普通照明，任何有过眼膜损伤或眼部敏感的人群均应避免使用本灯具。
4. 灯具点亮时，必须小心使用，禁止接触高温部件，如LED灯珠，以免造成灼伤。
5. 灯具点亮时，任何情况下均禁止直视灯珠。应该在专业灯光师指导下使用强光，任何情况下避免长时间处于强光环境，如引起眼睛不适，请及时关闭灯具，暂停使用，请及时就医。
6. 倘灯珠损坏或因过热变形，应停止使用，并及时联系制造商、服务代理商或合格的维修人员更换灯珠，以免发生意外。
7. 本产品仅适用于-10~+40°C工作温度环境下使用。
8. 请勿使用损坏的设备或设备配件，待专业维修人员检查维修，确认设备正常方可使用。
9. 在使用过程中，如果本产品由于跌落、受到挤压或遭受强烈冲击而造成外壳破裂的，请勿继续使用，以免因接触到内部电子元件而受到电击伤害。
10. 如需要延长线，请使用额定电流≥该设备额定电流的延长线。如延长线额定电流小于该设备，可能导致过热。
11. 部分产品电源线较长，请合理放置电源线，使其处于安全位置。避免电源线接触过热物体表面、避免放置不当导致拉扯损坏或绊倒现场人员。请使用本厂原装电源线，如使用非本厂电源线导致产品损坏，概不在本厂维修范围内。
12. 在清洁和维修之前，请务必从电源插座上拔出该设备插头。不使用时，禁止拉扯电源线以将设备插头从电源插座中拔出，正常断电，应是用手抓住该设备插头两端，将插头从电源插座中拔出。此设备需连接到接地插座中。
13. 请勿私自拆卸产品，如产品出现故障，须由本公司或授权的维修人员进行检查维修。
14. 存放本设备之前，请确保设备已完全冷却。存放时，将电源线从设备上拔出。设备应放置于设备便携包内或通风干燥处。
15. 请勿将设备放置在酒精、汽油等易燃易爆挥发的溶剂附近。
16. 本厂不推荐的产品附件，请勿使用，以免导致火灾、触电或人身伤害。
17. 清洁本设备时，请勿用湿布擦拭，请用干布，软布擦拭设备污垢。
18. 设备使用前，请注意将保护罩取下。
19. 本产品已通过ROHS, CE和FCC认证，请参考相关国家标准使用和操作。
20. 安全说明依据本厂严格测试制定，设备设计和规格如有变更，恕不另行通知。客户可以上神牛官网查看最新的电子版说明，了解产品最新资讯。
21. 部分产品内置锂电池。此类产品请使用专用的充电器进行充电，并且按正确的操作说明，在规定的电压、温度范围内使用。
22. 部分产品使用电池供电。此类产品请勿使用说明书中未指定的任何电池、电源或附件。请将电池和其他附件置于儿童及婴幼儿无法触及之处。如果儿童或婴幼儿吞下电池或附件，请立即就医。如果电池漏液、变色、变形、冒烟或发出异味，请立即将其取出。在取出过程中请小心，以免烫伤。如果继续使用，可能会引起火灾、触电或皮肤烫伤。请勿使用任何变形或改造过的电池。请勿拆卸或改造本产品或电池。请勿加热电池或焊接电池。请勿让电池与火或水接触。请勿让电池受到强烈的外力

撞击。请勿将电池的正负极错误插入，或将新旧电池或不同类型的电池混合使用。

23. 一年保修期，消耗品电池、适配器、电源线等配件不在此保修范围内。
24. 经发现，擅自检修设备，将取消一年保修期，维修需要收取相关费用。
25. 对于不规范操作引起的机器故障不在保修范围内。

## 前言

感谢您购买神牛WT系列白光版潜水灯。

神牛全新推出一系列IP68级潜水灯，可达水下40米，具备超高输出功率、蓝牙APP智能控制、13种逼真光效、亮度0% -100%精准调节等诸多特性。此系列条灯广泛适用于沿海深潜补光、湖泊潜水补光、水下拍照补光、水下录制补光、水下灯光表演、潜水培训等场景。





## 主要特点：

- 智能切换亮度模式，进入水下可开启高亮模式
- 防水等级IP68，WT25D/WT40D/WT60D皆可可达水下40米
- 支持蓝牙APP远程控制，满足摄影师在特定场景下远程操控（仅支持水上模式）
- 智能电量显示，让您随时随地知道灯体电量剩余时长
- 多种固定方式：通过1/4"螺丝口固定或1/4"转1"球头座固定
- 13种FX场景光效，可自定义调节光效亮度，助你获得逼真场景光效
- WT25D/WT40D充电接口为USB Type-C，支持快速充电，支持充电宝、适配器等多种充电方式


## 警告

- ▲ 请勿私自拆卸产品，如产品出现故障须由本公司或授权的维修人员进行检查维修。
- ▲ 请勿让儿童接触本产品。
- ▲ 请勿在化学品、可燃性气体或其他特殊物质附近使用灯，有可能导致火灾或电磁干扰，在这些场合下，请注意相关警告标识。
- ▲ 内置锂电池，禁止拆卸、撞击、挤压或投入火中，若出现严重膨胀，请勿继续使用。
- ▲ 请勿放置在超过40°C的高温环境中。使用产品要求参数的充电器进行充电，并且正确的按照操作说明，在规定的电压、温度范围内使用。
- ▲ 潜水灯下水前，请务必将硅胶盖子牢牢塞进充电口，然后盖紧外盖，以免造成产品损坏。
- ▲ 潜水灯在海里拍摄后，请用清水冲洗干净，方可放置于干燥通风处。

## 部件名称

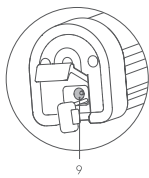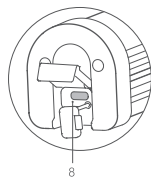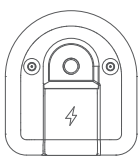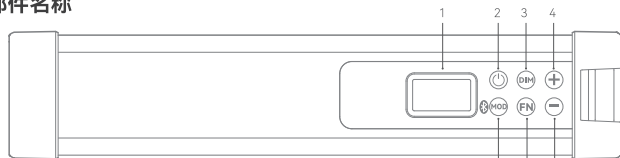



1. OLED 屏
2. 电源开关键
3. DIM 按键
4. + 按键
5. MOD/蓝牙按键
6. FN 按键
7. - 按键
8. Type-c 充电接口 (WT25D/WT40D)
9. DC 充电接口 (WT60D)

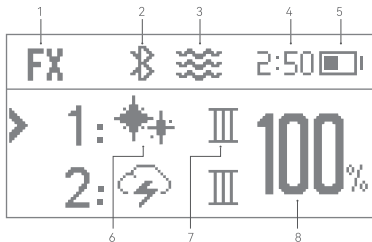

1. FX 图标
2. 蓝牙
3. 水下高亮模式
4. 电池剩余时长  
(仅在主界面下显示)
5. 电池电量
6. 光效类型
7. 光效档位
8. 亮度调节百分比


## 物品清单

 型号	物品清单
WT25D	灯体*1、Type-c快充线*1、手绳*1、1/4"转1"球头座*1、箱包CB67*1
WT40D	灯体*1、Type-c快充线*1、手绳*1、1/4"转1"球头座*1、箱包CB68*1
WT60D	灯体*1、适配器*1、电源线*1、手绳*1、1/4"转1"球头座*1、箱包CB69*1

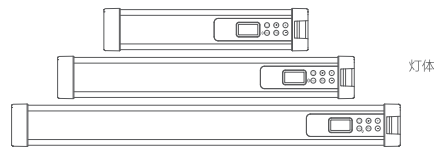

温馨提示：说明书中线图均为示意图，仅供参考，由于产品不断更新与升级，产品实物与线图可能存在差异，请以实物为准。

## 另购附件

 

夹具 WT-C01

## 使用说明

### 1. 开关机

长按1秒电源开关键，实现灯体开机/关机。开机且亮灯时，短按一次电源开关键灯灭，亮度值为0%；再次短按一次电源开关键恢复之前亮度值。


### 2. 亮度调节

在主界面中，短按一次+按键可增加1个亮度值，长按+按键可快速增至所需亮度值。短按一次-按键可减少1个亮度值，长按-按键可快速减至所需亮度值。

### 3. FX光效模式

短按MOD/蓝牙按键可切换至FX光效模式。

**光效亮度调节：**切换至FX光效模式时，短按一次DIM按键，亮度值出现闪烁，此时短按一次+按键可增加1个亮度值，长按+按键可快速增至所需亮度值。短按一次-按键可减少1个亮度值，长按-按键可快速减至所需亮度值。设置完毕，短按一次DIM按键退出亮度设置；或10秒无人操作，亮度值停止闪烁，自动退出亮度设置。

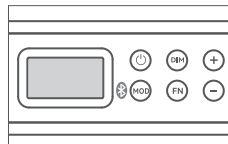

**FX光效选择:** 切换至FX光效模式时, 短按FN按键可切换光效类型。快速按两次FN按键, 可切换至上一个光效。选好光效类别后, 短按+按键或-按键均可调节光效档位。

WT25D/WT40D/WT60D光效表 (5类13种)

序号	显示	场景	显示I	显示II	显示III
1		闪光灯	闪光	发布会	狗仔队
2		雷闪电	间歇	频繁	持续
3		坏灯泡	间歇	频繁	持续
4		电视机	慢速	中速	快速
5	SOS	SOS			

#### 4. 模式说明



水上模式



水下高亮模式 (界面显示 )

 
#### 5. 模式校准功能

当水上模式与水下模式切换异常, 则需进行模式校准。


模式校准: 在水上且灯体干燥时, 同时长按MOD按键与-按键即可模式校准。



界面显示“Calibrating”, 表示校准中。



界面显示一个“√”和“Done”, 表示校准完成。

 

界面显示一个“×”和“Failed”, 表示校准失败, 需重新校准。

#### 6. 蓝牙设置

长按MOD/蓝牙按键, 进入蓝牙设置界面, 短按FN按键选择蓝牙开关(ON/OFF)或蓝牙重置(RESET)。选择蓝牙开关后, 短按+按键或-按键开启/关闭蓝牙。选择蓝牙重置(RESET)后, 短按+按键或-按键进行蓝牙重置。显示屏出现“Reset”, 表示蓝牙正在重置。重置结束, 自动返回蓝牙设置界面。



 
扫描此二维码即可下载“GodoxLight”手机APP(安卓和苹果系统都可以使用)。

手机APP操作请打开APP里的“帮助”, 里面有详细教程。


注: 首个移动设备(手机或平板电脑)可直接使用APP操控灯体。更换其他移动设备时, 灯体进行蓝牙重置(Reset)后, 方可正常使用APP。

#### 7. 充电异常提醒

当显示屏出现 图标, 说明可能出现电池异常或充电器异常等情况。



开机时异常提醒界面

 

关机时异常提醒界面

#### 照度数据

WT25D

色温	模式	照度单位	0.5m	1m	2m
5600K	水下模式	lux	2200	570	149
		fc	204	53	14
	水上模式	lux	965	251	67
		fc	90	23	6

WT40D

色温	模式	照度单位	0.5m	1m	2m
5600K	水下模式	lux	4820	1290	335
		fc	448	120	31
	水上模式	lux	1410	385	99
		fc	131	36	9

## WT60D

色温	模式	照度单位	0.5m	1m	2m
5600K	水下模式	lux	6520	1940	571
		fc	606	180	77.8
	水上模式	lux	2210	665	192
		fc	206	60.9	17.9

以上测试皆在灯体100%亮度下进行。

## 规格参数

型号	WT25D	WT40D	WT60D
供电	5V/2.5A、9V/1.5A、12V/1A、15V/0.8A、20V/0.75A	5V/3A、9V/3A、12V/3A、15V/2.7A、20V/2A	20V/3.25A
水下功率	最大24W	最大54W	最大70W
水上功率	最大10W	最大13W	最大21W
充电接口	Type-C	Type-C	DC输入口
色温	5600K±300K		
TLCI	≥96		
CRI	≥96		
调光范围	0%-100%		
防水等级	IP68(水下40米)		
充电时长	最快2小时	最快2小时20分	最快2小时40分
持续使用时间 (100%亮度)	≈1小时(水下模式) ≈2小时20分(水上模式)	≈1小时20分(水下模式) ≈5小时30分(水上模式)	≈2小时(水下模式) ≈6小时(水上模式)
控制方式	蓝牙APP控制(仅限水上使用)		
蓝牙控制距离	≈25m		
工作温度环境	-10°C~40°C		
尺寸	57mm*52mm*250mm	57mm*52mm*380mm	57mm*52mm*640mm
净重	0.64kg	1.08kg	1.9kg

规格和参数如有变更,恕不另行通知。

## Safety Instructions and Attention

**First of all, as the most basic principle: This product is a professional lighting set equipment and should be used by professional lighting engineers or under the guidance of professionals. Basic safety attentions must always be followed during use, as follows:**

1. Before use, please read and understand these instructions and attentions.
2. Professional lighting is prohibited for children. When children are near, parents or accompanying persons must supervise closely to prevent children from personal injury due to collision with lamps or private use of lamps.
3. This lighting product is not ordinary lighting product and cannot be used for general lighting. Anyone who has suffered eye damage or has sensitive eyes should avoid using this product.
4. When the lamp is on, it must be used with care. Do not touch high-temperature parts, such as LED lamp beads, to avoid burns.
5. When the lamp is on, it is forbidden to look directly at the lamp beads under any circumstances. Strong light should be used under the guidance of professional lighting engineers. Avoid prolonged exposure to strong light under any circumstances. If eye discomfort, please turn off the lamp in time, suspend use, and see a doctor immediately.
6. If the lamp bead is damaged or deformed by heat, stop using this equipment, and contact the manufacturer, service agent or qualified maintenance personnel to replace the lamp bead in time to avoid accidents.
7. This product is only suitable for use in -10°C to +40°C operating environment.
8. Do not use damaged equipment or accessories, and wait for professional maintenance personnel to check and repair to confirm being normal before use.
9. During using, if the casing of this product is broken due to being dropped, squeezed or subjected to strong impact, please do not use it, so as to avoid electric shock injury due to contact with internal electronic components.
10. If an extension cord is required, please use an extension cord with a current rating greater than or equal to that of the equipment. If an extension cord is rated less than the equipment, overheating may result.
11. Some products have long power cords, please place the power cords properly and keep them in a safe place. Avoid contacting the power cord with overheating surfaces, avoid improper placement that could cause pulling damage, or trip on-site personnel. Please use the certified power cord from the original manufacturer. If the product is damaged by using a non-certified power cord, it will not be repaired by our factory.
12. Be sure to unplug equipment from the power outlet before cleaning and repairing. When not in use, do not pull the power cord to unplug the equipment. For normal power-off, please hold both ends of the plug of the equipment with your hands and pull the plug out of power outlet. This equipment needs to be connected to a grounded outlet. Do not disassemble the product without permission. If the product fails, it must be checked and repaired by authorized maintenance personnel.
13. Before storing, make sure that the equipment has cooled down completely. For storage, unplug the power cord from the equipment. The equipment should be placed in the carrying case or in a ventilated dry place.
15. Do not place equipment near flammable and volatile solvents such as alcohol and gasoline.
16. Do not use accessories that are not recommended by our factory to avoid fire, electric shock or personal injury.
17. When cleaning, do not wipe it with a damp cloth, please use a dry cloth or a soft cloth to wipe the dirt of the equipment.
18. Please take off the protective cover before using.
19. This product complies with RoHS, CE and FCC certification, please refer to the relevant national standards for use and operation.

20. The safety instructions are formulated according to the strict testing of the factory, and the design and specifications of the equipment are subject to change without prior notice. For latest product information, please check the GODOX website and view latest electronic instruction.
21. Some products have built-in lithium batteries. Please use specified chargers, and use them within a proper range of the specified voltage and temperature according to the correct operating instructions.
22. Some products are battery powered. Do not use any batteries, power sources or accessories not specified in the instructions for such products. Keep batteries and other accessories out of the reach of children and infants. In the instance that a child or infant swallows a battery or accessory, immediate emergency medical attention is required. If the battery leaks, becomes discolored, deformed, emits smoke, or emits an abnormal odor, remove it immediately. Be careful during removal to avoid burns. Continued use could result in fire, electric shock, or burns. Do not use any deformed or modified batteries. Do not disassemble or modify this product or battery. Do not heat or solder the battery. Keep the battery away from fire or water. Do not incorrectly insert the positive and negative ends of batteries, or mix old and new batteries or batteries of different types together.
23. One-year warranty period, accessories such as consumable batteries, adapters, power cords, etc. are not covered by this warranty.
24. If it is found that the equipment is repaired without authorization, the one-year warranty period will be cancelled and relevant fees will be charged for maintenance.
25. Machine failures caused by non-standard operation are not covered by the warranty.

### keep these instructions!

## Foreword

Thank you for purchasing!

Godox Dive Light series has a IP68 waterproof function of up to 40 meters, ultra-high output power, Bluetooth APP smart control, 13 realistic light effects and adjustable brightness from 0% to 100%. This series can be widely used for filling light in diving, underwater photography, underwater recording, underwater light show and etc.

## Main Features





- Smart brightness adjusting ability to automatically enter high light mode under water.
- Waterproof rate IP68, workable up to 40m underwater.
- Support Bluetooth APP remote control (only workable in abovewater mode).
- Battery level indication gives convenience and utility.
- Selectable mounting methods: 1/4" screw or 1/4" to 1" ball joint.
- 13 FX modes and freely adjustable brightness.
- WT25D and WT40D support fast charging through USB Type-C port.

## ▲ Warning


- ▲ Do not disassemble. Should repairs become necessary, this product must be sent to an authorized maintenance center.
- ▲ Keep out of reach of children.
- ▲ Do not use the product in the presence of flammable gases, chemicals and other similar materials. In certain circumstance, please pay attention to the relevant warnings.
- ▲ Built-in lithium battery, do not disassemble, impact, squeeze or put it into fire. If serious bulge occurs, please do not use.

- ▲ Do not leave or store the product if the ambient temperature reads over 50°C.
- ▲ Please use the proper charger and follow the operation instruction.
- ▲ Make sure to seal the charging port with silicone lid and then close the cover before using under water.
- ▲ Please wash it with clean water and put it in a dry and ventilated place after using in the sea.

## Name of Parts

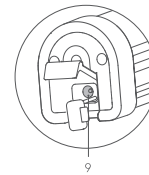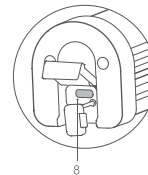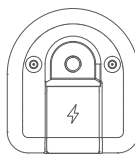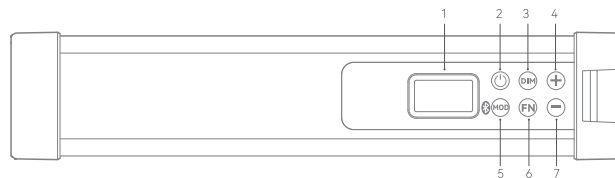


- |                         |                                       |
|-------------------------|---------------------------------------|
| 1. OLED Panel           | 6. FN Button                          |
| 2. Power Switch         | 7. - Button                           |
| 3. DIM Button           | 8. Type-C Charging Port (WT25D/WT40D) |
| 4. + Button             | 9. DC Charging Port (WT60D)           |
| 5. MOD/Bluetooth Button |                                       |

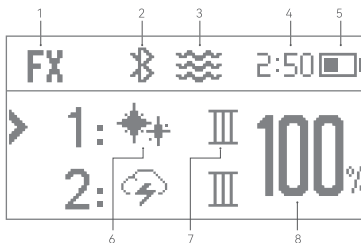

- |   |
|---|
| 1. FX Icon  |
| 2. Bluetooth  |
| 3. Underwater Highlight Mode                          |
| 4. Battery Life (only displays in the main interface) |
| 5. Battery Level                                      |
| 6. FX Mode  |
| 7. FX Level   |
| 8. DIM Adjust Ratio                                   |


## Item List

Model	Item List
WT25D	Light body*1, Type-C charging cable*1, Portable rope*1, 1/4" to 1" ball joint *1, Carry Bag CB67*1
WT40D	Light body*1, Type-C charging cable*1, Portable rope*1, 1/4" to 1" ball joint *1, Carry Bag CB68*1
WT60D	Light body*1, Adapter*1, Power cable*1, Portable rope*1, 1/4" to 1" ball joint *1, Carry Bag CB69*1

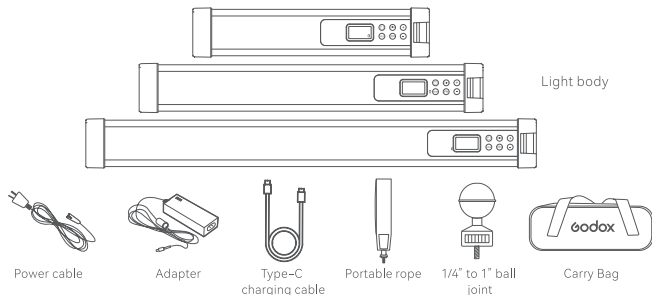

Note: Due to continuous updates and upgrades of the products, there may be differences between the actual products and the pictures. Therefore, the pictures are for reference only, products to prevail in kind.

## Separately Sold Accessories

 


## Operation Instruction

### 1. Power Switch

Long press the power switch for 1 second to power on or off the device. When the light is on in power on status, short press the power switch once to turn off the light, the DIM value is 0%, short press again to resume the previous DIM value.

### 2. Brightness Adjustment

In the main interface, short press the + button once can increase the DIM value by 1 unit, long press the + button can increase the DIM value quickly. Short press the - button once can decrease the DIM value by 1 unit, long press the - button can decrease the DIM value quickly.

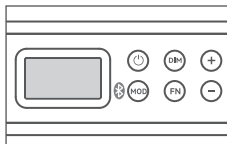

### 3. FX Mode

Short press the MOD/Bluetooth button to switch to FX mode.

**FX Brightness Adjustment:** In the FX mode interface, short press the DIM button once to make the DIM value blinks, then short press the + button once can increase the DIM value by 1 unit, long press the + button can increase the DIM value quickly. Short press the - button once can decrease the DIM value by 1 unit, long press the - button can decrease the DIM value quickly. Finally, short press the DIM button once can exit the brightness setting. It will automatically exit the brightness setting when the DIM value stops blinking after 10 seconds of idle use.

**FX Selection:** In the FX mode interface, short press the FN button can switch FX type. Short press the FN button twice quickly can switch to the previous FX type, Short press the + button or - button can adjust the FX level.

FX Table of WT25D/WT40D/WT60D (13 kinds within 5 types)

NO.	Icon	Scene	Display I	Display II	Display III
1		Flash	Flash	Press conference	Paparazzi
2		Lightning	Discontinuous	Frequent	Sustainable
3		Broken Bulb	Discontinuous	Frequent	Sustainable
4		TV	Slow speed	Medium speed	Quick speed
5		SOS			



### 4. Mode Description



Abovewater Mode



 
Underwater Highlight Mode  
( is displayed on the panel)

### 5. Calibrating Function


The calibrating function is helpful when there are abnormalities in switching between abovewater mode and underwater mode.

**Calibrating mode:** Long press the MOD button and - button at the same time when the light is dry in abovewater mode to enter calibrating mode.


When the "Calibrating" is displayed on the panel, it means calibration is in process.



 When the "✓" and "Done" is displayed on the panel, it means calibration is completed.



 When the "✗" and "Failed" is displayed on the panel, it means calibration is failed.



## 6. Bluetooth Setting

Long press the MOD/Bluetooth button to enter Bluetooth setting interface. Short press the FN button to choose Bluetooth switch (ON/OFF) or Bluetooth reset. If you choose Bluetooth switch, short press the + button or - button to turn on or off the Bluetooth. If you choose Bluetooth reset, short press the + button or - button to reset the Bluetooth. When "Reset" is displayed on the panel, it means resetting, after which, it will return to Bluetooth setting interface automatically.




 
Scan the following QR code to download "Godox Light" mobile APP (both Android and IOS systems are available).

For specific operations, please refer to the "Help" manual of the mobile APP, which contains detailed instruction.

Note: the APP can be used directly on the firstly installed device (smartphone or tablet). When changing to other mobile devices, the light shall be reset before normal usage of APP.

## 7. Abnormal Charging Alert

When the  icon appears on the display, there may be battery abnormality, charger abnormality or other abnormalities.



Abnormality alert interface in power on status



Abnormality alert interface in power off status

## Illuminance Data

### WT25D

CCT	Mode	Illuminance Unit	0.5m	1m	2m
5600K	Underwater	lux	2200	570	149
		fc	204	53	14
	Abovewater	lux	965	251	67
		fc	90	23	6

### WT40D

CCT	Mode	Illuminance Unit	0.5m	1m	2m
5600K	Underwater	lux	4820	1290	335
		fc	448	120	31
	Abovewater	lux	1410	385	99
		fc	131	36	9

### WT60D

CCT	Mode	Illuminance Unit	0.5m	1m	2m
5600K	Underwater	lux	6520	1940	571
		fc	606	180	77.8
	Abovewater	lux	2210	665	192
		fc	206	60.9	17.9

All the above tests are based on the condition of 100% brightness.



## Technical Data

Model	WT25D	WT40D	WT60D
Power supply	5V/2.5A, 9V/1.5A, 12V/1A, 15V/0.8A, 20V/0.75A	5V/3A, 9V/3A, 12V/3A, 15V/2.7A, 20V/2A	20V/3.25A
Power underwater	Max.24W	Max.54W	Max.70W
Power abovewater	Max.10W	Max.13W	Max.21W
Charging port	Type-C	Type-C	DC input port
CCT	5600K±300K		
TLCI	≥96		
CRI	≥96		
Brightness adjustment range	0%~100%		
Water proof rate	IP68 (40 meters underwater)		
Charging time	2h at the soonest	2h20min at the soonest	2h40min at the soonest
Battery life (100% brightness)	≈1h (underwater) ≈2h20min (abovewater)	≈1h20min (underwater) ≈5h30min (abovewater)	≈2h (underwater) ≈6h (abovewater)
Control Method	Bluetooth APP control(only abovewater)		
Bluetooth control distance	≈25m		
Working environment temperature	-10°C~40°C		
Dimension	57mm*52mm*250mm	57mm*52mm*380mm	57mm*52mm*640mm
Net Weight	0.64kg	1.08kg	1.9kg

Specifications and data may subject to changes without notice.

## ▲ Warning

Operating frequency: 2402MHz – 2480MHz  
 WT25D Maximum EIRP Power: 6.65dBm  
 WT40D Maximum EIRP Power: 6.7dBm  
 WT60D Maximum EIRP Power: 5.41dBm

## Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states. For more information of DoC, Please click this web link:

<https://www.godox.com/eu-declaration-of-conformity/>

The device complies with RF specifications when the device used at 0mm from your body.

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

## 产品保修

尊敬的用户, 本保修卡是申请保修服务的重要凭证, 请您配合销售商填写并妥善保管, 谢谢!

产品信息	型号	产品条码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注: 此表应由销售商盖章确认。

### 产品信息

本文件适用于相关《产品保修信息》(见后面说明)所列产品, 其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

### 保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算, 购买日以购买产品时保修卡登记日期为准。

### 如何获得保修服务

您可直接与产品销售商或授权服务机构联系, 也可拨打神牛产品售后服务电话, 与我们联系, 由我们的服务人员为您安排服务。申请保修时, 您应提供有效的保修卡作为保修凭证, 方可获得保修。如您不能提供有效的保修卡, 则在我们确认产品或部件属于保修范围的情况下, 也可以为您提供保修, 但这不作为我们的义务。

### 不适用保修的情况

如产品存在下列情况, 本文件项下的保证和服务将不适用: ①产品或部件超过相应保修期; ②错误或不适当使用、维护或保管导致的故障或损坏, 如: 不当搬运; 非按产品合理预期用途使用; 不当插拔外接设备; 跌落或外力挤压; 接触或暴露于不当温度、溶剂、酸碱、水浸或潮湿环境; ③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏; ④产品或部件原有识别信息被修改变更或删除; ⑤无有效保修卡; ⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏; ⑦因不可抗力或意外事件造成的故障或损坏; ⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况, 您应向相关责任方寻求解决, 神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的, 不是保修范围内的故障。产品使用过程中正常的脱色, 磨损和消耗, 不是保修范围内的故障。

## 产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行:

产品类别	选件名称	保修期(月)	保修服务类型
部件	主机	12	客户送修
	电池	3	客户送修
	充电器等带电性能的部件。	12	客户送修
其他	如电源线、同步线闪光灯管、造型灯泡、外壳、保护罩、锁紧装置、包装等。	无	无保修

神牛产品售后服务电话 0755-29609320-8062

## Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

### Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

### Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time. And the purchase date is considered as the date registered on the warranty card when buying the product.

### How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

### Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ① The product or accessory has expired its warranty period; ② Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③ Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; ④ The original identifying information of product or accessory is

modified, alternated, or removed; ⑤ No valid warranty card; ⑥ Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦ Breakage or damage caused by force majeure or accident; ⑧ Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

## Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Circuit Board	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Electrical parts e.g.battery charger, etc.	12	Customer sends the product to designated site
Other Items	Flash tube, power cord, sync cable, modeling lamp, lamp body, lamp cover, locking device, package, etc.	No	Without warranty

Godox After-sale Service Call +86-755-29609320(8062)