 


Godox

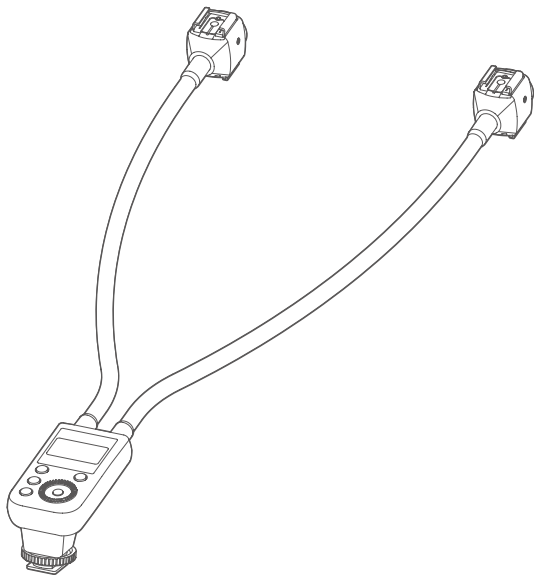

MA2

使用手册

Instruction Manual V1.0

固件 Firmware V1.00

目录

重要安全说明	01
物品清单	01
部件名称	02
使用说明	03
设备安装	03
柔光板使用	04
控制面板操作	04
模式设置	05
菜单设置	06
电源管理	06
照度数据	07
技术参数	08
维护保养	08
产品保修	19
适用产品	19
保修期	19
如何获得保修服务	19
不适用保修情况	20
产品保修和服务支持信息	20

重要安全说明

使用前请务必仔细阅读本手册,并严格遵守以下安全注意事项。

危险

 
- 若外壳出现开裂、变形、进液、异味或异常发热等情况,请立即停止使用。
- 仅限使用原厂配件,或经制造商明确推荐的配件;否则可能导致火灾、电击或人身伤害。
- 如果电池更换不当会有爆炸危险,只能用同样类型或等效类型的电池来更换,仅维修人员可更换,非一般人员更换。请勿拆卸产品或拆解电池。
- 电池不得暴露在诸如日照,火烤或类似过热环境中,产品不得淋雨、进水。
- 消费者若使用电源适配器充电,则应购买配套使用获得 CCC 认证并满足标准要求的电源适配器。
- 电池禁止拆解、撞击、挤压或投入火中。若出现严重鼓胀,请勿继续使用。请勿置于高温环境中。浸水后禁止使用。
- 使用时,应放置在易散热的地方,不要放置在床头、被褥上、包裹里或其他不易散热的环境中使用,避免婴幼儿接触玩耍,儿童请在成人指导下使用。

警告

- 本设备不具备防水防尘功能,禁止在雨天、高湿度、多尘环境中使用。
- 若设备进水或受潮,请立即切断电源,并断开所有连接线缆。
- 严禁在酒精、汽油等易燃易爆气体或液体附近使用本设备。
- 严禁遮挡或堵塞设备散热孔,以防过热引发危险。
- 严禁私自拆卸或改装设备。非授权拆解易导致电路故障或永久性损坏。如需维修,请联系神牛授权服务中心。

请勿直视光源

物品清单



灯体 × 1



柔光板 × 1



USB-C 充电线 × 1

 


使用手册 × 1

注:


1. 开箱后核对所购套装内的物品,若有缺失或破损,及时联系经销商。
2. 图示仅供参考,具体以实际产品为准。

部件名称

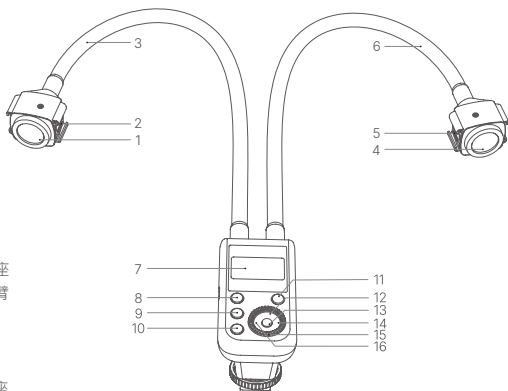

C 区

 - 7. 显示屏 (Display screen)
- 8. A 键 (A button)
- 9. 模式切换键 (Mode switch button)
- 10. 电源 / 试闪键 (Power / Test flash button)
- 11. B 键 (B button)
- 12. MENU 键 (MENU button)
- 13. SET 键 (SET button)
- 14. LED 造型灯键 (LED shape light button)
- 15. 调节拨盘 (Adjustment dial)
- 16. 安全锁键 (Safety lock button)
- 17. 光控接收器 (Light control receiver)
- 18. 磁吸底座 (Magnetic base)
- 19. 单触点热靴 (Single contact hot shoe)
- 20. 热靴锁环 (Hot shoe lock ring)
- 21. USB-C 接口 (USB-C port)


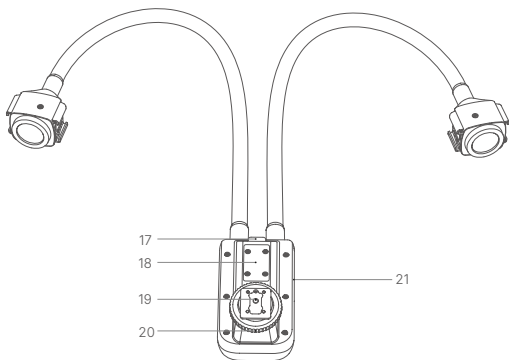


使用说明

1. 设备安装



1.1 相机

  将单触点热靴对准相机热靴座，平行推入，顺时针旋转热靴锁环至锁紧。

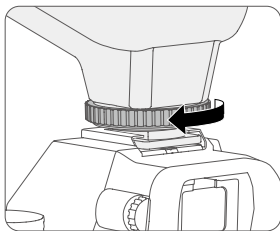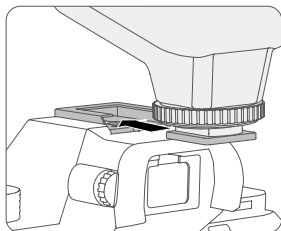


1.2 闪光灯

  将闪光灯热靴对准热靴座，平行推入，直至稳固。

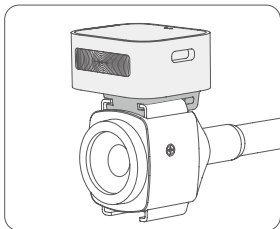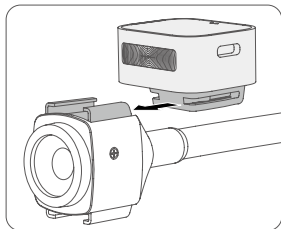

注：单边柔性灯臂所承载灯具总重不得超过 90g，以免部件损坏。

 2. 柔光板使用

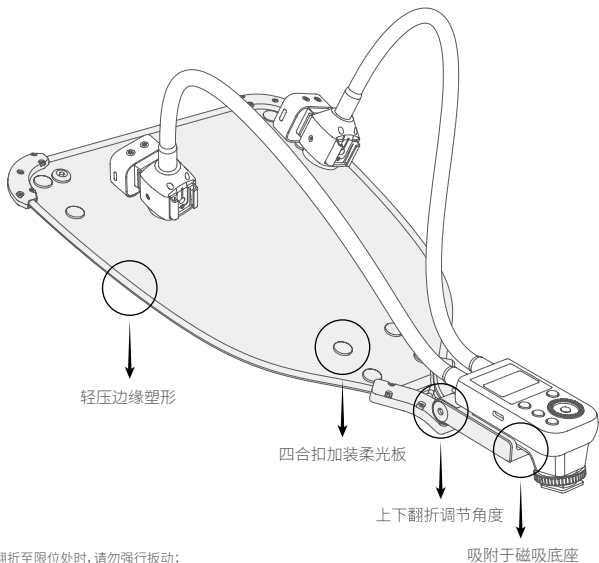

注：

上下翻折至限位处时，请勿强行扳动；
轻压边缘塑形时，请勿对折，以免部件损坏。

3. 控制面板操作

部件	操作	说明
电源 / 试闪键	长按	开机 (按提示旋转调节拨盘) 或关机 (显示屏熄灭)
	短按	FLASH 模式下，触发外接闪光灯试闪一次 (需开机并开启光源)
A 键	短按	开启或关闭 A 区光源
B 键	短按	开启或关闭 B 区光源
模式切换键	短按	切换 LED 或 FLASH 模式 (需退出菜单界面)


部件	操作	说明
MENU 键	短按	进入或退出菜单界面
安全锁键	短按	锁定当前界面或解除锁定
SET 键	短按	确认选择或退出当前设置
LED 造型灯键	短按	开启或关闭 LED 造型灯 (仅限 FLASH 模式)
调节拨盘	旋转	切换选项或增减参数值

4. 模式设置

在非菜单界面下,短按模式切换键进入 FLASH 模式或 LED 模式;分别短按 A、B 键开启对应区域光源,即可分别调节两区参数。

4.1 FLASH 模式

 试闪:若 A、B 区均已安装闪光灯,短按试闪键可
同时触发两区闪光灯试闪。

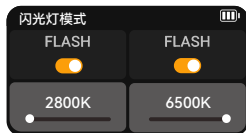


LED 造型灯:短按 LED 造型灯键,开启或关闭造型灯;色温范围:2800K-6500K。



4.2 LED 模式

 短按 SET 键并旋转调节拨盘设置参数值。
亮度范围:0%-100%
色温范围:2800K-6500K

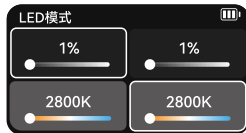

5. 菜单设置

短按 MENU 键进入菜单界面，旋转调节拨盘并短按 SET 键进入其中一项设置。

图标	功能	选项	说明
	光控引闪 (仅限 FLASH 模式)	关	关闭
		S1	通用光控模式，闪光灯随主灯首次闪光同步触发 (适用于手动闪光环境)。
		S2	防预闪光控模式，可忽略主灯预闪，随主闪光同步触发 (适用于 TTL 环境)。
	防误触	关	长按电源键即可开机
		开	长按电源键后旋转调节拨盘开机
	屏幕设置	10% ~ 100%	设置界面亮度值
	语言	简体中文	设置界面语言
		English	
	版本与升级	/	1. 在神牛官网下载 G3 固件升级软件及对应产品固件 (.bin) ; 2. 使用数据线 (另购), 连接电脑接口与灯具 USB-C 接口; 3. 打开 G3 软件, 点击打开文件→打开 .bin 文件→升级→等待升级完成。
	恢复出厂设置	确认	所有参数还原至出厂默认值
		取消	退出此项设置
	关于本机	/	查看型号 / 固件版本等信息

6. 电源管理

使用标配充电线连接设备与电源适配器 (另购) 进行充电。

照度数据

色温	测试条件	照度单位	0.3m	0.5m	1m
2800K	裸灯	lux	5310	1970	473
		fc	493	183	44
3200K		lux	5500	2040	491
		fc	511	190	46
4300K		lux	5820	2160	518
		fc	541	200	48
5600K		lux	6250	2330	559
		fc	581	216	52
6500K		lux	6520	2430	583
		fc	606	226	54

注:文中数据均为 100% 亮度下的平均测试值。

技术参数

产品名称	神牛微距热靴灯
产品型号	MA2
FLASH 模式	
光控引闪	S1、S2
LED 造型灯	色温 2800K - 6500K
LED 模式	
亮度范围	0%-100%
色温范围	2800K - 6500K
基础参数	
锂电池	3.635V, 3300mAh, 11.9955Wh
USB-C 接口	输入: 5V = 3A
充电时间	≈ 2 小时 40 分钟
满电续航	≈ 3 小时 20 分钟 (100% 亮度输出)
CRI	≈ 96
TLCI	≈ 97
工作环境温度	-10°C ~ 40°C
尺寸 (不含附件, 灯臂展开)	410 × 57 × 52 mm
净重 (不含附件)	≈ 340 g

注: 产品设计与规格如有变更, 恕不另行通知。

维护保养

- 清洁前务必关机并断开电源。仅可使用干燥软布擦拭, 严禁使用酒精、苯或其他挥发性溶剂。
- 为延长电池寿命, 长期闲置时须每 3 个月进行维护性充电, 建议电量保持在 40%-60%。

Contents

Important Safety Instructions	10
What's Inside	10
Names of Parts	11
User Manual	12
Device Installation	12
Diffuser Usage	13
Control Panel Operation	13
Mode Setting	14
Menu Settings	15
Power Management	15
Illuminance Data	16
Technical Data	17
Maintenance	17
Declaration of Conformity	18
FCC Caution	18
IC Warning	18
Warranty	21
Applicable Products	21
Warranty Period	21
How to Get the Maintenance Service	21
Inapplicable Cases	22
Maintenance and Service Support Information	22

Important Safety Instructions

Read this manual thoroughly before use and strictly observe the following safety precautions.



DANGER

- Stop using immediately if the housing is cracked or deformed, if liquid enters the device, or if it emits a strange odor or becomes abnormally hot.
- Use only original accessories or accessories specified by the manufacturer. Failure to do so may result in fire, electric shock, or personal injury.
- Risk of explosion if the battery is replaced by an incorrect type. Replace only with the same or equivalent type. Batteries should only be replaced by qualified service personnel. Do not disassemble the product or the battery.
- Do not expose the battery to excessive heat such as direct sunlight, fire, or similar environments. Strictly do not immerse the product in water or expose it to rain.
- Do not disassemble, strike, crush, or throw the battery into fire. Stop using immediately if the battery is severely inflated. Do not leave the device in high-temperature environments. Do not use if the device has been immersed in water.
- Place the device in a well-ventilated area during use. Do not cover the device or place it on beds, blankets, or inside bags where heat dissipation may be blocked. Keep out of reach of infants and children. Children should use this device under adult supervision.



 
WARNING

- This device is NOT waterproof or dustproof. Do not use in rain, high humidity, or dusty environments.
- If liquid enters the device or it becomes damp, disconnect the power immediately and remove all cables.
- Strictly do not use near flammable or explosive gases or liquids.
- Strictly do not block or obstruct the air vents to prevent overheating.
- Do not disassemble or modify the device without authorization. Unauthorized disassembly may result in circuit malfunction or permanent damage. Contact an authorized Godox service center for repairs.



Do not stare at the operating light source.

What's Inside



Light Body × 1



Diffuser × 1



USB-C Cable × 1

 


Instruction Manual × 1

Note:

1. Check the package contents after unboxing. If any items are missing or damaged, contact the dealer immediately.
2. Illustrations are for reference only. Please refer to the actual product.

Names of Parts


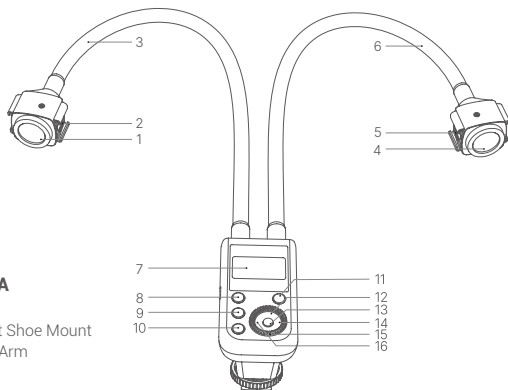


User Manual

1. Device Installation



1.1 Camera

  Align the single-contact hot shoe with the camera hot shoe. Slide it in and turn the Hot Shoe Locking Ring to lock it securely.

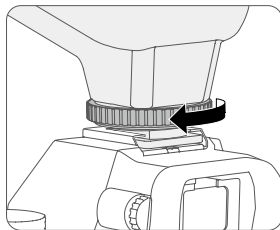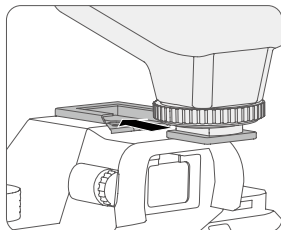


1.2 Flash

  Align the flash hot shoe with the hot shoe mount. Slide it in until it is secure.

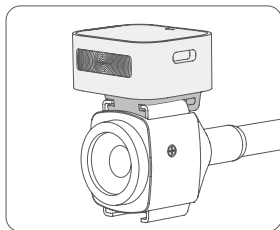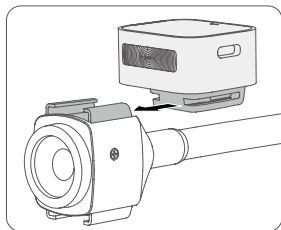

Note: The total weight of the fixtures supported by a single flexible arm must not exceed 90 g to prevent damage to the components.

 2. Diffuser Usage

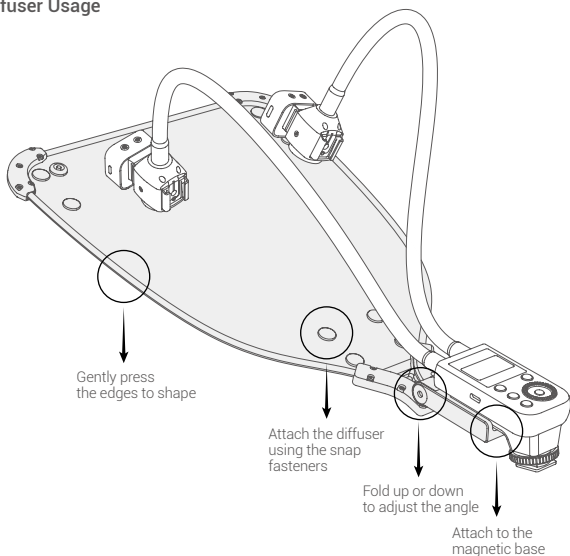

Note:

Do not forcefully bend the diffuser when folded to the limit. Do not fold the diffuser in half when pressing the edges to shape it. This prevents damage to the components.

3. Control Panel Operation

Components	Operation	Description
Power / Test Button	Long Press	Power On (turn the Select Dial as prompted) or Power Off (the display turns off).
	Short Press	Fire a test flash with the attached flash in FLASH Mode. (The device must be powered on and the light source must be enabled).
A Button	Short Press	Turn the Section A light source on or off.
B Button	Short Press	Turn the Section B light source on or off.


Components	Operation	Description
Mode Switch Button	Short Press	Switch between LED Mode and FLASH Mode. (Must exit the menu interface first).
MENU Button	Short Press	Enter or exit the menu interface.
Lock Button	Short Press	Lock or unlock the current interface.
SET Button	Short Press	Confirm the selection or exit the current setting.
LED Modeling Lamp Button	Short Press	Turn the LED modeling lamp on or off (Available in FLASH Mode only).
Select Dial	Rotate	Switch options or adjust values.

4.Mode Setting


In the non-menu interface, press the Mode Switch Button to enter FLASH Mode. Press the A or B Button respectively to turn on the corresponding light source. You can then adjust the parameters for both sections independently.

4.1 FLASH Mode

 Test Flash:If flash units are installed in both Section A and Section B, press the Power / Test Button to trigger both flashes simultaneously.

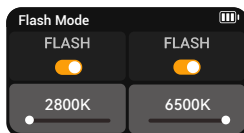

 
LED Modeling Lamp:Press the Modeling Lamp Button to turn the modeling lamp on or off.CCT Range: 2800K - 6500K.

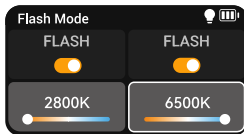

4.2 LED Mode

Short press the<SET> button and rotate the Select Dial to set values.

 Brightness Range: 0%-100%
CCT Range: 2800K-6500K

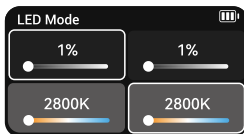

5.Menu Settings

Press the MENU button to enter the menu interface, rotate the Select Dial and press SET button to enter a setting.

Icon	Function	Option	Description
	Photocell (FLASH Mode only)	Off	disabled.
		S1	Standard photocell mode. The flash fires synchronously with the first flash from the main unit. Suitable for manual flash environments.
		S2	Pre-flash cancel photocell mode. The flash ignores the pre-flash from the main unit and fires synchronously with the main flash. Suitable for TTL environments.
	Anti-False Touch	Off	Press and hold the Power Button to turn on directly.
		On	Press and hold the Power Button, then turn the Select Dial to turn on.
	Display	10% - 100%	Adjust screen brightness.
	Language	简体中文	Set interface language.
		English	
	Upgrade	/	1. Download the G3 firmware upgrade software and the corresponding product firmware (.bin) from the Godox website. 2. Use a data cable (sold separately) to connect the USB port on the computer to the USB-C port on the fixture. 3. Open the Godox G3 software, select the firmware file → select the .bin file → click Upgrade → wait for the upgrade to complete.
	Factory Reset	Yes	Restore all parameters to factory defaults.
		No	Exit this setting.
	Fixture Info	/	View Model / Firmware version.

6.Power Management

Use the included cable to connect the device to a power adapter (sold separately) for charging.

Illuminance Data

CCT	Testing	Unit	0.3m	0.5m	1m
2800K	Bare Light	lux	5310	1970	473
		fc	493	183	44
3200K		lux	5500	2040	491
		fc	511	190	46
4300K		lux	5820	2160	518
		fc	541	200	48
5600K		lux	6250	2330	559
		fc	581	216	52
6500K		lux	6520	2430	583
		fc	606	226	54

Note: All data are average values measured at 100% brightness.

Technical Data

Product Name	Godox Flexible Macro Twin Light
Model	MA2
FLASH Mode	
Photocell	S1、S2
LED Modeling Lamp	CCT 2800K - 6500K
LED Mode	
Brightness Range	0%-100%
CCT Range	2800K-6500K
Basic Parameters	
Lithium Battery	3.635V, 3300 mAh, 11.9955 Wh
USB-C Input	5V $\equiv$ 3A
Charging Time	$\approx$ 2 h 40 min
Runtime	$\approx$ 3 h 20 min (at 100% Brightness Output)
CRI	$\approx$ 96
TLCI	$\approx$ 97
Working Environment	-10°C ~ 40°C
Dimensions (excluding accessories, arms extended)	410 × 57 × 52 mm
Net Weight (excluding accessories)	$\approx$ 340 g

Note: Product design and specifications are subject to change without notice.

Maintenance

- **Cleaning:** Disconnect the power before cleaning. Clean the surface with a dry, soft cloth only. Strictly do not use alcohol, benzene, or other volatile solvents.
- **Battery Maintenance:** To extend battery life, perform a maintenance charge every 3 months during long-term storage. It is recommended to keep the battery level at 40% - 60%.

Declaration of Conformity

GODOX Photo Equipment Co., Ltd. hereby declares that the This equipment are in compliance with the essential requirements and other relevant provisions of EU Directive GPSR (EU) 2023/988, 2014/30/EU. They are allowed to be used in all EU member states.

For more information of DoC, Please click this web link:

<https://www.godox.com/eu-declaration-of-conformity/>

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Warning

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

产品保修

尊敬的用户，本保修卡是申请保修服务的重要凭证，请您配合销售商填写并妥善保管，谢谢！

产品信息	型号	产品条形码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注：此表应由销售商盖章确认。

适用产品

本文件适用于相关《产品保修信息》（见后面说明）所列产品，其他非属此范围的产品或部件（如促销品、赠品及其他出厂后附加的部件等）不在此保修承诺内。

保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算，购买日以购买产品时保修卡登记日期为准。

如何获得保修服务

您可直接与产品销售商或授权服务机构联系，也可拨打神牛产品售后服务电话，与我们联系，由我们的服务人员为您安排服务。申请保修时，您应提供有效的保修卡作为保修凭证，方可获得保修。如您不能提供有效的保修卡，则在我们确认产品或部件属于保修范围的情况下，也可以为您提供保修，但这不作为我们的义务。

不适用保修情况

如产品存在下列情况，本文件项下的保证和服务将不适用：①产品或部件超过相应保修期；②错误或不当使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合理预期用途使用；不当插拔外接设备；跌落或外力挤压；接触或暴露于不当温度、溶剂、酸碱、水浸或潮湿环境；③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏；④产品或部件原有识别信息被修改变更或删除；⑤无有效保修卡；⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏；⑦因不可抗力或意外事件造成的故障或损坏；⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色，磨损和消耗，不是保修范围内的故障。

产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行：

部件	保修期（月）	保修服务类型
内部电路板	12	客户送修
其他（例如光效附件、各类线材或其他包装）	无	无保修

神牛产品售后服务电话 0755-29609320-8062

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

Applicable Products

Applicable ProductsThe document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items,giveaways and additional accessories attached,etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories isimplemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is bought for the first time,And the purchase date is considered as the date registered onthe warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases:

① The product or accessory has expired its warranty period; ② Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③ Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; ④ The original identifying information of product or accessory is modified, alternated, or removed; ⑤ No valid warranty card; ⑥ Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦ Breakage or damage caused by force majeure or accident; ⑧ Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Parts	Maintenance Period (month)	Warranty Service Type
Internal circuit board	12	Customer sends the product to designated site
Other Items (optical accessories, cables, package, etc)	No	Without warranty

Godox After-sale Service Call 0755-29609320-8062



Wechat
Official Account
神牛微信公众号

制造商：深圳市神牛摄影器材有限公司
地址：深圳市宝安区福海街道塘尾社区耀川工业园厂房 2 栋
电话：0755-29609320（8062） 传真：0755-25723423
邮箱：godox@godox.com 网址：Godox.com

MANUFACTURER:GODOX Photo Equipment Co., Ltd.
Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community,
Fuhai Street, Bao'an District, Shenzhen 518103, China
Tel: +86-755-29609320(8062) Fax: +86-755-25723423
E-mail: godox@godox.com Website: Godox.com



合格证
QC PASS

Copyright © 2026 Godox All Rights Reserved.
中国制造 Made in China