



重要安全说明

使用前，必须拆除所有运输保护材料及包装。操作时，须严格遵循以下安全准则：

- 工作时，禁止接触闪光灯头等高温金属部件，以防烫伤。
- 严禁在近距离将闪光灯对准人眼（尤其是婴幼儿），否则可能导致视力损伤。如感不适，立即停止使用并就医。
- 严禁在易燃易爆环境中充电、使用或放置。
- 本产品不防水。严禁在雨天、浴室或潮湿环境中使用。充电前，确保接口完全干燥。
- 严禁私自拆卸或改装本产品。故障时，须由神牛授权维修人员检查修复。
- 本产品使用锂电池供电，寿命约为300~500次充放电循环。随使用时间增加，储能能力会逐渐下降，此为正常现象。充电时间明显增加或续航明显下降时，更换电池。
- 锂电池储存与处理：
 - 储存前，将电池充放电至约50%，每6个月维护性充电充至约50%；
 - 储存温度：0°C ~ 40°C；
 - 不要拆卸、压碎或刺穿电池；
 - 电池没有防水功能，不要把电池浸泡在雾、水中；
 - 避免使电池触点短路；
 - 电池不要靠近和放置于火中；
 - 不要将电池暴露在60°C以上高温下；
 - 将电池放在儿童接触不到的位置；
 - 防止电池遭受过度冲击或振动；
 - 不要使用已损坏的电池；
 - 如果电池出现泄漏，请避免接触泄漏液体；
 - 如果眼睛接触电池液体，立即用水冲洗至少15分钟，抬起眼睑直到没有液体的迹象后及时就医；
 - 处理电池须遵守当地法律法规。



前言

感谢您选择神牛（Godox）产品！iM10 是一款便携式入门级闪光灯，采用单触点热靴设计，兼容尼康、佳能、索尼、富士、松下和奥林巴斯等品牌相机。

主要特点

轻巧便携：迷你机身，方便携带。

快速操控：精简按键操作，轻松上手。


4 档功率：支持 M 手动闪光，功率范围 1/8 ~ 1/1。

高效电源：内置锂电池，满电状态下，全功率闪光约 350 次。

物品清单



部件名称

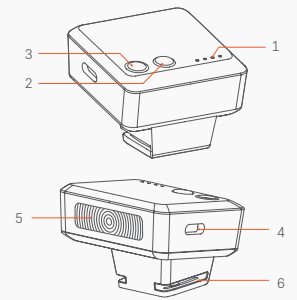

- 1. 指示灯
- 2. < > 档位键
- 3. < % > 电源 / 试闪键
- 4. USB-C 充电接口
- 5. 闪光灯头
- 6. 单触点热靴

电源管理

• 开关机

开机：长按 < % > 键，直至指示灯亮起（指示灯闪烁 - 正在回电；指示灯常亮 - 回电完成）。

关机：长按 < % > 键，直至指示灯熄灭。

自动关机：无操作 1 小时后，自动关机。

• 电量指示

查看电量：同时长按 < % > 和 < > 键，查看电量，每个指示灯表示 25% 电量，4 灯全亮为满电，仅剩 1 灯（25%）时，请及时充电。

低电提醒：4 个指示灯同时闪烁，为低电状态，此时闪光灯无法工作，30 秒后自动关机。

• 充电

使用随附的 USB-C 线连接 5 V / 2 A 电源适配器（需另购）进行充电。

充电中：指示灯逐个点亮，已充电部分常亮。

满电：4 个指示灯常亮。

注：本产品不支持快充。

功率设置

短按 < > 键设置闪光功率。

功率档位：1/1、1/2、1/4 和 1/8。

1/8 档，左 1 指示灯亮起；1/4 档，左 2 指示灯亮起，以此类推。

技术参数

产品名称	iFlash 机顶闪光灯
型号	iM10
闪光输出功率	4 档 (1/1、1/2、1/4、1/8)
闪光次数 (1/1 档)	约 350 次
回电时间 (1/1 档)	约 3 秒
内置锂电池	3.7 V，125 mAh
USB-C 输入	5 V $\bar{\square}$ 0.25 A
充电时间	约 1 小时 10 分钟
同步触发方式	热靴
工作环境温度	-10°C ~ 49°C
尺寸	40 × 40 × 30 mm
净重	约 23 g

维护保养

防震保护：避免强烈碰撞或振动，以免功能异常。

保持干燥：本产品不防水。严禁湿手操作或在雨天、浴室等潮湿环境中使用。

温度适应：避免设备经历极端温度变化，如从低温环境迅速进入高温环境，可能导致内部冷凝。在温度变化较大时，可预先将设备存放于保护袋内，以减少温度冲击。

产品保修

尊敬的用户，本保修卡是申请保修服务的重要凭证，须配合销售商填写并妥善保管。

产品信息	型号	产品条码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注：此表应由销售商盖章确认。

适用产品

本文件适用于相关《产品保修资讯》(见后面说明) 所列产品,其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

保修期

产品及部件的相应保修期按相关的产品保修信息执行。保修期自产品首次购买日起算,购买日以购买产品时保修卡登记日期为准。

如何获得保修服务

您可直接与产品销售商或授权服务机构联系,也可拨打神牛产品售后服务电话,与我们联系,由我们的服务人员为您安排服务。申请保修时,您应提供有效的保修卡作为保修凭证,方可获得保修。如您不能提供有效的保修卡,则在我们确认产品或部件属于保修范围的情况下,也可以为您提供保修,但这不作为我们的义务。

不适用保修的情况

如产品存在下列情况,本文件项下的保证和服务将不适用: ① 产品或部件超过相应保修期;② 错误或不适当使用、维护或保管导致的故障或损坏,如:不当搬运;非按产品合理预期用途使用;不当插拔外接设备;跌落或外力挤压;接触或暴露于不当温度、溶剂、酸碱、水浸或潮湿环境;③ 由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏;④ 产品或部件原有识别信息被修改变更或删除;⑤ 无有效保修卡;⑥ 使用非合法授权、非标准或非公开发行的软件造成的故障或损坏;⑦ 因不可抗力或意外事件造成的故障或损坏;⑧ 其他非因产品本身质量问题导致的故障或损坏。遇上述情况,您应向相关责任方寻求解决,神牛对此不承担任何责任。因不在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的,不是保修范围内的故障。产品使用过程中正常的脱色,磨损和消耗,不是保修范围内的故障。

产品保修

产品的保修期和服务类型按以下《产品保修信息》执行：

产品类别	名称	保修期(月)	保修服务类型
部件	内部电路板	12	客户送修
其他	其他(如闪光管、外壳、包装等)	无	无保修

神牛产品售后服务电话: 0755-29609320-8062



神牛微信
公众号

制造商：深圳市神牛摄影器材有限公司
地址：深圳市宝安区福海街道塘尾社区广(川)工业厂房 2 栋
电话：+86-755-29609320 (8062) 传真：+86-755-25723423
邮箱：godox@godox.com 网址：Godox.com



Copyright © 2026 Godox All Rights Reserved.
中国制造 Made in China | 705-YM1000-00

Important Safety Instructions

Before use, remove all transport protective materials and packaging.
The following basic safety precautions must be followed when using this product:

- Do not touch hot metal parts such as the flash head during or immediately after operation to avoid burns.
- Do not point the flash directly at the eyes (especially baby's eyes) under any circumstances, as this could impair vision in a short time. Turn off immediately if discomfort occurs, stop using, and seek medical attention promptly.
- Do not charge, use, or place the product in flammable or explosive environments.
- This product is not waterproof. Do not use it in rain, in bathrooms, or in damp environments. Ensure the port is completely dry before charging.
- Do not disassemble or modify this product. In the event of malfunction, the product must be inspected and repaired by authorized service personnel only.
- This product is powered by a lithium battery. The battery lifespan is approximately 300–500 charge/discharge cycles. A gradual decrease in capacity over time is normal. Replace the battery if charging time increases significantly or runtime decreases noticeably.
- Lithium Battery Storage and Handling
 - Before storage, charge or discharge the battery to approximately 50 %. Perform a maintenance charge to approximately 50 % every 6 months.
 - Storage temperature: 0 °C to 40 °C.
 - Do not disassemble, crush, or puncture the battery.
 - The battery is not waterproof. Do not immerse it in water or expose it to mist.
 - Avoid short-circuiting the battery contacts.
 - Do not place the battery in or near fire.
 - Do not expose the battery to temperatures above 60 °C.
 - Keep the battery out of reach of children.
 - Protect the battery from excessive shock or vibration.
 - Do not use a damaged battery.
 - If the battery leaks, avoid contact with the leaked liquid.
 - If battery liquid comes into contact with the eyes, rinse immediately with plenty of water for at least 15 minutes while holding the eyelids open, and seek medical attention promptly.
 - Dispose of batteries in accordance with local regulations.



Do not stare at the operating light source.

Foreword

Thank you for choosing Godox!
The iM10 is a portable, entry-level flash featuring a single-contact hot shoe design, compatible with cameras from Nikon, Canon, Sony, Fujifilm, Panasonic, and OM SYSTEM.

Main Features

Lightweight & Portable: Compact body, and easy to carry.
Simplified Controls: Effortless to use, efficient light control.
4 Power Levels: Manual mode (M), power range 1/8 ~ 1/1.
High-Efficiency Power: The built-in lithium battery provides approximately 350 full-power flashes on a full charge.

What's Inside



Flash Body
x1




USB-C Charging
Cable x1



Instruction
Manual x1

Names of Parts

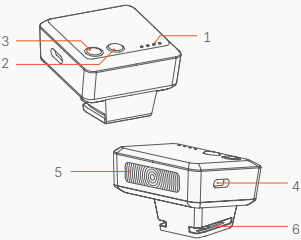

- Indicator
- <  > Stepping Button
- <  > Test Flash Power / Button
- USB-C Charging Port
- Flash Head
- Single-Contact Hot Shoe

Power Management

• Power On/Off

Power On: Press and hold the <  > button until the indicator lights up. (Flashing: recycling; Steady on: recycling complete.)
Power Off: Press and hold the <  > button until the indicator turns off.
Auto Power Off: The unit automatically powers off after 1 hour of inactivity.

• Battery Indicator

Checking Battery Level: Press and hold the <  > and <  > buttons simultaneously to check the battery. Each indicator represents 25% of battery level. Four lit indicators indicate a full charge. When only one indicator remains lit (25%), please charge promptly.
Low Battery Warning: Four indicators flash simultaneously to indicate low battery. The flash will not operate in this state and will automatically power off after 30 seconds.

• Charging

Use the included USB-C cable to connect to a 5V / 2A power adapter (sold separately) to charge.
Charging: The indicators light up progressively; the indicators for the charged portion remain steadily lit.
Fully charged: Four indicators are steadily lit.
Note: This product does not support fast charging.

Flash Output Power

Press the <  > button to set the flash output.
Output levels: 1/1, 1/2, 1/4, and 1/8.
At 1/8 power, the first indicator from the left lights up; at 1/4 power, the first two indicators from the left light up, and so on.

Technical Data

Product Name	iFlash Camera Flash
Model	iM10
Flash Output	4 levels (1/1, 1/2, 1/4, 1/8)
Number of Flashes (at 1/1)	Approx. 350
Recycling Time (at 1/1)	Approx. 3 s
Built-in Lithium Battery	3.7 V, 125 mAh
USB-C Input	5 V  0.25 A
Charging Time	Approx. 1 hr 10 min
Sync Triggering	Hot shoe
Operating Temperature	-10°C ~ 49°C
Dimensions	40 × 40 × 30 mm
Net Weight	Approx. 23 g

Maintenance

Impact Protection: The device may malfunction if subjected to strong shocks or vibration.
Keep Dry: This product is not waterproof. Do not operate with wet hands or use in the rain, bathrooms, or other humid environments.
Temperature Precautions: Avoid sudden temperature changes, such as moving from a cold environment to a warm one, which may cause internal condensation. To prevent this, place the device in a protective bag beforehand to allow it to adjust to the temperature change.

Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive GPSR(EU)2023/988, 2014/30/EU. They are allowed to be used in all EU member states.
For more information of DoC, Please click this web link:<https://www.godox.com/eu-declaration-of-conformity/>

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Warning

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) This device may not cause interference, and
(2) This device must accept any interference, including interference that may cause undesired operation of the device.
Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it.

Product Information	Model	Product Code Number
	Name	Contact Number
Customer Information	Address	
	Name	
Seller Information	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time, and the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call, and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ① The product or accessory has expired its warranty period; ② Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③ Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alteration, addition and detachment; ④ The original identifying information of product or accessory is modified, alternated, or removed; ⑤ No valid warranty card; ⑥ Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦ Breakage or damage caused by force majeure or accident; ⑧ Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Parts	Maintenance Period(month)	Warranty Service Type
Internal circuit board	12	Customer sends the product to designated site
Other Items (flash tubes, housing, and package, etc.)	No	Without warranty

Godox After-sale Service Call +86-755-29609320(8062)



Wechat
Official Account

MANUFACTURER: GODOX Photo Equipment Co., Ltd.
Add.: Building 2, Yaoshuan Industrial Zone, Shenzhen 518103, China Tel.: +86-755-29609320 (8062) Fax: +86-755-25723423 E-mail: godox@godox.com Website: Godox.com



Copyright © 2026 Godox All Rights Reserved.
中国制造 Made in China | 705-YM1000-00