# LITEMONS

RGB LED摄影灯 LED 6R



使用手册 Instruction Manual

RGB LED摄影灯LED6R,有RGB彩光模式、双 **各泡塔士 株果业效塔士 可测共对应会数数值** 获得相应光效。适用于微距拍摄、视频拍摄、微 电影、直播、视频会议、人像拍摄、静物拍摄 笔 可完毕在相机执款槽值用 或老独立值用 也可以组合使用 操作简单 轻巧便推。

- · 多种功能,自由切换 LED双色温模式、彩光模 式和13种情层光效模式
- 自由调节色温、亮度、色彩饱和度
- 内置锂电池, Type-C USB接口充电。 • 背部磁性吸附功能,可吸附在铁质物品表面使
- 带一个冷跳安装座和三个冷跳槽,可安装在热 者拓展其他器材配件使用。
- 外观时尚 操作简单 轻巧便携。

# 深圳市神牛摄影器材有限公司

★★★・空間市空央区福海街道博屋社区福川工业区厂房2本 电话: 0755-29609320(8062) 传真: 0755-25723423 邮箱: godoy@godoy.com Mada in China

## andox com

Forward

 
↑ 木产品不能防水 在雨天及潮湿环境下清注章 RENK

- ▲ 请勿在化学品、可燃件气体或其他特殊物质附 此权会下 法计专归关款生仁归
- ▲ 内置锂由池 禁止抵制 接击 挤压或投入业 中 若出和严重鼓胀 请勿继续使用。请勿故 置在超过-10℃- 40℃的环境由 使用产品更 求参数的充电器进行充电,并且正确的按照操 作道明 在初史的由任 湿度范围内值用

05 冷粉塩 06. 冷靴座 标配物品

02.柔光片

K C (€ RoHS X



01.灯珠

08. 模式选择按钮 04. Type-C USB充电接口 10. 光效按钮 11 显示屈

¥T/木 \*1

季光管 \*1

Names of Parts



## 1 木品采用1800mAh锂由池 内置在产品里面不 1 2 描述体权、现象识描述/ 彩光模式/情景光效模式 . 安全可靠,内置电路有过充保护、过放保护



显示HSI即为彩光模式

1 在由不更故署招讨24小时 2 应放置于凉爽、干燥、涌风的地方储存。

按FX按钮讲入情晷光效( 模式,显示13种光效序 10. 🚓 号和图标。

## 13 固定和拓展 7. 电池有一定的寿命限制,使用一定时间后,性

通过冷歇应可因完在带冷歇/热歇的物品上。通 讨冷跳座的1/4"螺纹孔固定在带1/4"螺纹的物 品上(如云台、三脚架、灯架)。背部有磁铁 可吸附在铁质物品表面使用。三个冷靴横可拓展 显示 带冷靴座的物品。多个灯可组合在一起使用。



# 2 双色温模式·长按M按钮选择

2.1 短按M按钮选择票

2.2 色温调节: 上调节按钮 \ 增加色温值, 下调节 按钮◎ 降低色温值、短按一次数值变动100K. 长 按性使调节 调节范围3200K~6500K

23 高度调节・ト调节按钮 〇 増加高度値 下调节 按钮()降低亮度值,短按一次数值变动1%,长按 快速调节、调节范围0~100%。

## 3. 彩光模式: 长按M按钮选择。

3.1 短控M按钮选择更 

3.2 调节色相H:上调节按钮 ○增加色相值,下调

节按钮 (C) 降低色相值 短按一次数值变动1° 长 按仲读调节 色相调节范围0~360° 3.3 调节饱和度**S**: 上调节按钮 〇 增加饱和度值。 下调节按钮② 降低饱和度值、短按一次数值变动 


3.4 亮度调节1: 上调节按钮 〇 增加亮度值, 下调节 按钮 () 降低亮度值, 短按一次数值变动1%, 长按 快速调节、调节范围0~100%。

## 4 情暑光效模式

环扣拖 长按仲违循环: 4.2情暑光效模式13种:可根 坦亚少许塔



Δ 1按Ey按钮讲 λ 桔昙光效模 **| 京号 | 显示 | 情暑光效** 

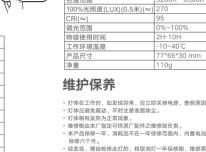

# 维护保养

产品参数

力署细由等

 灯体应避免雷动 平时注意表面除尘。 · 打休硝右岩热为正常和免

维修概由本厂指定可供原厂配件之维修部负责。

 本产品保修一年。消耗品不在一年保修范围内。内置由池 保修六个日

 经发现 擅自检修此灯的 将取消灯—年保修期 维修需 要收取相关费用。

 如果本品出现故障或者被水淋湿,在专业人员维修后方可 傑德休田

设计和规格加右亦面 如太只行通知



# LITEMONS

# 产品保修

尊敬的用户,本保修卡是申请保修服务的重要凭证,请您配 合销售商值写并妥善保管、谢谢!

产品信息	<b>코</b> 号	产品条码	
用户信息	姓名	联系电话	
	通信地址		
销售商	名称		
信息	联系电话		
	通信地址		
	销售日期		
备注			

# 本文件适用于相关《产品保修信息》(贝后面说明)所列产品、其他

非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

产品及部件的相应保修期按相关的《产品保修信息》执行、保修期 自产品首次购买日起算,购买日以购买产品时保修卡登记日期为准。

# 如何获得保修服务

您可直接与产品销售商或授权服务机构联系,也可拨打神牛 产品售后服务电话,与我们联系,由我们的服务人员为您安排服务。申请保修时,您应提供有效的保修卡作为保修凭 方可获得保修。如您不能提供有效的保修卡,则在我们 确认产品或部件属于保修范围的情况下,也可以为您提供保 但这不作为我们的义务。

## 不适用保修的情况

如产品存在下列清况,本文件项下的保证和服务将不适用 产品或部件超过相应保修期: ②错误或不适当使用、维护 ①广中级的叶超过怕应味修测;②恒读或不适当使用、维护 或 保管导致的故障或损坏,如:不当搬运;非按产品合理 预期用途使用;不当插拨外接设备;跌落或外力挤压;接触 现的用述使用; 不当期级升货设置; 政治《377777151. 关照或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境; 3 由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏; ④产品或部件原有识别信息被修改变更或除 ; ⑤无有效保修卡; ⑥使用非合法授权、非标准或非公开 行的软件造成的故障或损坏; ⑦因不可抗力或意外事件道 及17的软件运成的故障或损坏; () 因不可加力或息外争性追 成的故障或损坏; (8) 其他非因产品本身质量问题导致的故障 武揚怀、選上述情况 你应向相关责任方型求解决 抽生? 件或软件显数产品不能下堂使用的 不是保修范围内的故 。产品使用过程中正常的脱色,磨损和消耗,不是保修范

# 

注:此表应由销售商盖章确认。 保修期(月) 保修服务类 电路板

如闪光管、造型灯

锁紧装置, 包装

电源线, 同步线等

## 12 客户送修 3 客户送修 充电器、等带电性能 12 客户送修

无 无保修

# Add: Building 2, Yaochuan Industrial Zone, Tangwei Community, -mail: godox@godox.com Made in China

## 神牛产品售后服务电话 0755-29609320-8062

This RGB LED Video Light LED6R is a multifunctional RGB light with multicolor, dual color temperature, and FX light effects mode, which is suitable for almost all shooting occasions e.g. live, make up, portrait and product shooting video and recording etc. It can be used on camera independently or in combination with easy operation and great portability.

- Main Features Switch freely between LED CCT mode, RGB recycle mode and 13 kinds of FX light effects mode Easy to adjust color temperature, brightness and color
- . With huilt-in lithium hattery and it can be charged
- through Type-C USB port With magnetic absorbed function it can be absorbed onto the iron surface
- · Can be used independently or in combination with cold shoe mounting base and slots
- Fashionable in appearance, intuitive in operation, and
- portable in carrying

## **Declaration of Conformity:** Declaration of Conformity

GODOX Photo Equipment Co. Ltd. hereby declares that this and other relevant provisions of Directive 2014/30/EU. They are allowed to be used in all EU member states. or more information of DoC, Please click this web link http://www.godox.com/DOC/Godox\_LED6R\_DOC.pdf

# GODOX Photo Equipment Co., Ltd.

Tel: +86-755-29609320(8062) Fax: +86-755-25723423 godox.com

# **∴** Warning

As this product do not have waterproof function please take measures of waterproof in rainy or damn environment △ Do not use this product in the presence of

## flammable gases, chemicals and other similar materials. In certain circumstance, these materials may be sensitive to the strong light emitting from this product and fire or electromagnetic interference may result.

As this product has built-in lithium battery, do not disassemble, impact, squeeze or put it into fire. If serious bulge occurs, please do not use. Do not use or store the product if the ambient temperature reads over the range of -10°C to 40°C. Please charge the product with included adapter and correctly operate it within the defined voltage and working temperate according to the instruction manual.







08. Mode Selection Button

09 Adjustment Button 10. Light Effects Button 04. Type-C USB Charging Port 11. Display

# What's in the Box

01. LED Beads

02 Diffusion

03 1/4"Cold Shoe

05 Cold Shoe Slot

06. Cold Shoe Base

Mounting Base







# Batterv

可拆卸 休用丰会长

讨流保护, 短路保护。

2 不严告诉却故罢工业由

能会减弱 屋正堂和象

开关推钮推至ON, 灯打开,

屏幕显示主机当前灯光参数

信息,推至OFF灯关闭。

/ 由冰床田坦座广注位火州的坝宁从田

5. 长期不使用、请充电至70%再放置。

6. 为了延长电池使用寿命。建议每3个月讲行—

闪烁为充滞。

 
少农中亿美

操作说明

1. 灯设置

11 开关机

注意事项:



3. Charge the battery by using the 5V 2A charger.

# Cautions:

- I. No over 24 hours' continuous charging. Store in dry, cool, ventilated places. 3. Do not put aside or into fire.
- 4. Dead batteries should be disposed according to local regulations. 5. Please charge the battery to approx. 70% before
- being placed for long time. 6. If the battery had ceased using for over 3
- It's normal that the battery will be degraded after a period's usage for the battery life limitation.



# and the current parameters will be displayed. Push the power

### The light can be fixed on the equipment with cold shoe months inlease make a full recharge or hot shoe through its cold shoe mounting base.

# 1. Light Setting

Operation

1.1 Power ON/OFF

Please push the power switch onto ON to power on the light

# 1.2 Mode Selection: CCT Mode/Colorful Mode/

overcharge, overdischarge, overcurrent, and short

ong press the M button to 3500k 100₅ switch different modes: dienlayed CCT means his color mode and HSI means colorful mode.

Light Effects Mode



# 1.3 Installation and Multi Usage

It can be fixed on the equipment with 1/4"sockets e.g. pan-tilt, tripod and light stand With built-in magnet in its back, this light can be absorbed on the subjects with iron surface. And the three cold shoe sockets enable this light to be installed on the equipment with cold shoe mounting



## 2. CCT mode: long press the M button to choose this mode

2.1 Short proce the M button to choose the value to be adjusted. 3500x 100% 2.2 Color temperature adjustment: press the upper

adjustment button ⊙ to increase the color temperature value while lower button ⊙ to decrease. Short press the

utton once and the color temperature value will changes in 100K. Long press the button to adjust the value from 3200K to 6500K quickly. 2.3 Brightness adjustment: press the upper adjustment button (1) to increase the brightness value while lower

3.2 H hue adjustment: press the upper adjustment button to increase the hue value while lower button (v) to decrease. Short press the button once and the bue value.

tton⊙to increase the saturation value while lower button to decrease. Short press the button once and the saturation value will changes in 1. Long press the button to adjust the value from 0 to 100 quickly.

to adjust the value from 0 to 100% quickly.

## 4. FX Light Effects Mode (13 categories)

## 4.1 Press the FX button to enter light effects modes. Then short press the FX button to switch the 13 effects in recycle while long

button () to decrease. Short press the button once and the color temperature value will changes in 1%. Long press the button to adjust the value from 0 to 100% quickly.

## 3 Colorful mode:

long press the M button to choose this mode. 3.1 Short press the M hutton to choose the value to be adjusted.

will changes in 1\*. Long press the button to adjust the value from 0 to 360° quickly. 3.3 S Saturation adjustment: press the upper adjustment

3.4 Brightness adjustment: press the upper adjustment button (v) to decrease. Short press the button once and the brightness value will changes in 1%. Long press the button

pressing to change them quickly. 4.2 There are 13 categories to be selected according to your demands No. Display Light Effects

	1	Ð	RGB Recycle
	2	**	Flash
	3	•	Laser
	4	4	Lightning
	5	Ô	Broken Bulb
	6	ΤV	TV
	7	٥	Candle
	8	<b>※</b>	Fire
	9	-\$}-	Firework
	10	Ä	Police Car

Fire Truck

13 **SOS** sos

Ambulance

# **Technical Data**

1800m∆h ower Source of Charging 00% Illuminance(LUX)(0.5m)(a 2H-10H

77\*66\*30 mm

# Maintenance

dedusted regularly

- Shut down the device immediately should abnormal operation be detected.

- It is normal for the light beads to be warm when in - Maintenance of the light must be performed by our authorized maintenance department which can

- Avoid sudden impacts and the product should be

provide original accessories. This product except consumables is supported with a one-year warranty. Lithium battery is supported with six months warranty. Unauthorized service will void the warranty.

- If the product had failures or was wetted, do not use it until it is repaired by professionals. - Changes made to the specifications or designs may not be reflected in this manual.

# Warranty

	Product Information	Model	Product Code Number	
	Customer Information	Name	Contact Number	
		Address		
Seller		Name		
	Information	Contact Number		
Address  Date of Sale		Address		
		Date of Sale		

# Note: This form shall be sealed by the seller.

Applicable Products

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day/purchase date) when the product is bought for the first time. And the purchase date is considered as the date registered on the warranty card when

# How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the produapplying for maintenance service, you should provide valid warrant card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory involved in the maintenance scope, but that shall not be considered a our obligation.

# Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ①. The product or accessory has expired it warranty period; ②. Breakage or damage caused by inappropriate usage maintenance or preservation, such as improper packing, improper usage maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc. (3). Breakage or damage caused by non-authorized institution or stell in the newsork.

Maintenance Warranty Service

Godox After-sale Service Call 0755-29609320-8062