

合格证  
QC PASS

## 深圳市神牛摄影器材有限公司

地址: 深圳市宝安区福海街道塘尾社区耀川工业区厂房2栋  
电话: 0755-29609320(8062) 传真: 0755-25723423 邮箱: godox@godox.com

## GODOX Photo Equipment Co., Ltd.

Add: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District,  
Shenzhen 518103, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423  
E-mail: godox@godox.com

godox.com

Made in China



# Godox

影室闪光灯  
Compact Studio Flash

## SK II



使用手册  
Instruction Manual

## 前 言

感谢您购买使用SKII系列影室闪光灯!

此产品持久耐用, 功能齐全, 性能强大, 专为中小型影楼和摄影工作室人像拍摄、电商产品拍摄设计, 是一款高性价比的理想光源。在大型影棚中也可以作为补光工具提供高光、背景光、发型光。产品有以下亮点:

- 内置神牛2.4G无线X系统
- 40级闪光强度随意选择, LCD显示屏从1/16-1/1(或6.0-10.0)准确定位输出功率
- 选配X1、XT16或者FT-16功率遥控器, 可远程控制闪光灯功率大小、造型灯开关、蜂鸣器功能及引闪
- 精致轻巧, 保荣卡口, 兼容各类影室光效附件
- 150W大功率造型灯, 5%-100%手动调光
- 输出稳定, 同一功率连续输出变化不超过2%
- 具备防预闪功能, 带一次预闪功能的相机用光控可实现同步拍摄
- 人机工程学面板, 3秒后调节参数智能记忆、开机自动恢复

## 目 录

- |    |          |    |           |
|----|----------|----|-----------|
| 01 | 前言       | 05 | • 试闪按钮    |
| 02 | 警告       | 05 | • 同步触发    |
| 02 | 注意事项     | 05 | • GR/CH按钮 |
| 03 | 部件       | 06 | • 光控使用    |
|    | • 机身     | 06 | • 声音提示    |
|    | • LCD显示屏 | 06 | • 组合键     |
|    | • 附件     | 06 | • 报警显示    |
|    | • 可选购附件  | 06 | • 记忆存储功能  |
| 04 | 使用       | 06 | • 无线控制功能  |
| 04 | • 固定闪光灯  | 07 | • 装卸闪光灯管  |
| 05 | • 接通电源   | 08 | 产品参数      |
| 05 | • 造型灯使用  | 08 | 维护保养      |
| 05 | • 功率调节   |    |           |

## 警告

在使用本设备前请仔细阅读以下警告内容, 并妥善保管以便所有本产品使用者可随时参阅。

- ▲ 请勿私自拆卸产品, 如产品出现故障须由本公司或授权的维修人员进行检查维修。
- ▲ 请保持干燥: 请勿用湿手接触产品, 亦不可将产品浸入水中或暴露于雨中。
- ▲ 请勿让儿童接触本产品。
- ▲ 摄影灯适用于通风的环境, 使用时请保持灯光源部分及散热孔不被堵塞, 请勿在易燃易爆的环境中使用。
- ▲ 摄影灯采用电源插头做为断接装置, 应保持随时便于操作。
- ▲ 使用时严禁用手接触灯光发热部件。
- ▲ 安装及连接附件时, 请关闭开关断开电源, 装卸闪光灯管/造型灯时, 请确认灯管为冷却状态, 避免烫伤, 还需佩戴绝缘手套。
- ▲ 请勿将闪光灯灯头正对人眼闪光(特别是婴儿的眼睛), 否则可能会在短时间造成视力障碍。
- ▲ 在不使用时, 请断开电源。

## 注意事项

- ▲ 闪光灯在全功率的情况下连续引闪30次后, 需冷却3分钟左右。如果连续使用而不冷却就会产生高温积热。
- ▲ 不可长时间连续使用造型灯, 否则可能造成安装在灯头上的柔光箱等易燃附件燃烧。有易燃附件时建议不要连续使用造型灯超过10分钟。如使用超过10分钟, 请冷却1分钟后继续使用。
- ▲ 使用束光筒时, 请勿长时间点亮造型灯或过频闪光(全功率每分钟不多于6次)。积热会导致闪光灯外壳受损或造成灯的损坏。
- ▲ 避免突然的碰撞, 防止闪光灯管或造型灯受损。


## 部 件

### • 机身



- |                 |               |            |
|-----------------|---------------|------------|
| 1. 电源插座         | 8. BUZZ蜂鸣按钮   | 15. 保险丝座   |
| 2. 同步线插孔        | 9. 外置无线控制插座   | 16. 托架     |
| 3. 电源开关         | 10. LCD显示屏    | 17. 伞孔     |
| 4. TEST试闪按钮     | 11. 光控接收器     | 18. 方向调节把手 |
| 5. MOD/OFF造型灯按钮 | 12. 造型灯指示灯    |            |
| 6. S1/S2光控模式按钮  | 13. 试闪指示灯     |            |
| 7. GR/CH频道/组别按钮 | 14. 调节旋钮+SET键 |            |

### • LCD显示屏

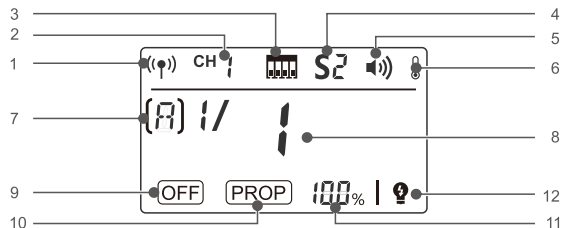

- |              |                |             |
|--------------|----------------|-------------|
| 1. 2.4G内置无线符 | 6. 温度报警显示      | 11. 造型灯在百分比 |
| 2. 内置无线频道    | 7. 内置无线组别      | 显示功率模式      |
| 3. 内置无线频道拨码盘 | 8. 闪光灯功率显示     | 12. 造型灯在闪光灯 |
| 4. 光控显示      | 9. 造型灯关        | 引闪的时候灭      |
| 5. 声音显示      | 10. 造型灯在PROP模式 |             |


### • 附件

1. 电源线
2. 灯头保护罩
3. 造型灯
4. 说明书



### • 可选购附件

可搭配本公司以下摄影附件使用，以获得最佳的拍摄效果和使用体验：X1、XT16或FT-16功率遥控器、逆变器、柔光箱、反光伞、灯架、蜂巢、雷达罩、束光筒等。

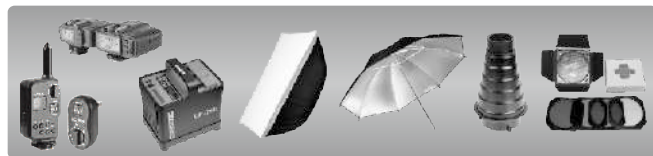

## 使 用

### • 固定闪光灯

1. 取下灯头保护罩，装上造型灯。(在卡口上安装了光效附件后如需取下，请往后按压灯头上的附件释放杆，同时逆时针旋转附件至松开即可，如图)
2. 将闪光灯设备安装在一个合适的灯架上，调整好托架(16)并扭紧固定，根据需要使用方向调节把手(18)来调节灯的方向。伞孔(17)可以插上各类影楼伞。



## • 接通电源

通过电源线接通交流电源与闪光灯，拨动闪光灯上的电源开关(3)。

## • 造型灯使用

造型灯按键(5)短按可选择造型灯的模式(OFF、PROP、百分比)；长按可以开启或关闭造型灯在引闪的时候灭的功能。

造型灯点亮4小时后会自动关闭，以防在无人状态的长时间点亮，导致高温积热产生。

**OFF：**造型灯关闭。

**PROP：**造型灯的功率随着闪光灯的变化而变化，闪光灯功率越大，造型灯越亮

**百分比：**手动调节造型灯亮度(5%-100%)。

## 设置：

- 1、屏幕显示<OFF>时，短按<MOD/OFF>键进入PROP模式，令屏幕显示PROP。
- 2、屏幕显示<PROP>时，短按<MOD/OFF>键进入百分比调节模式，令屏幕显示百分比亮度。短按SET键，令百分比亮度闪烁，旋转调节旋钮可从5%至100%选择亮度。再次短按SET键，退出调节。
- 3、屏幕显示<PROP>时，短按<MOD/OFF>键可返回<OFF>模式。
- 4、在非<OFF>模式下，长按2秒<MOD/OFF>键开启造型灯在引闪的时候灭的功能，屏幕显示(🔇)，再长按<MOD/OFF>键退出此模式。



如有易燃附件安装在灯头上，不可长时间点亮造型灯，最好是点亮10分钟后冷却1分钟再继续使用，并注意易燃附件的温度。

## • 功率调节

闪光功率通过调节旋钮(14)来控制，可以从“1/16”至“1/1”自由调节，LCD显示屏(10)将对所选择功率作准确显示，满足客户在不同环境下对光源的要求。LCD显示屏显示“--”时，表示闪光引闪功能关闭。从高档调节至低档，需要按下试闪按钮来放电以获得所需的功率。

## • 试闪按钮

欲使闪光灯测试闪光而不拍照，请按试闪按钮(4)。摄影师可以通过试闪按钮结合调节旋钮(14)来调节闪光亮度。按住SET键并开机，可查看闪光灯的版本号！

## • 同步触发

同步线插孔(2)规格为Φ3.5mm，此处可插入同步线或者触发器触发插头对闪光灯进行同步引闪。

## • GR/CH按钮

短按可以调节内置无线组别，LCD组别显示在闪烁时，旋转调节旋钮可以更改组别；长按可以选择内置无线频道，LCD频道显示在闪烁时，旋转调节旋钮可以更改频道。



## • 光控使用 光控模式有3种选择，由SLAVE光控模式按键(6)进行切换。

- 非光控模式：LCD没有显示S1或S2，表示光控功能已关闭。
- S1光控单元设置：按<S1/S2>键选择S1功能，闪光灯可作为副灯使用，创造多种照明效果，适用于手动闪光环境。它会与主闪光灯的第一次闪光同步触发闪光，效果与使用无线引闪器一致。
- S2光控单元设置：按<S1/S2>键选择S1功能，闪光灯可作为副灯使用，适用于TTL闪光环境。具有防预闪功能，使用带一次预闪功能的相机能用光控实现同步拍摄。它会与主闪光灯的第二次闪光同步触发闪光，即2次光控引闪。

## • 声音提示

蜂鸣按键(8)控制蜂鸣提示的打开和关闭，当LCD显示声音符时，表示蜂鸣提示音打开；当LCD没有显示声音符时，表示蜂鸣提示音关闭。

每次回电充满时会响“BI——”一声，提示可以引闪。

## • 组合键

GR/CH键和S1/S2键同时长按可以开/关内置无线，LCD没有显示无线符和频道表示内置无线关闭，显示则表示内置无线开启。同时按住S1/S2键和BUZZ键，可恢复出厂设置。

## • 报警显示

E0 没有连接温度传感器

E1 充电中，1秒内检测电容电压没有上升

E2 温升最快的元器件超过额定温度

E3 放电电容电压>额定值+10%

报警声音，BIBI 0.5s响一次，单击SET键可停止报警鸣叫。

## • 记忆存储功能


闪光灯设有参数记忆功能，调节参数3秒后未变更的，闪光灯会自动存储设置好的参数。下次开机使用时初始设置跟关机前一致。

## • 无线控制功能


闪光灯内置2.4G无线传输，可以配合X1、XT16功率遥控器使用。

同时按下<GR/CH>和<S1/S2>按钮开启内置无线，令屏幕显示<📶>，此时表示进入内置2.4G无线状态。如果在拍摄现场不止一个无线闪光系统，您可以通过更改通讯频道来防止信号干扰。保证主控单元和从属单元设置为相同的频道编号即可。


## 设置通讯频道



1 长按<GR/CH>按钮2秒, 频道编号闪烁显示。




2 旋转调节旋钮从1至32中选择频道。




3 按下<SET>设置按钮, 确定。


## 设置通讯组别



1 短按<GR/CH>按钮, 组别编号闪烁显示。



2 旋转调节旋钮从0至F中选择组别。



3 按下<SET>设置按钮, 确定。

## 外置无线控制功能

闪光灯内置无线控制插座, 配合特定遥控器使用, 您可以实现对闪光灯的无线控制。将FT系列遥控器的接收端插入无线控制插座, 手持遥控器发射端, 即可远程控制闪光灯的功率开关和大小、闪光灯触发等。您也可以将发射端置于相机热靴上, 通过相机快门来进行同步引闪。



• 更多遥控器的使用方法, 请查阅FT系列遥控器的说明书。

## 装卸闪光灯管

关闭所有电源并拔下电源线, 带上绝缘手套, 将闪光灯管上的铁丝拧松, 用平衡力拿住灯管两脚间, 轻轻往外拉出卸下旧灯管。将旧灯管两脚上的套管取下套到新灯管两脚, 拿住新灯管两脚间, 对准灯头上两铜柱, 用平衡力往里推进。最后将铁丝绕灯管弹片并拧紧固定好灯管。



## 产品参数

型号	SK300II	SK400II
闪光能量	300Ws	400Ws
闪光指数(m ISO 100)	58	65
色温	5600±200k	
电源电压	AC110V-120V~60Hz或AC220V-240V~50Hz	
闪光功率调控	OFF, 6.0~10.0(1/16~1/1)	
造型灯功率	150W	
造型灯档位	5%~100%	
回电时间	0.1~1.5秒	
闪光触发控制方式	同步线插孔, 光控感应, 试闪按钮, 无线控制插座	
闪光持续时间	1/2000~1/800s	
同步端口输出参数	5V	
USB端口输出参数	5V/200mA (仅限神牛接收器)	
保险丝	AC220V-240V~50Hz: 5A AC110V-120V~60Hz: 8A	
尺寸	灯体直径Φ12.7cm 含把手高20.6cm 含保护罩长34cm	灯体直径Φ12.7cm 含把手高23.2cm 含保护罩长38cm
净重	约1.9kg	约2.1kg

## 维护保养

- 闪光灯在工作时, 如发现异常, 应立即关掉电源, 查明原因。
- 灯体应避免震动, 平时注意表面除尘。
- 灯体稍有发热为正常现象, 无特别需要时, 勿连续引闪。
- 除灯管与造型灯消耗品允许用户用原厂配置的自行装卸更换外, 闪光灯的其他维护概由本厂指定可供原厂配件之维修部负责。
- 1年保修, 由于灯管与造型灯为消耗品, 不在1年保修范围。
- 擅自检修此闪光灯, 经发现将取消闪光灯之一年保修期, 维修需要收取相关费用。
- 如果本品出现故障或者被水淋湿, 唯有在专业人员维修后方可继续使用。
- 在维修和清洁本品时请断开电源。
- 如有技术更改, 恕不另行通知。

## FOREWORD

Thanks for choosing SKII series studio flash. It is a lightweight, compact and durable flash with complete functions. Design for shooting studio portrait and e-commerce product. This product is suitable for head shot, waist shoot, and certificate photography, as well as product shooting, etc. It can also offer high light, background light, or hair light in large studios and workshops. The SKII flash offers:

- Built-in Godox 2.4G wireless X system
- Precise output displayed on LCD panel, 40 steps from 1/16 to 1/1 (or 6.0 to 10.0)
- Use optional X1, XT16 or FT-16 trigger to control the flash power ratio, modeling lamp and buzzer, as well as flash triggering
- Compact and lightweight body with Bowens mount to add almost any studio light shapers
- 150W modeling lamp adjusts in 5% to 100% power levels
- Outstanding output stability, no more than 2% shifts when under the same output
- Anti-preflash function enables synchronization with cameras that have a one-preflash firing system
- Auto memory and recovery of adjusted panel settings

## CONTENTS

09	Foreword	14	• Slave Trigger Model
10	Warning	15	• Buzz Function
10	Caution	15	• Key Combination
11	Names of Parts	15	• Alarm Display
11	• Body	15	• Memory Function
12	• LCD Panel	15	• Wireless Control Function
12	• Accessories	17	• Tube Replacement
12	• Separately Sold Accessories	17	Technical Data
13	Operations	18	Maintenance
13	• Flash Preparation		
13	• Power Connection		
13	• Modeling Lamp		
14	• Power Output Control		
14	• Test Button		
14	• Sync Triggering		
14	• GR/CH Button		


## Warning

To prevent damage to the product or injury to you or to others, read the following warnings in their entirety before using this product. Keep these safety instructions where users can read them for ready reference.

- ▲ Do not disassemble or modify. Should the product break down, send the defective back to the authorized service center for inspection and maintenance.
- ▲ Keep dry. Do not handle with wet hands, immerse in water, or expose to rain.
- ▲ Keep out of reach of children.
- ▲ Please put the device in a ventilation environment and keep the parts of lighting and heat dissipation holes are unobstructed. Do not use in flammable environment.
- ▲ As this product adopts make and break device, please keep it easy to be used.
- ▲ No touching the heating parts of this product.
- ▲ Please turn off the power and wear insulated gloves before installing and connecting accessories. When replacing the tube or modeling lamp, please make sure that the tube is cool and wear insulated gloves to prevent burns.
- ▲ Do not flash directly towards naked eyes (especially those of babies), otherwise it may lead to visual impairment.
- ▲ Disconnect from the power supply when it will not be used for an extended period.
- ▲ For continued protection against risk of fire replace only with same Type F8AL 250V fuse.
- ▲ An apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection.
- ▲ The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- ▲ After 30 continuous flashes at full power, the flash should be cooled down for about 3 minutes. Overheating will occur if it is used continuously without cooling down.
- ▲ Do not keep using the modeling lamp for a long time; otherwise flammable accessories attaching to flash head, e.g. softbox will get burnt. A 10-minute time is recommended in this case. After 10 minutes, cool it down for 1 minute.
- ▲ When using a snoot, do not keep the modeling lamp on for a long time or fire too frequently (not over six times for one minute). Overheating will result in damages for strobe housing and/or studio light.
- ▲ Avoid sudden impacts as this can damage the flash tube and/or modeling lamp.
- ▲ The apparatus shall not be exposed to tripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- ▲ Do not touch the area around this symbol since it is hot.


## NAMES OF PARTS

### • Body

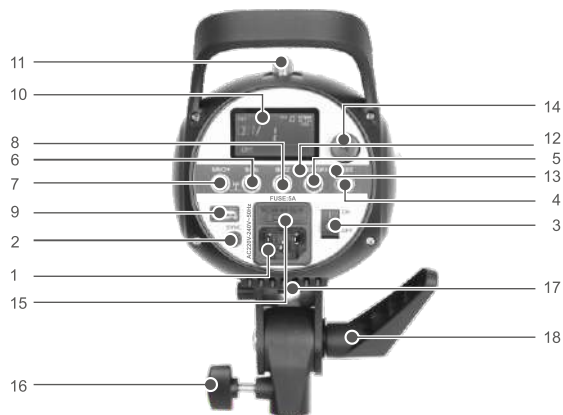

- |                                 |                                |
|---------------------------------|--------------------------------|
| 1. AC Power Socket              | 10. LCD Display                |
| 2. Sync Cord Jack               | 11. Light Sensor               |
| 3. Power Switch                 | 12. Modeling Lamp Indicator    |
| 4. Test Button                  | 13. Test Indicator             |
| 5. MOD/OFF Modeling Lamp Button | 14. Select Dial + SET Button   |
| 6. S1/S2 Slave Model Button     | 15. Fuse                       |
| 7. Group/Channel Button         | 16. Mounting Bracket           |
| 8. BUZZ Button                  | 17. Umbrella Input             |
| 9. Wireless Control Port        | 18. Direction Adjusting Handle |

### • LCD Panel

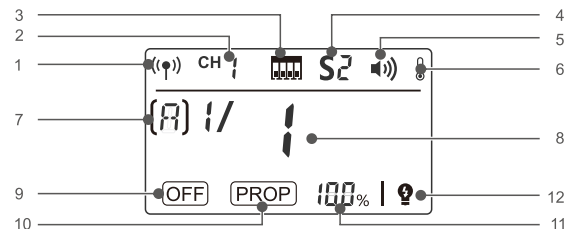

- |  |  |
|--|--|
| 1. Built-in 2.4G Wireless Transmission | 8. Flash Output                                    |
| 2. Built-in Wireless Channel           | 9. Modeling Lamp is off                            |
| 3. Built-in Wireless Channel Dial      | 10. Modeling Lamp is in the PROP mode              |
| 4. Slave Model Indicator               | 11. Modeling Lamp shows the power in percentage    |
| 5. Beep                                | 12. Modeling Lamp is off when triggering the flash |
| 6. Temperature Alarm Display           |  |
| 7. Built-in Wireless Group             |  |


### • Accessories

1. Power Cord
2. Lamp Cover
3. Modeling Lamp
4. Instruction Manual



### • Separately sold accessories

The product can be used in combination with the following accessories sold separately, so as to achieve best photography effects: X1, XT16 or FT-16 remote control, Power Inverter, Softbox, Photographic Umbrella, Light Stand, Barndoor, Snoot, etc.

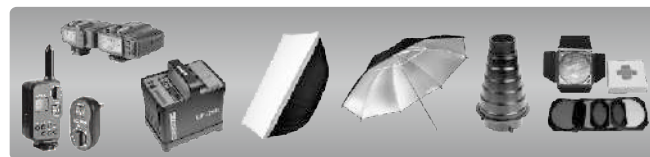


## OPERATIONS

### • Flash Preparation

1. Take down the lamp cover. Install the modeling lamp and put on the glass protection cover and the standard reflector.

(To uninstall the standard reflector, press the release button on the flash head and turn the standard reflector counter-clockwise to take it out, as illustrated in the picture.)

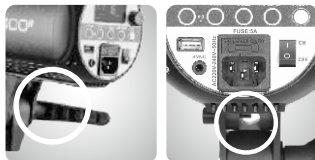

2. Attach the flash unit onto an appropriate light stand. Adjust the mounting bracket (16) for a good angle and make sure it is tightened and fixed. Use the direction adjusting handle (18) to adjust the flash to a desired direction. Umbrella input (17) is for different photo umbrellas to put in.

### • Power Connection

Use the power cord to connect the flash to an AC power source and turn on the power switch (3).

### • Modeling Lamp

Short press the Modeling Lamp Button (5) to choose the modeling lamp's mode (OFF, PROP and percentage); and long press the Modeling Lamp Button (5) to switch on or off the function that the modeling is off when triggering the flash.

Modeling lamp will be off automatically after lighting for 4 hours, avoiding overheating due to long-time lighting when the user is not nearby.

**OFF:** Modeling lamp is off.

**PROP:** The modeling lamp's power changes with the flash's power. The bigger power the flash has, the brighter the modeling lamp is.

**Percentage:** Adjust the modeling lamp's light brightness manually from 5% to 100%.

#### Setting:

1. When OFF is displayed, short press the <MOD/OFF> Button to enter PROP mode. Now the LCD panel shows PROP.
2. When PROP is displayed, short press the <MOD/OFF> Button to enter Percentage mode. Short press the SET Button and the percentage value is blinking. Turn the Select Dial to choose the light brightness from 5% to 100%. Short press the SET Button to exit.
3. When PROP is displayed, short press the <MOD/OFF> Button can back to <OFF> mode.
4. When in NON OFF mode, long press the <MOD/OFF> Button for 2 seconds to switch on the function that the modeling is off when triggering the flash. Now the LCD panel shows ( ). Long press the <MOD/OFF> Button again to exit this mode.



When there is flammable accessory on the flash unit, do not keep the modeling lamp on for a long time. It is recommended to cool it down for one minute after 10 minutes' working.

### • Power Output Control

Select dial (14) decides different power output, satisfying light requirements in different environment. The power is adjustable freely from 1/16 to 1/1 which will be accordingly shown on the LCD display (10). "--" on the display indicates that the flash triggering function is turned off. Press the Test button to discharge power when the flash output is adjusted from high to low.

### • Test Button

To fire the flash without taking a picture, press the test button (4). It can also help adjust the flash brightness when combined with the select dial (14). Press the SET button and turn on the flash to view its version.

### • Sync Triggering

The sync cord jack (2) is a  $\Phi 3.5\text{mm}$  plug. Insert a trigger plug here and the flash will be fired synchronously with the camera shutter.

### • GR/CH Button

Short press the GR/CH button can adjust the built-in wireless group. When the group indicator on the LCD panel is blinking, turn the select dial to change. And long press the GR/CH button can adjust the built-in wireless channel. When the channel indicator on the LCD panel is blinking, turn the select dial to change.

### • Slave Trigger Model

Three slave triggering models are available and can be set by pressing slave model button (6).

◆No optical control: S1 or S2 is not displayed on the LCD panel, indicating the slave triggering function is shut down.

◆Optic S1 Secondary Unit Setting: In M manual flash mode, press <S1/S2> button so that this flash can function as an optic S1 secondary flash with optic sensor. With this function, the flash will fire synchronously when the main flash fires, the same effect as that by the use of radio triggers. This helps create multiple lighting effects.

◆Optic S2 Secondary Unit Setting: Press <S1/S2> button so that this flash can also function as an optic S2 secondary flash with optic sensor in M manual flash mode. This is useful when cameras have pre-flash function. With this function, the flash will ignore a single "pre-flash" from the main flash and will only fire in response to the second, actual flash from the main unit.



### • Buzz Function

The sound button (8) is used for deciding whether there is sound reminder for ready flash after recharging. When the buzz indicator is on the LCD panel, the buzz function is working; when it is disappear, the buzz function is not working. A "BI" sound will be heard when it's fully charged.

### • Key Combination

Synchronously press the GR/CH button and the S1/S2 button can turn on/off the built-in wireless transmission. If there are no wireless and channel indicators displayed on the LCD panel, the built-in wireless transmission is off. On the contrary, the built-in wireless transmission is on. Synchronously press the S1/S2 button and BUZZ button to recover factory settings.

### • Alarm Display

- E0 The temperature sensor is not connected.
  - E1 When charging, the capacitance and voltage are not rising within 1 second.
  - E2 The fastest heating-up component is over the extra temperature.
  - E3 Discharged capacitance and voltage > rating +10%
- Alarm sounds, BIBI, ringing per 0.5 second. Press SET button to stop alarming.


### • Memory Function

The device is equipped with memory function for the panel setting. It will help remember the panel setting 3 seconds after you set it. When starting up the flash next time, the panel setting will be the same as that before powering it off.


### • Wireless Control Function

The flash unit has built-in 2.4G wireless transmission, which can be used together with X1 and XT16 flash trigger. Synchronously press the <GR/CH> Button and the <S1/S2> Button can turn on the built-in wireless transmission and the <S1/S2> is displayed. If there are other wireless flash systems nearby, you can change the channel IDs to prevent signal interference. The channel IDs of the master unit and the slave unit(s) must be set to the same.


#### Setting the Communication Channel



- 1 Long press the <GR/CH> Button for 2 seconds until the channel IDs is blinking.




- 2 Turn the Select Dial to choose the channel from 1 to 32.




- 3 Press the <SET> Button to confirm.


#### Setting the Communication Group



- 1 Short press the <GR/CH> Button for 2 seconds until the group IDs is blinking.



- 2 Turn the Select Dial to choose the group from 0 to F.



- 3 Press the <SET> Button to confirm.

The flash unit is built in with a Wireless Control Port so that you can wirelessly adjust the power level of the flash and the flash triggering. To control the flash wirelessly, you need a FT-16 remote control set (on-camera and on-flash). Insert its receive end into the Wireless Control Port on the flash and insert the transmit end into the camera hot shoe. Settings made on the hotshoe-mounted transmit and receive ends will be wirelessly communicated to the flash. Then you can press the camera shutter release button to trigger the flash. You can also hold the transmit end at hand to control your off-camera flash.



For full instructions on the use of FT series remote control, see its user manual.

### • Tube Replacement

Shut down the power and remove the power cord before replacing the flash tube. Wear insulated gloves to loosen the iron wire on the tube, keep a balanced hold on the two feet of the flash tube and pull out the old tube gently. Take down the feet casing from the old tube and put it on the new one. Hold two feet of the new tube, and target directly towards the two copper outlets, then push them slightly in. Twine the iron wire on the stainless steel sheet to fix the flash tube.



## TECHNICAL DATA

Model	SK300II	SK400II
Max Power (Ws)	300Ws	400Ws
Guide Number(m ISO 100)	58	65
Color Temperature	5600±200k	
Operating Voltage	AC110V-120V~60Hz or AC220V-240V~50Hz	
Power Output Control	6.0~10.0(1/16~1/1)	
Modeling Lamp (W)	150W	
Modeling Lamp Level	5%~100%	
Recycle Time	0.1~1.5s	
Triggering Method	Sync cord, Test button, Slave triggering, Wireless control port	
Flash Duration	1/2000~1/800s	
Parameters output from the sync cord jack	5V	
Parameters output from the USB port	5V/200mA (only for Godox receiver)	
Fuse	AC220V-240V~50Hz: 5A AC110V-120V~60Hz: 8A	
Dimension	Flash diameterΦ12.7cm, height of flash with handle 20.6cm length of flash with lamp cover 34cm	Flash diameterΦ12.7cm, height of flash with handle 23.2cm length of flash with lamp cover 38cm
Net Weight	Approx. 1.9kg	Approx.2.1kg

## MAINTENANCE

- Shut down the device immediately when it works abnormally and find out the reason.
- Avoid sudden impacts and the lamp should be dedusted regularly.
- It is normal for the lamp to be warm when in use. Avoid continuous flashes if unnecessary.
- Maintenance of the flash must be performed by our authorized maintenance department which can provide original accessories. The flash-tube and the modeling lamp are user-replaceable. Replacement tubes and lamps can be obtained from the manufacturer.
- This product, except consumables e.g. flash tube and modeling lamp, is supported with a one-year warranty.
- Unauthorized service will void the warranty.
- If the product had failures or was wetted, do not use it until it is repaired by professional.
- Disconnect the power when cleaning the flash or when changing the flashtube / modeling lamp.
- Changes made to the specifications or designs may not be reflected in this manual.

WarningOperating frequency:2412.99MHz – 2464.49MHz (only receive)

Declaration of ConformityGODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive2014/35/EU,2014/30/EU. They are allowed to be used in all EU member states.

For more information of DoC, Please click this web link:

<https://www.godox.com/eu-declaration-of-conformity/>

# 产品保修

尊敬的用户, 本保修卡是申请保修服务的重要凭证, 请您配合销售商填写并妥善保管, 谢谢!

产品信息	型号	产品条码
用户信息	姓名	联系电话
	通信地址	
销售商信息	名称	
	联系电话	
	通信地址	
	销售日期	
备注		

注:此表应由销售商盖章确认。

## 适用产品

本文件适用于相关《产品保修信息》(见后面说明)所列产品, 其他非属此范围的产品或部件(如促销品、赠品及其他出厂后附加的部件等)不在此保修承诺内。

## 保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算, 购买日以购买产品时保修卡登记日期为准。

## 如何获得保修服务

您可直接与产品销售商或授权服务机构联系, 也可拨打神牛产品售后服务电话, 与我们联系, 由我们的服务人员为您安排服务。申请保修时, 您应提供有效的保修卡作为保修凭证, 方可获得保修。如您不能提供有效的保修卡, 则在我们确认产品或部件属于保修范围的情况下, 也可以为您提供保修, 但这不作为我们的义务。

## 不适用保修的情况

如产品存在下列情况, 本文件项下的保证和服务将不适用 ①产品或部件超过相应保修期; ②错误或不当使用、维护或 保管导致的故障或损坏, 如: 不当搬运; 非按产品合理预期用途使用; 不当插拔外接设备; 跌落或外力挤压; 接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境; ③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏; ④产品或部件原有识别信息被修改变更或删除; ⑤无有效保修卡; ⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏; ⑦因不可抗力或意外事件造成的故障或损坏; ⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况, 您应向相关责任方寻求解决, 神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的, 不是保修范围内的故障。产品使用过程中正常的脱色, 磨损和消耗, 不是保修范围内的故障。

## 产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行:

产品类别	选件名称	保修期(月)	保修服务类型
部件	电路板	12	客户送修
	电池	3	客户送修
	充电器、电源线, 同步线等带电性能的部件。	12	客户送修
其他	如闪光管、造型灯泡、外壳、保护罩、锁紧装置、包装等。	无	无保修

神牛产品售后服务电话 0755-29609320-8062

# Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note:		

Note: This form shall be sealed by the seller.

## Applicable Products

The document applies to the products listed on the **Product Maintenance Information** (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

## Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the date(purchase date) when the product is bought for the first time, And the purchase date is considered as the date registered on the warranty card when buying the product.

## How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

## Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases: ①. **The product or accessory has expired its warranty period;** ②. **Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc;** ③. **Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment;** ④. **The original identifying information of product or accessory is modified, alternated, or removed;** ⑤. **No valid warranty card;** ⑥. **Breakage or damage caused by using illegally authorized, nonstandard or non-public released software;** ⑦. **Breakage or damage caused by force majeure or accident;** ⑧. **Breakage or damage that could not be attributed to the product itself.** Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

## Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following **Product Maintenance Information**:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Circuit Board	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Electrical parts e.g.battery charger, power cord, sync cable, etc.	12	Customer sends the product to designated site
Other Items	Flash tube, modeling lamp, lamp body, lamp cover, locking device, package, etc.	No	Without warranty

Godox After-sale Service Call **0755-29609320-8062**