

QC PASS



Wechat
Official Account

GODOX Photo Equipment Co., Ltd.

Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen


518103, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423 E-mail: godox@godox.com

www.godox.com

Made in China | 705-AD40P2-01



Godox

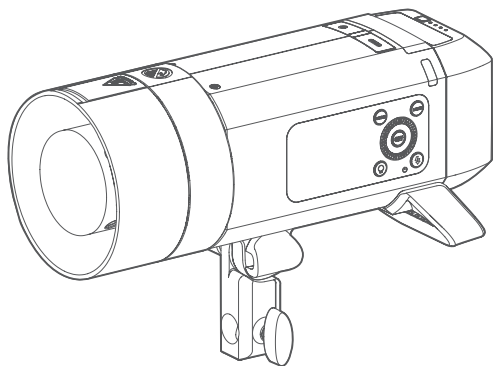

AD400Pro II

All-in-One Outdoor Flash

Instruction Manual

Contents

Important Safety Instructions	6
Foreword	8
Main Features	9
Name of Parts	10
Flash Body	10
Color Screen	12
What's Inside	13
Separately Sold Accessories	14
Installing Bowens Mount Adapter or Other Mount Adapters	14
Installing Accessories with Other Mounts	15
Installing the Attached Reflector with Other Mount Adapters	15
Installing and Disassembling Reflector	16
Installing and Disassembling Flash Tube	17
Loading and Unloading the Battery	18
Adjusting Flash Angle	19
Disassembling Bracket	20
Disassembling Handle	20
Power Switch	21
Battery Level Indication	21
Battery Activation Instructions	21
TTL: Auto Flash	22
M: Manual Flash	22
Optical S1 Secondary Unit Setting	22
Optical S2 Secondary Unit Setting	23
Display Flash Duration	23
Multi: Stroboscopic Flash	24
High-Speed Sync	25
Wireless (2.4G) Transmission	25
Wireless Settings	26
Wireless Flash Shooting	27
Wireless Multiple Flash Shooting	27

Flash Mode	28
Modeling Lamp	28
MENU Settings	29
Sync Triggering	30
Protection Functions	30
The Reason & Solution of Not Triggering in Godox	32
2.4G Wireless	
Technical Data	33
Firmware Upgrade	34

Important Safety Instructions

This product is a professional photographic equipment, to be operated by professional personnel only.

The following basic safety precautions must be followed when using this product:

All transport protective materials and packaging on the product must be removed before use.

1. Carefully read and fully understand the instruction manual before use and strictly follow the safety instructions. Failure to do so may result in death, serious injury, damage to the product, or other property damage.
2. High voltage exists when the flash is powered on. Internal capacitors will remain charged for some time after power off.
3. This product is a professional lighting fixture, children are prohibited from using it. Children must be closely supervised by adults when approaching the fixture, to prevent collisions with the fixture or unauthorized use that could cause personal injury.
4. This is not an ordinary lighting fixture and must not be used for general illumination. Anyone with a history of eye damage or sensitivity should avoid using this fixture or looking directly at it.
5. Extreme caution must be exercised when using it, do not touch high-temperature parts such as flash tubes to avoid burns.
6. Do not point the flash directly at the eyes (especially baby's eyes) under any circumstances, as this could impair vision in a short time. Turn off immediately if discomfort occurs, stop using, and seek medical attention promptly.
7. If the flash tube is damaged, stop using it immediately and contact the manufacturer, service agent, or qualified repair personnel for a replacement to prevent accidents.
8. Do not use damaged equipment or accessories. Allow professional repair technicians to inspect and confirm normal operation before continuing use after repairs.
9. Disconnect power source or remove batteries (if it has one) before replacing flash tube, protective glass, or fuses. Allowing 10 minutes to cool before replacing flash tube, and wear insulated or heat resistant gloves when operating.
10. Turn off power before connecting or disconnecting plugs from outlets. Ensure plugs are fully inserted when connecting.
11. Stop using immediately if the product shell is cracked due to falling, squeezing, or strong impact, to avoid touching the internal electronic components and getting an electric shock.
12. Some products have long power cords, please place them properly to avoid contact with heat sources or tripping others. It is recommended to use the original power cord. Damage caused by non-original cords is not covered by the warranty.
13. Unplug the equipment power plug from the power socket before cleaning or

maintenance. Do not pull the power cord forcibly, use both hands to hold the plug end and pull it out.

14. This device is not waterproof. Keep it dry and avoid immersing it in water or other liquids. It should be installed in a ventilated and dry location and avoid using in rainy, humid, dusty, or overheated environments. Do not place items above the device or allow liquids to flow into it to prevent danger.
15. Do not disassemble without authorization. If the product malfunctions, it must be inspected and repaired by our company or authorized repair personnel.
16. Before storing the device, ensure it has completely cooled down and the power cord is unplugged, then put it in the protective case or a ventilated dry location.
17. Do not place the device near alcohol, gasoline, or other flammable volatile solvents or gases such as methane and ethane.
18. Do not use or store this device in potentially explosive environments.
19. Do not cover the heat dissipation port!
20. Do not use accessories not been approved by our company, as this may cause fire, electric shock or personal injury.
21. Clean gently with a dry cloth. Do not use a wet cloth as it may damage the device.
22. This instruction manual is based on rigorous testing. Changes in design and specifications are subject to change without notice. Check official website for latest instruction manual and product updates.
23. Some products are powered by lithium batteries, who have limited lifespans and will gradually lose their charging capacities, which is irreversible. As the battery ages, the product's battery life will decrease. The lifespan of lithium battery is estimated to be 2 to 3 years. Please regularly check the battery, and if the charging time significantly increases or the battery life significantly decreases, consider replacing the battery.
24. Some products are equipped with lithium batteries. The following are the storage recommendations: Charge the battery to about 50% before storage. Charge it to about 50% at least every six months. Removable batteries should be stored separately. The storage temperature should be between 0°C and 40°C.
25. For products powered by lithium batteries. Please note:
 - Do not disassemble, crush, or puncture the battery;
 - Avoid short-circuiting the battery contacts;
 - Do not expose the battery to fire or water;
 - Do not expose the battery to temperatures above 60°C;
 - Keep out of reach of children;
 - Protect the battery from excessive shock or vibration;
 - Do not use a damaged battery;
 - If the battery leaks, avoid contact with the leaking fluid;
 - If the battery fluid comes into contact with your eyes, immediately rinse with water for at least 15 minutes. Lift your eyelids until there are no signs of fluid and seek medical

- attention promptly.
26. Confirm and comply with all relevant local laws and regulations when handling any batteries.
 27. The warranty period for this device as a whole is one year. Consumables (such as batteries), adapters, power cords, and other accessories are not covered by the warranty.
 28. Unauthorized repairs will void the warranty and will incur charges.
 29. Failures from improper operation is not covered under warranty.
 30. Danger of explosion if the battery are not replaced properly, danger of fire or explosion if replaced with the wrong type of battery pack, replace only with battery of the same type or equivalent. Replace by service personnel only, not general personnel. Do not disassemble the product or disassemble the battery.
 31. The battery must not be exposed to conditions such as sunlight, fire, or similar excessive heat. Do not expose to rain or water.
 32. Consumers who use a power adapter for charging should purchase a power adapter that is CCC certified and meets the standard requirements.
 33. The Battery is not allowed to be disassembled, hit, crushed or thrown into fire. Do not continue to use if it is seriously inflated. Do not place in a high temperature environment. Do not use after immersion in water.
 34. When using, it should be placed in a place where it is easy to dissipate heat, and should not be placed on the bedside, bedding, in a package or other environments that are not easy to dissipate heat. Keep out of contact with infants and young children, and children should use under adult guidance.

Foreword

Thank you for purchasing!

All-in-one outdoor flash AD400ProII has strong power, detachable lithium battery pack and great portability. When using Godox 2.4G wireless X system, it can be triggered by XPro/XProII/X2T/X3 series flash trigger in M/Multi/TTL mode. When using in combination with Godox TTL camera flashes, outdoor flashes, studio flashes, etc, your shooting will become simpler. single fixture overshadowing the sunlight, bare flash tube and reflector make a perfect match for outdoor and live shooting, AD400ProII is an ideal light source for freelance commercial photographers, journalists, photography enthusiasts, wedding documentary photographers, etc.

Main Features

Quick Recycle Time: 0.01s~1s.

Wide-range Accessories: Built-in Godox mount, attached Bowens mount adapter, together with optional Broncolor, Profoto and Elinchrom mount adapters.

Stable Color Temperature: Shift around $\pm 75K$ over the entire power range with this function.

Amazing Freeze Mode: Quicker recycle time up to 1/27770s in this mode.

LED Modeling Lamp: 30W bi-color large LED modeling light freely adjusts brightness and CCT.

Studio Quality Light: Up to 400Ws, GN 72 (ISO 100, in meters and with efficient reflector), 460 full power flashes, 1/8000s high-speed sync.

Precise Power Adjustment: From full power 1/1 to 1/512 with ± 0.1 increment each step.

Wide Compatibility: Fully support TTL auto flash systems of Canon, Nikon, Fujifilm, Olympus, Sony, Leica, Pentax, etc.

Wireless Control: With built-in 2.4G wireless X system to achieve remote control by optional Godox flash triggers, and 3.5mm sync cord jack to achieve various sync triggering modes.



Distinct Group Colors: 16 groups with different colors to quickly distinguish even in remote distance usage.


Simple Operation: 2.4" color screen together with steplessly rotatable select dial, detachable battery pack design.

Note: Although AD400ProII is equipped with 2.4G wireless reception, it supports reception of 433MHz signals with an external 433MHz receiver (e.g. FR433 receiver) via a USB-C interface.

Name of Parts

Flash Body

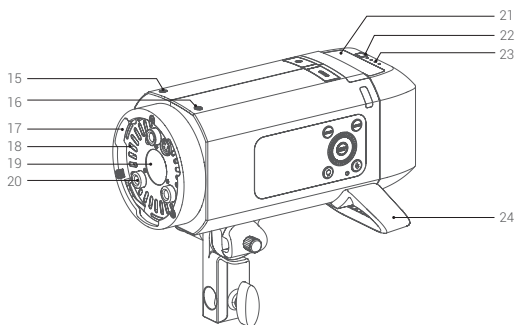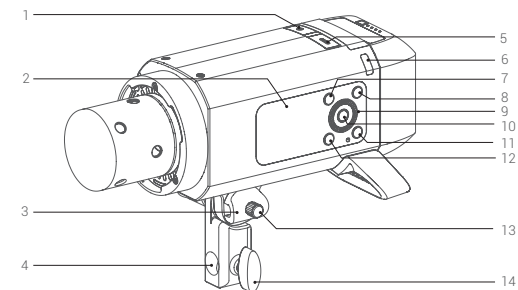

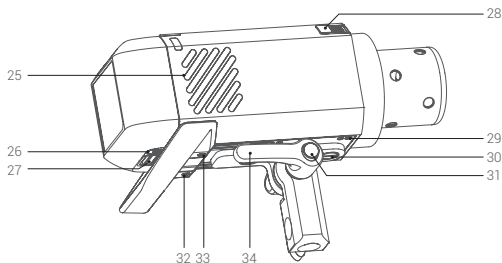

1. 3.5mm Sync Cord Jack(wrench is placed on the side)
 2. 2.4" Color Screen
 3. Umbrella Hole (for installing the photography umbrella)
 4. Bracket
 5. USB-C Port (for firmware upgrade/433MHz receiver connection)
 6. Group Indicator
 7. MENU Button
 8. MODE Button
 9. Select Dial
 10. SET Button
 11. Power Switch/Test Button
 12. Modeling Lamp Button
 13. Umbrella Hole Locking Knob
 14. Bracket Locking Knob
 15. Mount Locking Screw 1(with attached wrench)
 16. Mount Locking Screw 2(with attached wrench)


17. Godox Mount
 18. Fan Outlet
 19. LED Modeling Lamp
 20. Flash Tube Installing Port
 21. Photocell Sensor
 22. Battery Indicator Button
 23. Battery Level Indicator
 24. Handle
 25. Fan Inlet
 26. Battery Charging Port
 27. Battery Detaching Pusher
 28. Mount Fixing Pusher
 29. Other Mount Adapter Screw Hole
 30. Bracket Fixing Screw
 31. Handle Button
 32. Handle Locking Screw 1
 33. Handle Locking Screw 2
 34. Grip

Color Screen


TTL Auto Flash (available in wireless mode)




M Manual Flash

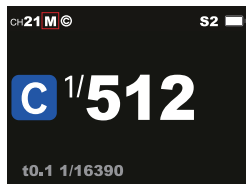


Multi Flash

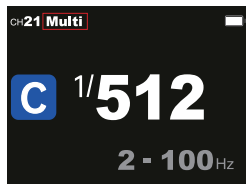

What's Inside

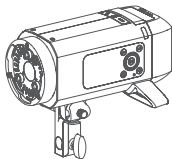

Flash Body × 1



Flash Tube × 1



Lithium Battery × 1



Charger × 1



Power Cord × 1



Bowens Mount Adapter × 1



Wrench × 1



Carry Bag × 1



Reflector × 1



Protection Cover × 1



Instruction Manual × 1

Separately Sold Accessories


Flash Trigger: XPro, XProII, X2T, X3 and FT433 series.

Optical Accessories: Umbrella Softbox, Collapsible Lantern Softbox, Quick-loading Parabolic Softbox, Beauty Dish, Umbrella Diffuser, Snoot, Light Stand, etc.


Installing Bowens Mount Adapter or Other Mount Adapters

AD400ProII has a built-in Godox mount, you can switch to the attached Bowens mount adapter or other optional mount adapters as follows.


1. Push aside the mount fixing pusher, rotate anticlockwise the reflector or other accessory and take it down.

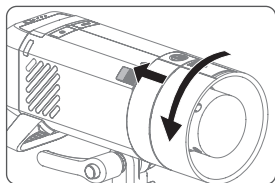


2. Rotate anticlockwise the two mount locking screws with a wrench to loosen them.

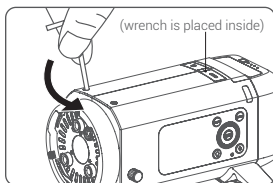

3. Aim the mount fixing pusher of Bowens mount adapter or other mount adapters with the mount fixing pusher on the flash body and insert in.

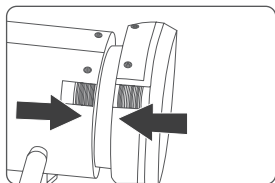


4. Tighten the 2 removed screws and the 2 attached screws, then fix the mount adapter.

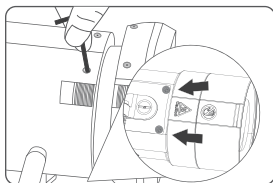


Installing Accessories with Other Mounts

After switching to Bowens mount adapter or other mount adapters, you can insert accessories with Bowens mount or other mounts then rotate clockwise to install.

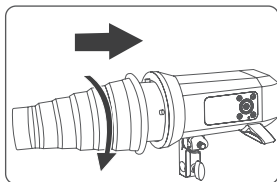

Installing the Attached Reflector with Other Mount Adapters


If you want to use the attached Godox mount reflector after installing other mount adapters, separate both sides of the reflector firmly and insert into the Godox mount of the flash body, then rotate clockwise to install.

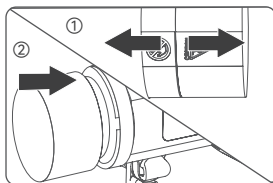


Note: Profoto mount is not applicable.

Installing and Disassembling Reflector

Aim the reflector mount with the Godox mount and insert in, rotate clockwise to lock up.

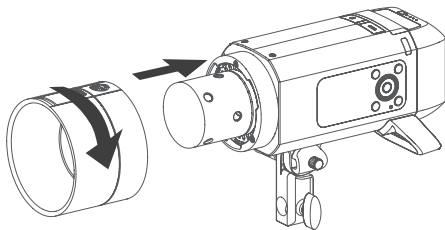


Push aside the mount fixing pusher, rotate the reflector anticlockwise to unlock.

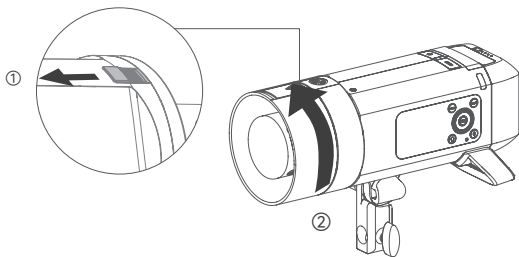


Installing and Disassembling Flash Tube

Make sure to power off the flash, then insert the flash tube into the tube socket until it is securely seated into the socket.

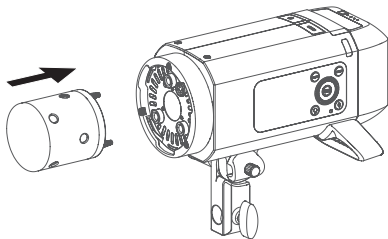


Make sure to power off the flash, then push aside the mount fixing pusher and remove the reflector or other accessories. Grasp the flash tube and pull it out horizontally.

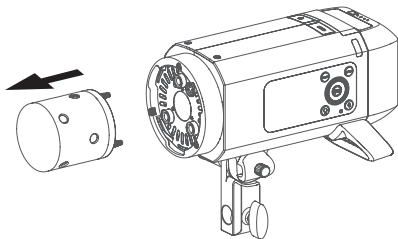


Loading and Unloading the Battery

Match the battery's groove with the battery compartment's slot. Push down the battery pack until it is locked.

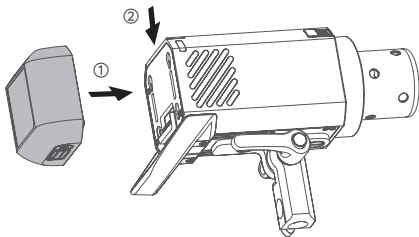


Push the battery compartment pusher and the battery pack upward at the same time to unload it.

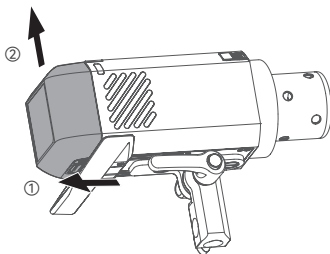


Adjusting Flash Angle

1. When the handle fixing fastener is not pulled out, rotate the handle anticlockwise to unlock it, adjust the flash body for the desired angle, then rotate the handle clockwise to tighten.

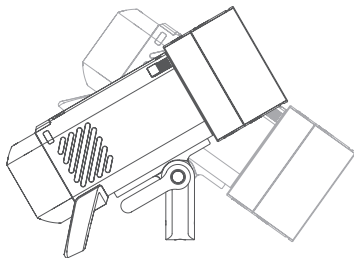


2. If the handle collides the flash body in rotation, please press the handle button and pull out the handle, repeat the step 1 after stretching out a few distance.

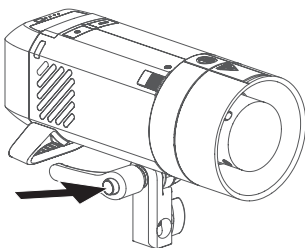

Disassembling Bracket


Insert a one-dollar coin or a matching Allen wrench into the bracket fixing screw, rotate counterclockwise to loosen it, then remove the bracket.

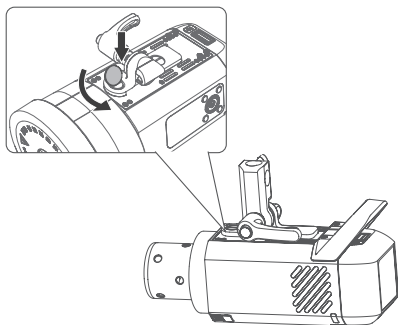


Disassembling Handle

Insert the attached wrench into the handle fixing screw, rotate counterclockwise to loosen it, then remove the handle.

Note: The wrench is placed beside the sync cord port.

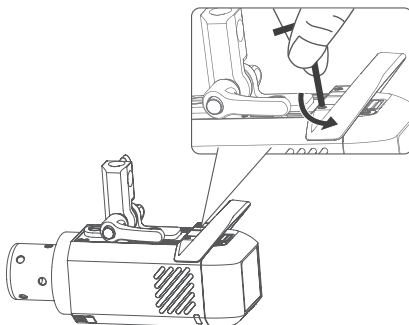

Power Switch

Power On: Long press the power switch button until the unlock icon <  > is displayed on the panel, then rotate the select dial clockwise to turn on the device.

Power Off: Long press the power switch button for until panel black out to turn off the device.

Note: Turn off the device if it will not be used for an extended period. This device is designed with an automatic power off function, which can be set in menu settings.

Battery Level Indication

Attach the battery pack to the flash correctly. Check the battery level by pressing the battery indicator button and lightening the battery level indicator as the following table shows.

LED Battery Level Indication on the Battery (Indicating battery level and management of non-loaded battery)	Meaning/Percentage of Battery Level
1 red grid +3 green grids	75% ~ 100%
1 red grid +2 green grids	50% ~ 75%
1 red grid +1 green grid	25% ~ 50%
1 red grid	3% ~ 25%
2% flash red, 1% off	< 2% The battery level is going to be used out immediately. And the flash will alarm for 1 minute and auto power off in 3 minutes. Note: Please recharge the battery as soon as possible (within 10 days). Then, the battery can be used or be placed for long period.

Note: The indications are almost the same except for the grids shift.

Battery Activation Instructions

Due to the battery upgrade, if you haven't used the battery for more than a month, it will automatically go to sleep. please try to activate it if you use or charge again after a month.

Activation method: Short press the right side of battery indicator button to activate.

TTL: Auto Flash

In TTL mode, the camera's metering system detects the flash reflected from the subject and automatically adjusts the flash output so that the subject and background are evenly exposed.

Press the MENU button to enter menu interface, turn the select dial and press the SET button to enter wireless and turn on it, set the group among A to E. The TTL auto flash will not be displayed when the group is set as 0-9 or F.

Press MODE button to enter TTL mode, the screen will display <TTL>.



M: Manual Flash

The flash output is adjustable from 1/1 full power to 1/512 power with 0.1 step increment. To obtain a correct flash exposure, use a hand-held flash meter to determine the required flash output.

Press MODE button so that <M> is displayed. Turn the select dial to choose a desired flash output amount.



Optical S1 Secondary Unit Setting

Press MENU button to enter photocell and choose S1 function, so that this flash can function as an optical S1 secondary flash with optical sensor in M manual flash mode. Then press then MENU button to return to the main interface. With this function, the flash will fire synchronously when the main flash fires, the same effect as that by the use of wireless triggers. This helps create multiple lighting effects.


Optical S2 Secondary Unit Setting

Press MENU button to enter photocell and choose S2 function, so that this flash can also function as an optical S2 secondary flash with optical sensor in M manual flash mode. Then press then MENU button to return to the main interface. This is useful when cameras have pre-flash function. With this function, the flash will ignore a single "pre-flash" from the main flash and will only fire in response to the second, actual flash from the main unit.

Note: S1 and S2 optical triggering is only available in M manual flash mode.

Display Flash Duration

Flash duration refers to the length of time that from flash's firing to reach the half peak at maximum. The half peak at maximum is usually expressed as $t=0.5$. In order to provide the photographer with more concrete data, this product adopts $t=0.1$. The difference between $t=0.5$ and $t=0.1$ is shown in the following picture.

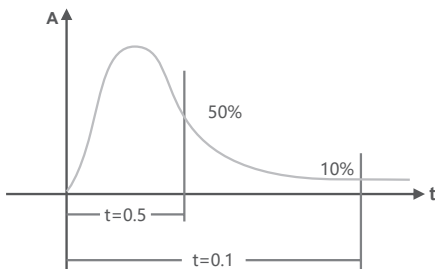

Note: The flash duration will be displayed in M mode with non-HSS.



Multi: Stroboscopic Flash

With stroboscopic flash, a rapid series of flashes is fired. It can be used to capture multiple images of a moving subject in a single photograph. You can set the flash output, number of flashes, and flash frequency (number of flashes per sec. expressed as Hz).

1. Press the MODE button so that **< Multi >** is displayed, turn the select dial to choose a desired flash output.
2. Press the SET button and turn the select dial to set the number of flashes.
3. Press the SET button and turn the select dial to set the flash frequency.



Calculating the Shutter Speed

During stroboscopic flash, the shutter remains open until the firing stops. Use the formula below to calculate the shutter speed and set it with the camera.

Number of Flashes / Flash Frequency = Shutter Speed

For example, if the number of flashes is 10 and the firing frequency is 5 Hz, the shutter speed should be at least 2 seconds.

Note:


1. Stroboscopic flash is most effective with a highly reflective subject against a dark background.
2. Using a tripod and a TTL flash trigger is recommended.
3. A flash output of 1/1 and 1/2 cannot be set for stroboscopic flash.
4. Stroboscopic flash can be used with "bulb".


Maximum Stroboscopic Flashes:

Flash Output \ Hz	1	2	3	4	5	6-7	8-9	10	11	12-14	15-19	20-50	60-100
1/4	7	6	5	4	3	3	3	2	2	2	2	2	2
1/8	14	14	12	10	8	6	5	4	4	4	4	4	4
1/16	30	30	30	20	20	20	10	8	8	8	8	8	8
1/32	60	60	60	50	50	40	30	20	20	20	18	16	12
1/64	90	90	90	80	80	70	60	50	40	40	35	30	20
1/128	100	100	100	100	100	90	80	70	70	60	50	40	40
1/256	100	100	100	100	100	90	80	70	70	60	50	40	40
1/512	100	100	100	100	100	90	80	70	70	60	50	40	40

High-Speed Sync

High speed sync (FP flash) enables the flash to synchronize with all camera shutter speeds. This is convenient when you want to use aperture priority for fill-flash portraits.

Press the MENU button to enter menu interface, turn the select dial and press the SET button to enter high speed sync and turn on it. Then press MENU button to return to the main interface, the HSS icon <  > can be seen on the panel.

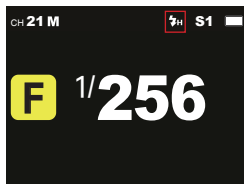

Wireless (2.4G) Transmission

AD400ProII adopts 2.4G wireless X system, which has good compatibility with other Godox products. It can automatically switch to receiver unit according to the transmitter unit instead of setting manually. The compatible cameras include Canon, Nikon, Sony, Olympus, Panasonic, Fujifilm, Pentax, Leica, etc.

As a receiver unit, AD400ProII can be controlled by the following transmitter units: XPROII series, X3 series, X2T series, V1Pro series, V1 series, V860III series and V100 series.


Wireless Settings

Enter wireless: Press the MENU button → select wireless → press the SET button to enter.

Choose functions: Turn the select dial to choose among wireless/channel/group/ID/wireless sync → press the SET button to enter.

Set parameters: Turn the select dial to adjust, press the SET button to return to the previous interface.

Back: Press the MODE button to return to the main interface.

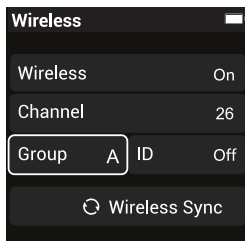

Wireless	On/Off
Channel	1-32
Group	0-9, A-F
ID	Off, 1-99
Wireless Sync	Press the SET button

When using a transmitter without wireless sync function, the channel, group and ID need to be set manually.

When using a transmitter with wireless sync function, the channel, group and ID can be set quickly by wireless sync.


Take X3 flash trigger as an example:

1. Turn off the camera and mount the flash trigger on camera hot shoe. Then, power on the flash trigger and the camera.
2. Slide the screen of X3 down from the top to display <Setting>, press <Setting> to enter C.Fn. menu, then press <Wireless> and select <Wireless Sync>.
3. Press the MENU button of AD400ProII to select wireless and turn it on, then turn the select dial to select <Wireless Sync>.
4. Their CHs and IDs will automatically be set to the same.
5. Set the flash mode and output power level of groups on the flash trigger.
6. Press the trigger button on flash trigger or camera shutter to trigger.

Wireless Flash Shooting

Positioning and Operation Range (Example of wireless flash shooting)

- Auto flash shooting with one receiver unit

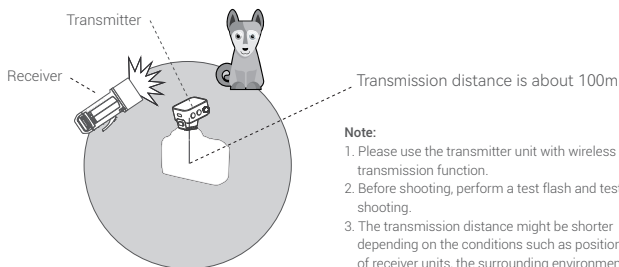


Note:

1. Please use the transmitter unit with wireless transmission function.
2. Before shooting, perform a test flash and test shooting.
3. The transmission distance might be shorter depending on the conditions such as positioning of receiver units, the surrounding environment and weather conditions.
4. The receiver unit can be turned off on the transmitter unit.


Wireless Multiple Flash Shooting

You can divide the receiver units into two or three groups and perform TTL auto flash while changing the flash ratio (factor). In addition, you can set and shoot with a different flash mode for each firing group.

- Flash shooting with two receiver units

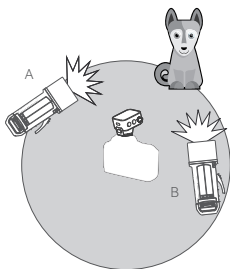

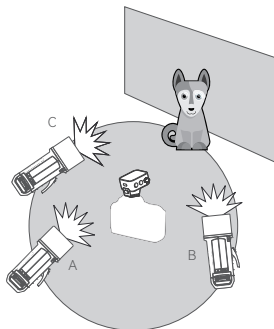

- Flash shooting with three receiver units




Flash Mode

Press the MENU button to enter menu interface, turn the select dial and press the SET button to enter flash mode, in which you can choose among normal, color and freeze.

Normal	Normal flash mode, with no indication on the main interface.
Color	Stable color temperature mode, with <  > on the main interface. The group indicator will blink and the beeper will beep for 1min if it has been turned on, please press the test button to resume to normal use. The stable color temperature function is only available in non-HSS M mode, and value of which will shift around $\pm 75\text{K}$ over the entire power range.
Freeze	Freeze mode, with <  > on the main interface. The flash duration is shorter than the normal flash mode, and the power is also less than the normal flash mode. The freeze mode is only available in M mode and Multi mode.





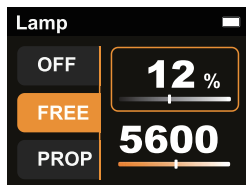







Modeling Lamp




Press the modeling lamp button to enter modeling lamp settings, turn the select dial to choose among off/free/prop, then turn the select dial and press the SET button to adjust the parameters. Press the modeling lamp button to return to the main interface.



Level 1 Options	Level 2 Options	Notes
OFF	/	Turn off the modeling lamp
FREE	10%-100% (with 1% increment)	Brightness range
	2800K-6000K (with 100K increment)	CCT range
PROP	2800K-6000K (with 100K increment)	CCT range, and brightness follows flash power.

MENU Settings

Icons	Functions	Options	Notes
	Wireless	Off	Turn off wireless function
		On	Turn on wireless function
	Flash Mode	Normal	Normal flash mode
		Color	Available in non-HSS M mode
		Freeze	Available in M mode and Multi mode
	Photocell	Off	Turn off photocell
		S1	Turn on photocell in M mode
		S2	Turn on photocell in M mode
	HSS	Off	Turn off high speed sync
		On	Turn on high speed sync in M mode and TTL mode
	Model	Inter	Modeling lamp off in triggering
		Cont	Modeling lamp constant on
	Beep	Off	Beep is off
		On	Beep is on
	Type	1/512	Flash step displays as 1/512 -1/1
		1.0	Flash step displays as 1.0 -10.0 in non-HSS mode
	Standby	30sec	Screen blacks out in 30sec of idle use
		1min	Screen blacks out in 1min of idle use
		2min	Screen blacks out in 2min of idle use
		3min	Screen blacks out in 3min of idle use
	Auto Off	Off	Turn off auto off function
		30min	Auto off in 30min
		60min	Auto off in 60min
		90min	Auto off in 90min
		120min	Auto off in 120min
	Brightness	20%-100%	Turn the select dial to adjust
	Delay	Off	Turn off delay flash
		0.01s-30.0s	Turn the select dial to adjust delay flash
	Mask	Mask (2-4)	Masks and alt must be used in combination, the mask represents the total number of flashes, and the alt represents the nth flash, for example: choose 3 for mask, choose 1 for alt, then the flash only flash the 1st out of 3 flashes
		Alt (1-4)	

	Language	Chinese	Simplified Chinese operating system
		English	English operating system
	Reset	Yes	Factory reset
		No	Cancel factory reset
	Device Info	/	Display the current model and version

Sync Triggering

The sync cord jack is a $\Phi 3.5\text{mm}$ plug. Insert a trigger plug in and the flash will be fired synchronously with the camera shutter.

Protection Functions

1. Over-Temperature Protection

To avoid overheating and deteriorating the flash head, do not fire more than 80 continuous flashes in fast succession at 1/1 full power, or fire more than 64 continuous flashes in fast succession at 1/1 full power in HSS mode.

If you fire more than the mentioned continuous flashes and then fire more flashes in short intervals, the inner over-temperature protection function may be activated and make the recycling time over 10 seconds. If this occurs, allow a rest time of about 10 minutes, and the flash unit will then return to normal.

When the over-temperature protection is started, <  > is shown on the screen.

Number of flashes that will activate over-temperature protection:

Power Output Level	Number of Flashes
1/1	80
1/2 (+0.7~+0.9)	105
1/2 (+0.3~+0.6)	128
1/2 (+0.0~+0.2)	160
1/4 (+0.0~+0.9)	245
1/8 (+0.0~+0.9)	490
1/16(+0.0 ~ +0.9)	800
1/32(+0.0 ~ +0.9)	1050
1/64(+0.0 ~ +0.9)	1050
1/128(+0.0 ~ +0.9)	2100
1/256(+0.0 ~ +0.9)	
1/512(+0.0 ~ +0.9)	

Number of flashes that will activate over-temperature protection in high-speed sync triggering mode:

Power Output Level	Number of Flashes
1/1	64
1/2(+0.0 ~ +0.9)	70
1/4(+0.0 ~ +0.9)	90
1/8(+0.0 ~ +0.9)	115
1/16(+0.0 ~ +0.9)	140
1/32(+0.0 ~ +0.9)	180
1/64(+0.0 ~ +0.9)	210
1/128(+0.0 ~ +0.9)	235
1/256(+0.0 ~ +0.9)	255

2. Other Protections

The system provides real-time protection to secure the device and your safety. The following lists prompts for your reference:

Display	Meaning
Error1	A failure occurs on the recycling system so that the flash cannot fire. Please restart the flash unit. If the problem still exists, please send this product to a maintenance center.
Error3	The voltage on two outlets of the flash tube is too high. Please send this product to a maintenance center.
Error9	There are some errors occurred during the upgrading process. Please using the correct firmware upgrade method.

The Reason & Solution of Not Triggering in Godox 2.4G Wireless

1. Disturbed by the 2.4G signal in outer environment (e.g. wireless base station, 2.4G wifi router, Bluetooth, etc.)

→ To adjust the channel CH setting on the flash trigger (add 10+ channels) and use the channel which is not disturbed. Or turn off the other 2.4G equipment in working.

2. Please make sure that whether the flash has finished its recycle or caught up with the continuous shooting speed or not (the flash ready indicator is lightened) and the flash is not under the state of over-heat protection or other abnormal situation.

→ Please downgrade the flash power output. If the flash is in TTL mode, please try to change it to M mode.

3. Whether the distance between the flash trigger and the flash is too close or not (< 0.5m).

→ Please turn on "short distance wireless mode" of the flash trigger.

→ X1 Series: Press and hold the triggering button then turn on the device, until the indicator blinks twice.

→ XPro and X2T Series: Please set the C.Fn-DIST to 0-30m.

→ X3 Series: Please set the triggering distance to 0-30m.

4. Whether the flash is in the low battery states or not.

→ Please charge or replace the battery in time.

5. The flash trigger's firmware is an older version

→ Please upgrade the firmware of the flash trigger referring to the instruction manual for specific firmware upgrades.

6. The camera's firmware is an older version

→ Please upgrade the firmware of the camera referring to its instruction manual.

Technical Data

Model	AD400ProlI
Wireless Receiver Unit Mode	Wireless Mode (compatible with Canon E-TTL II, Nikon i-TTL, Sony, Olympus, Panasonic, Fujifilm, Leica, Pentax)
Flash Mode	Wireless off: M/Multi
	Wireless on: TTL/M/Multi
Power (1/1 step)	400Ws
Guide No. (1/1 step)	GN 72 (ISO 100, in meters and with efficient reflector)
Flash Duration (t=0.1)	Normal:1/230s ~ 1/16120s
	Color: 1/230s ~ 1/11900s
	Freeze: 1/3470s ~ 1/27770s
Power Output	10 steps: 1/512 ~ 1/1 (with ± 0.1 increment)
Stroboscopic Flash	Provided (up to 100 times, 100Hz)
Sync Mode	High-speed sync (up to 1/8000 seconds), first-curtain sync, and second-curtain sync
Delay Flash	0.01 ~ 30s
Mask	✓
Fan	✓
Beep	✓
Flash Duration Indication	✓
Photocell	S1/S2/OFF
Display	Color screen
Modeling Lamp	
Max. Input Power	30W
Brightness Range	10%-100%
CRI	≈97
TLCI	≈98
CCT	2800K-6000K
Wireless Flash (2.4G transmission)	
Wireless Function	Receiver, Off
Controllable Receiver Groups	16: 0-9, A-F
Transmission Range	Approx. 100m
Channels	32: 1-32
ID	01-99/OFF

Power Supply	
Power Supply	Lithium battery (21.6V, 2600mAh)
Time of Flashes (1/1 step)	Approx. 460
Recycle Time	0.01-1s
Battery Level Indicator	√
Power Saving	Auto off function is available in menu settings (30min to 120min of idle use)
Sync Triggering Mode	3.5mm sync cord
Flash Tube Color Temperature	5800K±200K
Dimension (with battery, without flash tube and reflector)	8.31*×5.08*×3.54"
Net Weight (with battery, without flash tube and reflector)	Approx. 2kg

Specifications and data may subject to changes without notice.

Firmware Upgrade

- This flash supports firmware upgrade through the USB-C port. Update information will be released on our official website.
- Please use an USB-C cable (sold separately) for firmware upgrade.
- As the firmware upgrade needs the support of Godox G3 V1.1 software, please download and install the "Godox G3 V1.1 firmware upgrade software" from Godox official website (<https://www.godox.com/firmware-G3/>) before upgrading. Then, choose the related firmware file.
- Please refer to the latest electronic version of the instruction manual.

Warning

Operating frequency: 2412.99MHz - 2464.49MHz (only receive)

Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states. For more information of DoC, Please click this web link: <https://www.godox.com/eu-declaration-of-conformity/>

The device complies with RF specifications when the device used at 0mm from your body.

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IC Warning

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

Applicable Products

Applicable ProductsThe document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items,giveaways and additional accessories attached,etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories isimplemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day(purchase date) when the product is bought for the first time,And the purchase date is considered as the date registered onthe warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases:

① The product or accessory has expired its warranty period; ② Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; ③ Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; ④ The original identifying information of product or accessory is modified, alternated, or removed; ⑤ No valid warranty card; ⑥ Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; ⑦ Breakage or damage caused by force majeure or accident; ⑧ Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Type	Name	Maintenance Period(month)	Warranty Service Type
Parts	Circuit board	12	Customer sends the product to designated site
	Battery	3	Customer sends the product to designated site
	Electrical parts e.g.battery charger, etc.	12	Customer sends the product to designated site
Other Items	Flash tube, modeling lamp, lamp body, lamp cover, locking device, package, etc.	No	Without warranty

Godox After-sale Service Call +86-755-29609320(8062)